


---

---

# ***330 Outrage***

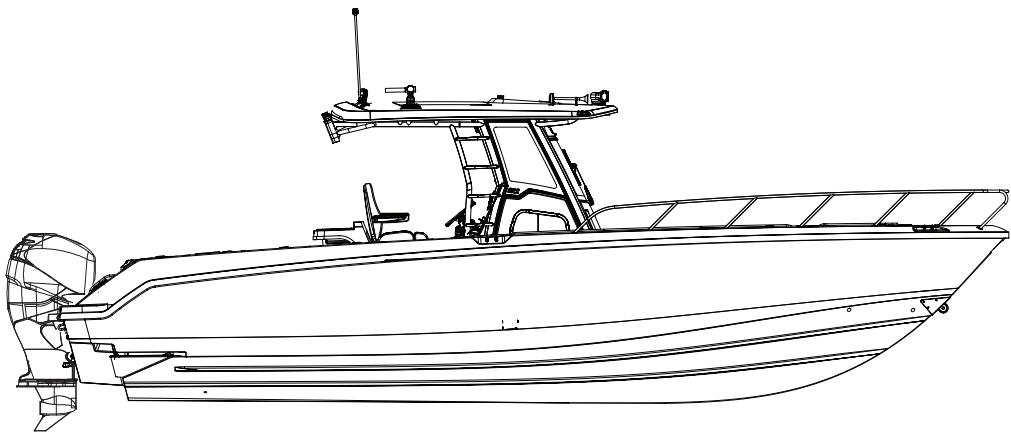

**“The mission of Boston Whaler® is to provide consumers with the safest, highest quality, most durable boats in the world”**



## **WARNING**

Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to [www.P65warnings.ca.gov/marine](http://www.P65warnings.ca.gov/marine).

T H E   U N S I N K A B L E   L E G E N D™



Welcome to the Boston Whaler family! Congratulations on your purchase of a Boston Whaler boat.


For over 50 years now, Boston Whaler has been represented by a select group of the best dealers in the boating industry. Boston Whaler depends on this extremely qualified network of dealers to provide you, our customer, with a truly exceptional boating experience.

Should you have any questions or concerns regarding your boat, please don't hesitate to contact your selling dealer. They will be more than happy to provide you with all the information and assistance that you require.

Information and assistance is also available at our corporate website, [www.bostonwhaler.com](http://www.bostonwhaler.com). On our website you will find information on our entire lineup of Unsinkable Legends, as well as a collection of customer resources including parts diagrams, maintenance tips and frequently asked questions. In addition, you can sign up to receive future issues of Boston Whaler's lifestyle magazine, *Whaler*.

Since Boston Whaler's inception in 1958, we have been committed to providing customers with the safest, highest quality, most durable boats in the world. I am confident that you, as a Whaler owner, will also appreciate the quality and pride that is built into every Boston Whaler boat.

From all of us here at Whaler, thank you for purchasing one of our boats. May it bring you many years of boating enjoyment.

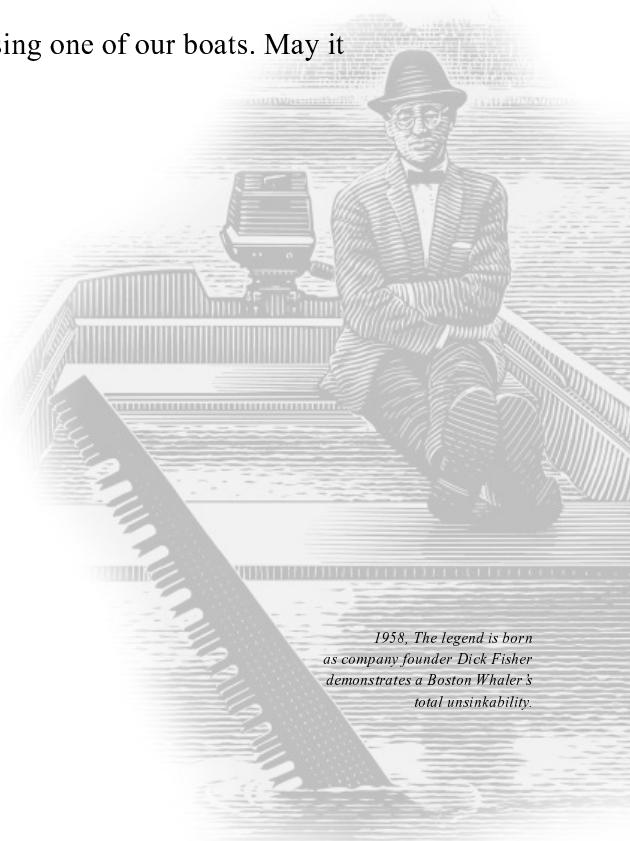

*1958. The legend is born  
as company founder Dick Fisher  
demonstrates a Boston Whaler's  
total unsinkability.*

## HISTORY


---

In 1958, company founder Richard T. Fisher introduced the first Boston Whaler® boat in Braintree, Massachusetts. It featured two significant innovations: first, its twin sponson hull design produced superior stability and a remarkably dry ride; second, its unique foam core construction made the boat not only durable, but unsinkable as well.

Fisher took every opportunity to illustrate the unique characteristics of the Boston Whaler®. His most famous demonstration was captured in 1961, by *Life Magazine*. The series of photographs showed the boat underway, the boat being sawed in half and ultimately Fisher motoring away in the remaining half of the boat. And through the years many other demonstrations have proved the toughness and durability of the Boston Whaler hull. And though you may never cut your boat in half, this only goes to show one thing, people whose livelihood and lives depend on boats consistently choose Boston Whaler® because of their seaworthiness, dependability and the inherent safety of a hull that won't sink even if severely damaged.

Boston Whalers are built to last. For over 50 years Boston Whaler® has strived to make each model better, providing you with a safe and fun boating experience. That is the reason we offer a 10 year limited transferable warranty. It is also an excellent reason why you can trust the safety of your family and friends to a Boston Whaler®.

On September 26, 1996, Richard T. Fisher was posthumously inducted into the NMMA (National Marine Manufacturer's Association) Hall of Fame for accomplishments made in marine engineering and construction.

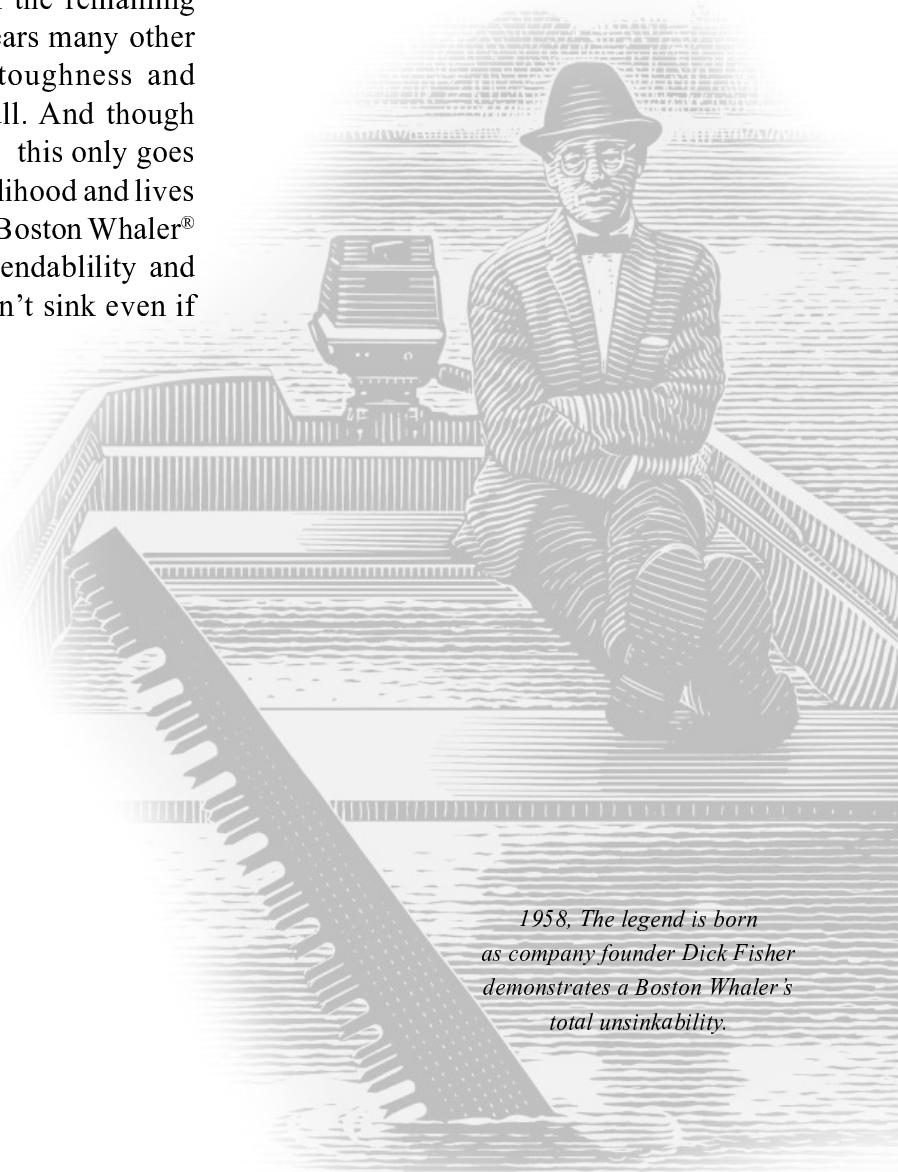

*1958, The legend is born  
as company founder Dick Fisher  
demonstrates a Boston Whaler's  
total unsinkability.*

**PLEASE KEEP THIS OWNER'S MANUAL PACKET IN A SECURE PLACE, AND BE SURE  
TO HAND IT OVER TO THE NEW OWNER IF YOU SELL THE BOAT.**

## TABLE of CONTENTS

---

Welcome Letter .....	iii	Returning to the victim.....	1-9
History .....	iv	Making contact.....	1-9
Preface.....	viii	Getting back aboard.....	1-9
Boston Whaler Limited Manufacturers Warranty (US and Canada).....	ix	Unassisted Reboarding.....	1-9
Boston Whaler Limited Manufacturers Warranty (Non US or Canada) .....	xii	Fire .....	1-9
California Evaporative Emissions Control System Warranty Statement.....	xv	To lessen the danger of fire.....	1-10
Privacy Statement .....	xvi	Flooding, Swamping and Capsizing .....	1-10
Introduction.....	xvii	Flooding .....	1-10
Owner's manual .....	xvii	Swamping.....	1-10
Your responsibilites.....	xvii	Capsizing .....	1-10
Source of Information.....	xvii	Collision.....	1-11
Warranties .....	xvii	Propulsion, Control or Steering Failure ....	1-11
Contact Phone Numbers and Internet Addresses .....	xvii	Grounding .....	1-11
 <b>Section 1 • Safety</b>		Distress Signals.....	1-11
Explanation of Safety Labels .....	1-1	Visual distress signals (VDS).....	1-11
Warning Labels .....	1-1	Audible distress signals .....	1-12
Safety Precautions.....	1-1	Radio Communication.....	1-12
Safe Boating means.....	1-2	Weather .....	1-12
In Addition .....	1-2	Swimming, Diving & Water Skiing .....	1-13
Safe Boating Checklist .....	1-2	Swimming .....	1-13
Before departure .....	1-2	Diving.....	1-13
Trailering (if applicable).....	1-2	Water Skiing .....	1-14
After Return .....	1-2	Water Skiing Signals .....	1-14
General Considerations .....	1-3	Ignition Shutdown Safety Switch .....	1-16
Maintain Control.....	1-3	Float Plan .....	1-16
Boarding.....	1-3	Chart Your Course .....	1-16
Impaired Operation .....	1-3	Environmental Considerations .....	1-17
Legally Mandated Equipment (Minimum Required) .....	1-5	Fuel & Oil Spillage .....	1-17
Personal Flotation devices (PFD's).....	1-5	Excessive Noise .....	1-17
Fire Extinguisher (Portable) .....	1-5	Wake/Wash.....	1-17
Whistle, Horn .....	1-5	Homeland Security Restrictions .....	1-18
Visual Distress Signal .....	1-5	America's Waterway Watch .....	1-18
Additional recommended Equipment for Safe Operation .....	1-5	Warning Label Locations .....	1-18
Carbon Monoxide (CO) .....	1-6	Key To Symbols Used on Controls & Prints .....	1-23
Lifesaving Equipment.....	1-7	 <b>Section 2 • General Information</b>	
PFD Requirement .....	1-7	Construction Standard .....	2-1
PFD Classification .....	1-7	Our Hull.....	2-1
Emergency Situations .....	1-9	Hull Identification Number.....	2-1
Medical Emergency .....	1-9	Servicing Your Boston Whaler.....	2-1
Water Rescue.....	1-9	Manufacturer's Certification.....	2-1
		Certification design Category .....	2-3
		Power Capacity.....	2-3
		Specifications & Dimensions .....	2-4
		Passenger Areas.....	2-5
		Recommended Passenger Locations .....	2-6

Location Of Thru-Hull Fittings.....	2-7	Power Steering.....	3-2
General Layout, Deck .....	2-8	Filling & Maintenance.....	3-2
General Layout, Control Station .....	2-9	Fuel System.....	3-2
General Layout, bilge.....	2-10	Fuel tank .....	3-3
General Layout, Leaning Post .....	2-11	Fuel Vent .....	3-3
General Layout, Leaning Post w/cooler (Option) .....	2-12	Fuel Distribution System .....	3-4
General Layout, Summer Kitchen (Option) .....	2-13	Filling the Tank.....	3-4
General Layout, Console Interior .....	2-14	Maintenance .....	3-4
General Layout, Hardtop.....	2-15	Static Electricity and the Fuel System.....	3-4
General Layout, Anchor Locker .....	2-15	Ethanol-Blended Fuel.....	3-5
General Layout, Port Gunwale/Transom...	2-16	Filling The Tank.....	3-5
General Layout, Starboard Gunwale.....	2-16	Phase Separation.....	3-6
Control Station Switch Panel.....	2-17	Additives.....	3-6
Storage .....	2-18	Fuel Filters.....	3-6
Seating.....	2-19	Fuel/Water Separator.....	3-6
Joystick Piloting (Option) .....	2-20	Maintenance .....	3-6
System Features.....	2-20	Storage.....	3-6
Gear Shift & Throttle Control.....	2-21	Starting/Stopping the Engines .....	3-7
Digital Throttle/Shift (DTS®).....	2-21	Prior to Starting.....	3-7
Power trim Operations .....	2-21	Starting The Engines.....	3-7
Smartcraft™ VesselView.....	2-22	Warming Up The Engiens.....	3-7
System Calibration (For First Time Use).....	2-22	Stopping the Engines.....	3-8
Smartcraft™ VesselView MOBILE .....	2-22	Fresh Water System .....	3-9
Navigation Lighting.....	2-23	Filling the tank .....	3-9
Operating The navigation Lighting .....	2-23	Freshwater Pump .....	3-10
12V/30AMP Receptacles (Option) .....	2-24	Transom Shower.....	3-10
Canvas (Option) .....	2-24	Forward Console (Head) Faucet .....	3-10
Docking, Lifting and Trailering .....	2-27	Maintenance .....	3-11
Docking .....	2-27	Winterizing The System .....	3-11
Lifting .....	2-27	Raw Water System .....	3-11
Trailering .....	2-28	Operation.....	3-11
Trailer safety .....	2-28	Transom Livewell .....	3-12
Securing the Boat to the Trailer .....	2-28	"Full-Fill" Livewell Operation .....	3-12
Securing the Trailer to the Tow Vehicle .....	2-28	Leaning Post Livewell (Option) .....	3-13
Trailer Hitch.....	2-28	Head System .....	3-14
Trailering the Engines .....	2-29	Environmental Considerations.....	3-14
Trailer Description .....	2-29	Macerator/Overboard Discharge .....	3-15
<b>Section 3 • Systems &amp; Components Overview &amp; Operation</b>		Macerator Operation .....	3-15
Bilge Pumps.....	3-1	Maintenance .....	3-15
Maintenance .....	3-1	Dockside Discharge .....	3-15
Fuel & Oil Spillage .....	3-2	Forward Fishbox w/ Pump out .....	3-16
		Seakeeper Gyroscopic Stabilizer .....	3-17
		Radial Outriggers (Option) .....	3-18
		Entertainment System .....	3-18
		Lighting .....	3-18
		Cockpit Lighting.....	3-18
		Hardtop Lighting .....	3-18
		Map Light.....	3-18
		Flood Lights .....	3-19

---

Underwater Lights (Option) .....	3-19
Retractable Swim Ladder .....	3-19
Dive Door .....	3-20
Dive Ladder .....	3-20
Spotlight (Option) .....	3-21
To Operate.....	3-21
Summer Kitchen (Option) .....	3-21
Electric Grill (Option) .....	3-21
dedicated Batteries with Inverter .....	3-21
Maintenance .....	3-21
Automatic Shut-Off .....	3-22
Refrigerator/Freezer (Option) .....	3-22
Bow Table (Option) .....	3-23
Dynamic Running Surface™(Trim Tabs)...	3-23
Operation.....	3-23
Maintenance .....	3-23
Active Trim (Option) .....	2-24
Shore Power .....	3-24
Shore Power Hookup .....	3-24
ELCI (Equipment Leakage Circuit Interrupter).....	3-25
Galvanic Isolator .....	3-25
Maintenance.....	3-25
Anchor Windlass .....	3-26
Operation.....	3-26
Operating the Windlass with Remote... <td>3-27</td>	3-27
Operating the Windlass Manually .....	3-27
Bow Thruster (Option).....	3-28
To Operate the Bow Thruster .....	3-28
Anchoring .....	3-29
Considerations When Anchoring..... <td>3-30</td>	3-30
Lowering the Anchor.....	3-30
Setting the Anchor.....	3-31
Weighing the Anchor .....	3-31
Propeller.....	3-31
Bow Tow Eye (Optional) .....	3-32
If it Becomes Necessary to Tow Your Boat .....	3-32

## Section 4 • Electrical

Electrical System .....	4-1
Batteries.....	4-1
Battery Trays.....	4-1
Battery Charger.....	4-2
Overload Protection .....	4-2

Maintenance.....	4-2
Summer Kitchen Batteries (Option) .....	4-3
Bow Thruster Battery (Option).....	4-3
Battery Selector Switches.....	4-3
Fuse Blocks.....	4-4
12 Volt Accessory receptacle .....	4-5
Automatic Charging Relays (ACR).....	4-5
DC Breaker Panel .....	4-5
Main DC Breaker Panel.....	4-6
AC Breaker Panel (120V).....	4-8
AC breaker Panel (220V) (Option).....	4-9
AC Breaker Panel (120V) (Gyro Option)... <td>4-10</td>	4-10
AC breaker Panel (220V) (Gyro Option)...	4-11
NAUTIC-ON™ Remote Connectivity (Option).....	4-12
Transducer Location .....	4-12
Rigging.....	4-12
Electrical Schematics & Harnesses .....	4-13
Wiring Identification Chart .....	4-13

## Section 5 • Care & Maintenance

Routine Care & Maintenance .....	5-1
Hull .....	5-1
Waxing the Gel Coat Surfaces .....	5-1
Hull Maintenance.....	5-2
Hull Blistering .....	5-2
Prevention .....	5-1
Bottom Painting .....	5-2
Zinc Anodes .....	5-2
Bottom Painting a Bare Hull.....	5-3
Bottom Painting a Pre-Painted Hull.....	5-3
Rubrail care .....	5-4
Cleaning Fiberglass & Non-Skid .....	5-4
Stainless Steel Care .....	5-4
Seats (Mechanical Parts).....	5-5
Aluminum Care .....	5-5
Cushions.....	5-5
To Clean Your Cushions.....	5-5
Cleaning Your Instrument Gauges .....	5-6
Canvas Care and Maintenance.....	5-6
Maintaining a Good Appearance.....	5-6
On a Regular Basis.....	5-6
Cleaning stubborn Stains.....	5-7
Maintaining Zippers and Hardware.....	5-7
Corian Solid Surface Countertops.....	5-7

Routine Care .....	5-7	Battery .....	5-9
Minor Cuts and Scratches.....	5-7	Deck.....	5-10
Heat Damage .....	5-7	Drainage.....	5-10
Other Danmage.....	5-7	Avoid Loss .....	5-10
Refurbishing.....	5-7	Cover.....	5-10
Cleaning Tempered Glass Windshield .....	5-8	Trailer Storage .....	5-10
Misting system.....	5-8	Environment .....	5-10
Replacing the Filter.....	5-8	Reinforcement Location .....	5-11
Flushing the System .....	5-8	Reinforcement Location Diagram .....	5-11
Winterizing the System .....	5-8	Maintenance Log .....	5-12
Long term Storage & Winterization .....	5-8		
Engine .....	5-8		
Fuel System .....	5-9		
Electrical System .....	5-9		

## Attachments

Commissioning Checklist

## PREFACE

This Owner's Manual has been written to provide specific information about your boat and it should be read carefully. Keep this booklet with the Manuals in the Owner's Manual Packet. The Owner's Manual Packet has been compiled to help you operate your boat with safety and pleasure. It contains details of the boat, the equipment supplied or fitted, it's systems and information on it's operation and maintenance. Please familiarize yourself with the boat and it's operation before using it. If this is your first boat, or you are changing to a type of boat you are not familiar with, for your own comfort and safety, please ensure that you obtain handling and operating experience before "assuming command" of your boat. Your Boston Whaler® dealer or local Yacht Club will be pleased to advise you of marine safety classes and safe boating classes in your area.

INFORMATION IN THIS PUBLICATION IS BASED ON THE LATEST PRODUCT SPECIFICATIONS AVAILABLE AT PRINTING, BOSTON WHALER®BOATS, INC. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE, IN THE COLORS, EQUIPMENT, SPECIFICATIONS, MATERIALS AND PRICES OF ALL MODELS, OR TO DISCONTINUE MODELS. SHOULD CHANGES OR MODIFICATIONS TO THE MODELS BE MADE BOSTON WHALER® IS NOT OBLIGATED TO MAKE SIMILAR CHANGES OR MODIFICATIONS TO MODELS SOLD PRIOR TO THE DATE OF SUCH CHANGES.

**BOSTON WHALER • A BRUNSWICK COMPANY**

**MRP #2357975**

Printed in the U.S.A. © Boston Whaler, Inc. All rights reserved.

**330 OUTRAGE  
JUNE, 2020**

THE FOLLOWING ARE REGISTERED TRADEMARKS OF THE BRUNSWICK CORPORATION:

OUTRAGE , BOSTON WHALER®.



Specifications and standard equipment are subject to change. Boston Whaler is not responsible for changes to parts or accessories manufactured by companies other than Boston Whaler. Active Deck Suspension System, Boston Whaler, Whaler, the Boston Whaler logo, Conquest, Dauntless, Montauk, and Outrage are registered trademarks of Boston Whaler, Incorporated. Accutrack, Unibond, The Unsinkable Legend, Ventura, and Whaleboard are trademarks of Boston Whaler, Incorporated. Mercury is a registered trademark of Mercury Marine, and SmartCraft and Verado are trademarks of Mercury Marine. Trademarks of others are the property of their respective owners. All Mercury engine information provided by Mercury Marine. Information contained within this publication is believed to be correct at the time of printing.

## BOSTON WHALER LIMITED MANUFACTURER WARRANTY (US AND CANADA)

Boston Whaler, Inc. ("Boston Whaler") provides the following Limited Manufacturer Warranty to the original retail owner of its 2021 model year boats, if purchased from an authorized Boston Whaler Dealer and operated under normal, non-commercial use ("Boat"), subject to the remedies, exclusions, and limitations set out below.

1. **Ten-Year Structural Hull Limited Warranty:** Any Structural Hull Defect in material or workmanship which is reported within ten (10) years from the date of sale to the original retail owner will be repaired or replaced at Boston Whaler's sole discretion. The "Hull" shall mean the single fiberglass molded shell and integral structural components. A Structural Hull Defect shall mean a substantial defect in the Boat's Hull which causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.
2. **Three-Year Limited Warranty on Components Manufactured or Installed By Boston Whaler: (not applicable to 13 Super Sport or 16 Super Sport models):** Boston Whaler will repair or replace, at its sole discretion, any components manufactured or installed by Boston Whaler that are defective in factory materials and/or workmanship, which are reported within three (3) years from the date of sale to the original retail owner, and are not addressed in the specific warranties listed in paragraphs 1 or 4 or set out in the Exclusions paragraph below.
3. **One-Year Limited Warranty on Accessory Components for the 13 Super Sport and 16 Super Sport Models:** Boston Whaler provides the following Limited Warranty to the original retail owner of any factory-authorized accessory for the 2021 model year 13 Super Sport and 16 Super Sport, if purchased from an authorized Boston Whaler Dealer, authorized Boston Whaler website or any Boston Whaler affiliate and utilized under normal, non-commercial use ("Accessory"), subject to the remedies, exclusions, and limitations set out below. Boston Whaler will repair or replace, at its sole discretion, any Accessory that is defective in material or workmanship, which is reported within one (1) year from the date of sale to the original retail owner. Boston Whaler is not responsible for any defect and/or damage to the Accessory and/or the boat caused by improper installation, whether performed by the retail owner, dealer or any other third party.
4. **One-Year Limited Warranty on Upholstered Items, Canvas, Teak, and Powder Coating:** Boston Whaler will repair or replace, at its sole discretion, any upholstered items, canvas, teak, and powder coating manufactured or installed by Boston Whaler that are defective in factory materials and/or workmanship and are reported within one (1) year from the date of sale to the original retail owner.
5. **Limited Engine Warranty:** Retail owners will be entitled to the limited engine warranty as provided in the warranty manual from the engine manufacturer that was delivered to the retail owner with his or her Boston Whaler Boat.

### EXCLUSIONS

This Limited Manufacturer Warranty does not apply to any boat which has been salvaged or declared a total loss or constructive total loss for any reason not covered in this limited warranty. This Warranty also does not apply to the following items:

- 1) Expenses for hauling out, transportation to and from the dealer or the Boston Whaler factory for warranty service.
- 2) Equipment or accessories which are not installed by Boston Whaler or which carry their own individual warranties, including but not limited to engines, engine components, batteries, propellers, controls, steering mechanisms, and electronics.
- 3) Damage, deterioration, discoloration or mold of cushions or cosmetic surface finishes, including scratches, gouges, chips, chalking, blistering, cracking, crazing, fading or oxidation of gel coat, stress lines, plated or painted metal and stainless steel finishes, plastics or acrylic materials, or anti-fouling bottom paint.
- 4) Windshield breakage and leakage.
- 5) Any Boston Whaler Boat initially sold at retail by a party other than an authorized Boston Whaler dealer.
- 6) Damage resulting from abuse, misuse, improper rigging and installation by an owner or any other person or entity not being an authorized dealer, accidents, overloading or powering in excess of the recommended maximum horsepower.
- 7) Failure of the owner to use, maintain, or store the boat as specified in the Boston Whaler owner's manual; and any other failure to provide reasonable care and maintenance. Normal wear and tear maintenance items are excluded from warranty coverage including but not limited to filters, bulbs, batteries, bungees, wiper blades, anchor rope, trailer finishes, tires, brakes, bearings and lights.
- 8) Any Boston Whaler Boat which has been altered or modified from Boston Whaler factory specifications, including penetration of the hull by anyone other than Boston Whaler factory personnel or Boston Whaler authorized dealer service personnel following factory specified procedures.

- 9) Damages resulting from use of improper trailer, improperly placed supporting bunks or slings, incorrect bunks placement and improper boat lift or sling.
- 10) Any Boston Whaler Boat used for commercial purposes, which includes, but is not limited to, any for-profit or other revenue-generating uses.
- 11) Any representation or implication relating to speed, range, fuel consumption or estimated performance characteristics.
- 12) Any failure or defect caused by an act of nature resulting in damage, cost, or expense;
- 13) Any failure or defect arising from a previous repair made by a non-authorized service provider.
- 14) Any item exceeding the expressed coverage limits specified in any Boston Whaler Limited Manufacturer Warranty.
- 15) Failure of the owner to use, maintain, or store an Accessory in reasonable fashion; and any other failure to provide reasonable care and maintenance.
- 16) Any accessory which has been altered or modified from Boston Whaler factory specifications.
- 17) Any accessory not purchased from an authorized Boston Whaler Dealer, authorized Boston Whaler website, or authorized Boston Whaler affiliate. For a list of Boston Whaler's affiliates, please refer to [www.brunswick.com](http://www.brunswick.com).
- 18) Any accessory used for commercial purposes, which includes but is not limited to, any for-profit or other revenue generating uses.
- 19) Any defect or repair requiring redesign of the Boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of any other foreign jurisdiction.

#### **SOLE REMEDY**

THE REMEDY OF REPAIR OR REPLACEMENT OF PARTS OR MATERIALS THAT ARE FOUND TO BE DEFECTIVE IN FACTORY MATERIALS OR WORKMANSHIP COVERED BY THIS LIMITED MANUFACTURER WARRANTY SHALL CONSTITUTE THE OWNER'S SOLE AND EXCLUSIVE REMEDY AGAINST BOSTON WHALER FOR ANY CLAIMS WHATSOEVER OF ECONOMIC LOSS RESULTING FROM PRODUCT FAILURE. In keeping with environmental policies and practices, Boston Whaler reserves the right to utilize reconditioned, refurbished, repaired or remanufactured products or parts in the warranty repair or replacement process. Such products and parts will be comparable in function and performance to an original product or part and warranted for the remainder of the original warranty period. In no event shall any repair or replacement under this Limited Manufacturer Warranty exceed the fair market value of the product as of the date of the owner's claim. Acceptance of any product returned or any refund provided by Boston Whaler shall not be deemed an admission that the product is defective. Products that are replaced become the property of Boston Whaler.

#### **OTHER LIMITATIONS**

EXCEPT AS SET FORTH HEREIN, THERE ARE NO OTHER WARRANTIES EITHER EXPRESS OR IMPLIED PROVIDED BY BOSTON WHALER ON THIS BOAT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE EXPRESSLY EXCLUDED. BOSTON WHALER FURTHER DISCLAIMS ANY LIABILITY FOR ECONOMIC LOSS ARISING FROM CLAIMS OF PRODUCT FAILURE, NEGLIGENCE, DEFECTIVE DESIGN, MANUFACTURING DEFECT, FAILURE TO WARN AND/OR INSTRUCT, LACK OF SEAWORTHINESS, AND ANY OTHER THEORY OF LIABILITY NOT EXPRESSLY COVERED UNDER THE TERMS OF THIS LIMITED MANUFACTURER WARRANTY.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS DISCLAIMED. TO THE EXTENT THE IMPLIED WARRANTY CANNOT BE DISCLAIMED, IT IS LIMITED TO THE SHORTER OF ONE YEAR FROM THE DATE OF DELIVERY TO THE FIRST RETAIL OWNER OR THE DURATION OF THE RESPECTIVE EXPRESS LIMITED WARRANTIES STATED HEREIN. TO THE EXTENT ALLOWED BY LAW, NEITHER BOSTON WHALER, NOR THE SELLING DEALER, SHALL HAVE ANY RESPONSIBILITY FOR LOSS OF THE BOAT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT BE APPLICABLE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT BE APPLICABLE. THIS WARRANTY GIVES THE OWNER SPECIFIC LEGAL RIGHTS, AND THE OWNER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR COUNTRY TO COUNTRY.

#### **STATUTE OF LIMITATIONS**

Any action for rescission or revocation against Boston Whaler shall be barred unless it is commenced within one (1) year from the date of accrual of such cause of action. This provision does not grant any consumer a right of rescission or revocation against Boston Whaler, where such right does not otherwise exist under applicable law. Some states may not allow the applicable statute of limitations for rescission or revocation to be reduced, so this provision may not apply to each retail owner.

## **OWNER'S OBLIGATIONS**

To initiate a warranty claim, it is the responsibility of the owner to contact an authorized Boston Whaler dealer immediately after discovery of any defect, describe the nature of the problem, and provide a hull serial number, date of purchase, and name of selling dealer. The authorized dealer will notify Boston Whaler, who is solely responsible for determining and authorizing in writing the remedial action(s) to be performed at either an authorized Boston Whaler dealership chosen by Boston Whaler or at the Boston Whaler factory. The owner should notify Boston Whaler of any boat being repaired by an authorized Boston Whaler dealer which has been at the dealership for fifteen (15) days, or of any claimed defect which was not corrected after one repair attempt. The owner must provide Boston Whaler with a reasonable opportunity to repair, and reasonable access to the Boston Whaler Boat for warranty service and the owner shall pay for all related transportation charges and/or travel time. If the owner cannot deliver the product to such a dealer, written notice must be given to Boston Whaler. Boston Whaler will then arrange for the inspection and any covered repair and the owner shall pay for all related transportation charges and/or travel time. Our privacy policies are available at [www.bostonwhaler.com](http://www.bostonwhaler.com).

## **ASSIGNMENT OF COMPONENT WARRANTIES**

Except as expressly set out herein, all warranties provided by the manufacturers and distributors of components, equipment, and parts on the boat (collectively "Component Manufacturers") are hereby assigned to the owner to the extent permitted by the Component Manufacturers, as the owner's sole and exclusive remedy with respect to such items.

## **REGISTRATION & WARRANTY TRANSFER POLICY**

The limited warranty coverage is activated by the authorized selling dealer registering the sale of a new Boat with Boston Whaler. The Ten-Year, Three-Year, and One-Year limited warranties are transferable to a subsequent owner, except the one-year Accessory warranty which is not transferrable and this Limited Manufacturer Warranty will not transfer to any new owner of a boat which has been salvaged and resold, or resold after a declaration of a total loss or a constructive total loss, i.e., the cost of repair exceeds the value of the boat. The new owner must fill out and submit the online Boston Whaler warranty transfer form, accessible from [www.bostonwhaler.com](http://www.bostonwhaler.com). A copy of the bill of sale will be required to submit with the form. The warranty transfer must be completed within 30 days of purchase.

## **MODIFICATIONS & SEVERABILITY**

The terms and conditions contained herein, as well as those of any documents prepared in conjunction with the sale of this vessel may not be modified, altered or waived by any action, inaction, or representations, whether oral or in writing, except upon the expressed, written authority of a management level employee of Boston Whaler. The invalidity or unenforceability of any one or more of the provisions herein shall not affect the validity and enforceability of the other provisions.

## **GOVERNING LAW AND VENUE**

This Warranty shall be interpreted and construed according to and governed by the laws of the State of Tennessee, without regard to conflict of law principles. Venue for any and all disputes arising out of or related to this Warranty, including without limitation the interpretation, performance or breach of this Warranty, shall be solely and exclusively before the United States District Court for the Eastern District of the State of Tennessee. The parties consent to the in personam jurisdiction of said court for the purposes of any such litigation and waive, fully and completely, any right to dismiss and/or transfer any action pursuant to 28 U.S.C. Section 1404 or 1406 (or any successor statutes) or the doctrine of forum non conveniens. If the United States District Court does not have subject matter jurisdiction of said matter, then such matter shall be litigated solely and exclusively before the appropriate state court of competent jurisdiction located in Knox County, Tennessee, and the parties consent to the personal jurisdiction of such court for the purpose of such litigation.

## **SAFETY**

It is your responsibility (as well as the responsibility of any other operator of this boat) to be familiar with and observe all local, state and federal laws, rules and regulations regarding boating, navigation and boating safety. You and any other operator of this boat should take a course in boating and boating safety before operation of this boat and should be completely familiar with all systems regarding safe operation of this boat. Personal flotation devices should be worn by each passenger in accordance with U.S. Coast Guard standards and state and federal law.

**World Headquarters, 100 Whaler Way, Edgewater, FL 32141**

**Phone (386) 428-0057**

**Internet Address: [www.bostonwhaler.com](http://www.bostonwhaler.com)**

## BOSTON WHALER LIMITED MANUFACTURER WARRANTY

### *Outside the U.S. or Canada*

Boston Whaler, Inc. ("Boston Whaler") provides the following Limited Manufacturer Warranty to the original retail owner of its 2021 model year boats, that if purchased from an authorized Boston Whaler dealer and operated under normal, non-commercial use, the authorized dealer will repair or replace, at its sole discretion, any defect in material or workmanship in the Boston Whaler Boat that is reported within the applicable Limited Manufacturer Warranty periods and within the scope as set out below.

Mandatory warranty rights, including a consumer's mandatory statutory rights, by law are not affected by this Limited Manufacturer Warranty and in particular not limited or excluded. These mandatory legal rights exist regardless of whether a warranty claim occurs or rights are asserted under this Limited Manufacturer Warranty.

### SCOPE

This Limited Manufacturer Warranty applies only to Boston Whaler Boats purchased outside of the US and Canada, including the territory of the European Union and Australia, and to recreational use customers only (not commercial users). Commercial use, which voids the Limited Manufacturer Warranty, is defined as any use of the product which generates income, even if the product is only occasionally used for such purposes.

Routine maintenance outlined in the Operation and Maintenance Manual must be timely performed in order to maintain Limited Manufacturer coverage.

#### **This Limited Manufacturer Warranty applies to the following items:**

1. **Ten-Year Structural Hull Limited Warranty:** Any Structural Hull Defect in material or workmanship which is reported within ten (10) years from the date of sale to the original retail owner will be repaired or replaced at Boston Whaler's sole discretion. The "Hull" shall mean the single fiberglass molded shell and integral structural components. A Structural Hull Defect shall mean a substantial defect in the Boat's Hull which causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions
2. **Three-Year Limited Warranty on Components Manufactured or Installed By Boston Whaler (not applicable to 13 Super Sport or 16 Super Sport models):** Boston Whaler will repair or replace, at its sole discretion, any components manufactured or installed by Boston Whaler that are defective in factory materials and/or workmanship, which are reported within three (3) years from the date of sale to the original retail owner, and are not addressed in the specific warranties listed in paragraphs 1 or 4 or set out in the Exclusions paragraph below.
3. **One-Year Limited Warranty on Accessory Components for the 13 Super Sport and 16 Super Sport Models:** Boston Whaler provides the following Limited Warranty to the original retail owner of any factory-authorized accessory for the 2021 model year 13 Super Sport and 16 Super Sport, if purchased from an authorized Boston Whaler Dealer, authorized Boston Whaler website or any Boston Whaler affiliate and utilized under normal, non-commercial use ("Accessory"), subject to the remedies, exclusions, and limitations set out below. Boston Whaler will repair or replace, at its sole discretion, any Accessory that is defective in material or workmanship, which is reported within one (1) year from the date of sale to the original retail owner. Boston Whaler is not responsible for any defect and/or damage to the Accessory and/or the boat caused by improper installation, whether performed by the retail consumer, dealer or any other third party.
4. **One-Year Limited Warranty on Upholstered Items, Canvas, Teak, and Powder Coating:** Boston Whaler will repair or replace, at its sole discretion, any upholstered items, canvas, teak, and powder coating manufactured or installed by Boston Whaler that are defective in factory materials and/or workmanship and are reported within one (1) year from the date of sale to the original retail owner.
5. **Limited Engine Warranty:** Retail owners will be entitled to the limited engine warranty as provided in the warranty manual from the engine manufacturer that was delivered to the original retail owner with his or her Boston Whaler Boat.

### ENVIRONMENTAL POLICIES

In keeping with environmental policies and practices, Boston Whaler reserves the right to utilize reconditioned, refurbished, repaired or remanufactured products or parts in the warranty repair or replacement process. Such products and parts will be comparable in function and performance to an original product or part and warranted for the remainder of the original warranty period.

### EXCLUSIONS

This Limited Manufacturer Warranty does not apply to any boat which has been salvaged or declared a total loss or constructive total loss for any reason not covered in this limited warranty. This warranty also does not apply to the following items:

- 1) Expenses for hauling out, transportation to and from the dealer or the Boston Whaler factory for warranty service.
- 2) Equipment or accessories which are not installed by Boston Whaler or which carry their own individual warranties, including but not limited to engines, engine components, batteries, propellers, controls, steering mechanisms, and electronics.
- 3) Damage, deterioration, discoloration or mold of cushions or cosmetic surface finishes, including scratches, gouges, chips, chalking, blistering, cracking, crazing, fading or oxidation of gel coat, stress lines, plated or painted metal and stainless steel finishes, plastics or acrylic materials, or anti-fouling bottom paint.
- 4) Windshield breakage and leakage.
- 5) Any Boston Whaler Boat initially sold at retail by a party other than an authorized Boston Whaler dealer.
- 6) Damage resulting from abuse, misuse, improper rigging and installation by an owner or any other person or entity not being an authorized dealer, accidents, overloading or powering in excess of the recommended maximum horsepower.
- 7) Failure of the owner to use, maintain, or store the boat as specified in the Boston Whaler owner's manual; and any other failure to provide reasonable care and maintenance. Normal wear and tear maintenance items are excluded from warranty coverage including but not limited to filters, bulbs, batteries, bungees, wiper blades, anchor rope, trailer finishes, tires, brakes, bearings and lights.
- 8) Any Boston Whaler Boat which has been altered or modified from Boston Whaler factory specifications, including penetration of the hull by anyone other than Boston Whaler factory personnel or Boston Whaler authorized dealer service personnel following factory specified procedures.
- 9) Damage resulting from use of improper trailer, improperly placed supporting bunks or slings, incorrect bunks placement and improper boat lift or sling.
- 10) Any Boston Whaler Boat used for commercial purposes, which includes, but is not limited to, any for-profit or other revenue-generating uses.
- 11) Any representation or implication relating to speed, range, fuel consumption or estimated performance characteristics.
- 12) Any failure or defect caused by an act of nature resulting in damage, cost, or expense;
- 13) Any failure or defect arising from a previous repair made by a non-authorized service provider.
- 14) Any item exceeding the expressed coverage limits specified in any Boston Whaler Limited Manufacturer Warranty.
- 15) Failure of the owner to use, maintain, or store an Accessory in reasonable fashion; and any other failure to provide reasonable care and maintenance.
- 16) Any Accessory which has been altered or modified from Boston Whaler factory specifications.
- 17) Any Accessory not purchased from an authorized Boston Whaler Dealer, authorized Boston Whaler website, or authorized Boston Whaler affiliate. For a list of Boston Whaler's affiliates, please refer to [www.brunswick.com](http://www.brunswick.com).
- 18) Any Accessory used for commercial purposes, which includes but is not limited to, any for-profit or other revenue generating uses.
- 19) Any defect or repair requiring redesign of the Boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of any other foreign jurisdiction.

#### **ACCESS FOR SERVICE**

The owner must provide Boston Whaler with a reasonable opportunity to repair, and reasonable access to the Boston Whaler Boat for warranty service. Warranty claims shall be made by delivering the Boston Whaler Boat for inspection to a Boston Whaler dealer authorized to service the product. If the owner cannot deliver the product to such a dealer, written notice must be given to Boston Whaler. Boston Whaler will then arrange for the inspection and any covered repair and the owner shall pay for all related transportation charges and/or travel time.

#### **STATUTE OF LIMITATIONS**

Without prejudice to your mandatory statutory rights, any action for rescission or revocation against Boston Whaler shall be barred unless it is commenced within one (1) year from the date of accrual of such cause of action, unless a longer period is prescribed by local law. This section shall not apply to Boston Whaler Boats purchased in Australia.

## **ASSIGNMENT OF COMPONENT WARRANTIES**

Except as expressly set out herein, all warranties provided by the manufacturers and distributors of components, equipment, and parts on the boat (collectively "Component Manufacturers") are hereby assigned to the owner to the extent permitted by the Component Manufacturers, as the owner's sole and exclusive remedy with respect to such items.

## **OWNER'S OBLIGATIONS**

To initiate a warranty claim, it is the responsibility of the owner to contact an authorized Boston Whaler dealer immediately after discovery of any defect, describe the nature of the problem, and provide a hull serial number, date of purchase, and name of selling dealer. The authorized dealer will notify Boston Whaler, who is solely responsible for determining and authorizing in writing the remedial action(s) to be performed at either an authorized Boston Whaler dealership chosen by Boston Whaler or at the Boston Whaler factory. The owner should notify Boston Whaler of any boat being repaired by an authorized Boston Whaler dealer which has been at the dealership for fifteen (15) days, or of any claimed defect which was not corrected after one repair attempt. Our privacy policies are available at [www.bostonwhaler.com](http://www.bostonwhaler.com).

## **REGISTRATION & WARRANTY TRANSFER POLICY**

The limited warranty coverage is activated by the authorized selling dealer registering the sale of a new Boat with Boston Whaler. The Ten-year, Three-year, and One-year Limited Warranties are transferable to a subsequent owner, except the One-year Accessory Warranty which is not transferrable, and this Limited Manufacturer Warranty will not transfer to any new owner of a boat which has been salvaged and resold, or resold after a declaration of a total loss or a constructive total loss, i.e., the cost of repair exceeds the value of the boat. The new owner must fill out and submit the online Boston Whaler warranty transfer form, accessible from [www.bostonwhaler.com](http://www.bostonwhaler.com). A copy of the bill of sale will be required to submit with the form. The warranty transfer must be completed within 30 days of purchase.

## **MODIFICATIONS & SEVERABILITY**

The terms and conditions contained herein, as well as those of any documents prepared in conjunction with the sale of this vessel may not be modified, altered or waived by any action, inaction, or representations, whether oral or in writing, except upon the expressed, written authority of a management level employee of Boston Whaler. The invalidity or unenforceability of any one or more of the provisions herein shall not affect the validity and enforceability of the other provisions.

## **SAFETY**

It is your responsibility (as well as the responsibility of any other operator of this boat) to be familiar with and observe all local, state and federal laws, rules and regulations regarding boating, navigation and boating safety. You and any other operator of this boat should take a course in boating and boating safety before operation of this boat and should be completely familiar with all systems regarding safe operation of this boat. Personal flotation devices should be worn by each passenger in accordance with applicable standards and state and federal law.

## **THE FOLLOWING SECTION IS APPLICABLE TO AUSTRALIAN CONSUMERS ONLY**

Boston Whaler Boats come with guarantees that cannot be excluded under the Australian Consumer Law. Retail owners are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. Retail owners are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This Limited Manufacturer Warranty does not cover any expenses that retail owners may incur claiming the warranty.

The benefits to retail owners given by this Limited Manufacturer Warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which the Limited Manufacturer Warranty relates.

**World Headquarters, 100 Whaler Way, Edgewater, FL 32141**

**Phone 011 1 (386) 428-0057**

**Internet Address: [www.bostonwhaler.com](http://www.bostonwhaler.com)**

## **CALIFORNIA EVAPORATIVE EMISSIONS CONTROL SYSTEM WARRANTY STATEMENT**

### **YOUR WARRANTY RIGHTS AND OBLIGATIONS:**

The California Air Resources Board and Boston Whaler, Inc. (“Boston Whaler”) are pleased to explain the evaporative emission control system’s warranty on your 2021 MY spark-ignition marine watercraft (SIMW). In California, new spark-ignition marine watercraft must be designed, built, and equipped to meet the State’s stringent anti-smog standards. Boston Whaler must warrant the evaporative emission control system on your spark ignition marine watercraft for the period listed below provided there has been no abuse, neglect or improper maintenance of your spark-ignition marine watercraft.

Your evaporative emission control system may include parts such as: carburetors, fuel tanks, fuel lines, fuel caps, valves, canisters, filters, vapor hoses, clamps, connectors, and other associated components.

### **MANUFACTURER’S WARRANTY COVERAGE:**

This evaporative emission control system is warranted for three years. If any evaporative emission-related part on your spark-ignition marine watercraft is defective, the part will be repaired or replaced by Boston Whaler.

### **OWNER’S WARRANTY RESPONSIBILITIES:**

- As the spark ignition marine watercraft owner, you are responsible for performance of the required maintenance listed in your owner’s manual. Boston Whaler, Inc. recommends that you retain all receipts covering maintenance on your SIMW, but Boston Whaler cannot deny warranty solely for the lack of receipts.
- As the SIMW owner, you should however be aware that the Boston Whaler may deny you warranty coverage if your spark-ignition marine watercraft or a part has failed due to abuse, neglect, or improper maintenance or unapproved modifications.
- You are responsible for presenting your spark-ignition marine watercraft to a Boston Whaler distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact Boston Whaler at 877-294-5645.

### **SIMW EVAPORATIVE EMISSIONS WARRANTY PARTS:**

Fuel tank	Grade Valves
Fuel feed hoses	Fuel Fill Deck Plate W/Cap and Pressure Relief Valve
Fuel Line Fittings	Hose Clamps on Fuel System Components
Fuel Demand Valves	Fuel Level Vent Valve

All other parts not listed that may affect the evaporative emissions control system

## PRIVACY STATEMENT

---

Thank you for purchasing a boat or requesting information from Boston Whaler! This Privacy Statement is to inform you how we collect, use, disclose, and safeguard the personal information you provide to us through your purchases, requests for brochures, product registration cards, promotions, surveys, call centers, or other customer contacts. To see our full Privacy Policy and any updates, please visit [www.bostonwhaler.com](http://www.bostonwhaler.com) and select the Privacy Statement link.

“Personal information” may include your name, age, mailing address, residential phone number, or e-mail address. It may also include income ranges, marital status, product or lifestyle preferences, and information concerning dealer service.

**How We Collect Personal Information:** Our authorized dealer provided Boston Whaler or our company in the European Union with personal information collected at the time of your boat order/purchase with other product registration data and will continue to provide warranty and servicing information on your boat. We will send you customer satisfaction surveys which you may elect to return to provide us with information on your boat purchase and your servicing needs. Your personal information may be gathered by or shared with Boston Whaler’s marketing providers and affiliated companies, who have comparable levels of privacy protection, for the purposes described in this statement. Boston Whaler, your dealer, and our marketing providers collect personal information when you request information about our companies and from surveys, promotions, contests, correspondence, your e-mails, telephone inquiries, web forms, and other communications.

**How We Use & Disclose Personal Information:** Unless you advise us otherwise, Boston Whaler, our authorized dealers, affiliated companies, and our marketing providers may generally collect, use, disclose, hold, and file your personal information for the following purposes: (1) Providing goods, brochures, information, incentives, and/or services to you or on your behalf; (2) Fulfilling the terms of our limited warranty or other service obligation; (3) Facilitating recalls or service campaigns if necessary; (4) Reviewing goods and/or services provided to you in product, services, and marketing analyses; (5) Ensuring your satisfaction through surveys or other contacts; (6) Administration, billing, accounting, and collections; and protecting against fraud and error; and (7) Investigating a breach or a contravention of a law, complying with a subpoena, warrant, court order, or as required or otherwise permitted by law. **BOSTON WHALER WILL NOT SELL YOUR PERSONAL INFORMATION OR SUBJECT YOU TO TELEMARKETING OR UNSOLICITED E-MAIL.**

**Safeguards:** We use security safeguards appropriate to the sensitivity of personal information to protect it from loss or theft, as well as prohibiting unauthorized access, disclosure, copying, use or modification of your personal information. These safeguards include restricted access to offices and equipment, security clearances, the use of passwords and/or encryption, publishing our privacy policy to appropriate personnel with instructions to act in accordance with its principles, and contractual provisions with our marketing agents and authorized dealers to follow the principles of our privacy policy.

**Access and Correction to Your Personal Information:** Subject to the exceptions provided by applicable law, we will provide, upon written request, your specific personal information collected in a form which is generally understandable. Your Personal Information is held by us and for us by our marketing agency, AVALA, who has contractually agreed to protect your information according to our privacy policies at the following addresses: Boston Whaler Inc., 100 Whaler Way, Edgewater, FL 32141. Please direct corrections, withdrawal of consent for specific purpose, complaints or other inquiries regarding personal information to: Terry Domian, AVALA Marketing Group; 1078 Headquarters Park Drive, Fenton, MO, 63026; Phone: (636) 343-9988, Fax: (636) 326-3282, E-mail: [terryd@MarketingAgencyMarketing.com](mailto:terryd@MarketingAgencyMarketing.com). You can withdraw consent for us to use your personal information at any time or provide corrections upon providing to us a 30-day notice, unless withdrawing consent would impede the performance of legal obligations. We are required by law to provide you with information for product recall and other product safety related purposes. The withdrawal of your consent may also adversely affect our ability to provide products and services to you and to maintain our relationship. Please note, notifying us will not result in withdrawing consent from your dealer, who should be contacted separately.

**Obtaining Consent:** If any supplementary disclosure is required, we will obtain your consent for disclosure to other persons or organizations and for other purposes than stated herein, unless otherwise permitted by law.

Thank you again for your business. We hope you have many years of wonderful boating experiences!

### Owner's manual

The material here and in the rest of the Owner's Manual Packet:

- Gives you basic safety information;
- Describes the features of your boat;
- Describes the equipment on your boat;
- Describes the fundamentals of boat use; and
- Contains service and maintenance information.

You must learn to operate this boat as well as read, understand and use this manual.

What this manual **does not** give you is a course in boating safety, or how to navigate, anchor or dock your boat. Operating a power boat safely requires more skills, knowledge and awareness than is necessary for a car or truck.

### Your responsibilities

For your safety, the safety of your passengers, other boaters and people in the water, you must:

- Take a boating safety course;
- Get instruction in the safe and proper handling of your boat;
- Understand and follow the "rules of the road";
- Learn how to navigate.

### Source of Information

In North America, contact one of the following for boating courses:

- U.S. Coast Guard Auxiliary
- U.S. Power Squadron
- Canadian Power and Sail Squadrons
- Red Cross
- State Boating Offices
- Yacht Club

Contact the Boat/U.S. Foundation at 1-800-336-2628 or go to [www.boatus.com/foundation](http://www.boatus.com/foundation)

Outside of North America, contact your boat dealer and/or your governmental boating agency for assistance.

A comprehensive background in boating can be found in the book, *Chapman - Piloting, Seamanship and Small Boat Handling*, by Elbert S. Maloney, published by Hearst Marine.

### Warranties

In addition to the Boston Whaler® Limited Warranty for your boat, each component and/or system on your boat has its own warranty that will be found with the specific information and manual for that component. The manuals are included with your Owner's Manual Packet. Locate and read the individual warranties then keep them together for easy future reference.

### Contact Phone Numbers and Internet Addresses

#### Boston Whaler, Inc.

Phone.....1-877-294-5645  
Internet ..... [www.bostonwhaler.com](http://www.bostonwhaler.com)

#### United States Coast Guard

Phone.....1-800-368-5647  
Internet ..... [www.uscboating.org](http://www.uscboating.org)

#### Boat US Foundation

Phone.....1-800-336-2628  
Internet ..... [www.boatus.com/foundation](http://www.boatus.com/foundation)

#### Canadian Coast Guard

Phone.....1-800-267-6687  
Internet ..... [www.ccg-gcc.gc.ca/](http://www.ccg-gcc.gc.ca/)

---

---

THIS PAGE INTENTIONALLY LEFT BLANK

# Section 1 • Safety

## Explanation of Safety Labels

**The most important aspect of boating is safety.** Although every effort is made to address the numerous issues regarding the safe usage of your boat, it is strongly recommended that you avail yourself of the training and knowledge available through boating safety courses, etc.

## Warning Labels

Mounted at key locations throughout your boat are warning labels which advise the owner/operator of imperative safety precautions to follow when operating and/or servicing equipment.

The examples below indicate the level of hazard by color and explanation.



### DANGER

Denotes an immediate hazard exists that **WILL** result in severe personal injury or death.



### WARNING

Denotes hazards or unsafe practices that **MAY** result in severe personal injury or death.



### CAUTION

Denotes hazards or unsafe practices that **COULD** result in minor personal injury, product or property damage.



### NOTICE

Denotes information that is important to know prior to operation and/or maintenance, but is not hazard related.

## Safety Precautions

The examples below are of precautions which appear throughout this manual and must be observed when operating or servicing your boat. Learn to recognize the degree of hazard and understand the explanations of safety prior to reading this manual.

Always use common sense in the operation and servicing of your boat.



### DANGER

Denotes an immediate hazard exists that **WILL** result in severe personal injury or death.



### WARNING

Denotes hazards or unsafe practices that **MAY** result in severe personal injury or death.



### CAUTION

Denotes hazards or unsafe practices that **COULD** result in minor personal injury, product or property damage.

### NOTICE

Denotes information that is important to know prior to operation and/or maintenance, but is not hazard related.

### ATTENTION

Denotes information found in the owner's manual to call attention to the safe operation or certain features of this vessel.

## Section 1• Safety

### SAFE Boating means:

- Knowing the limitations of your boat
- Following the “RULES of the ROAD”
- Keeping a sharp lookout for people and objects in the water.
- Not boating in water or weather conditions that are beyond the boat’s and operator’s capability.
- Never operating the boat while under the influence of drugs or alcohol.
- Being aware of your passengers safety at all times.
- Reducing speed when there is limited visibility, rough water, people in the water nearby , boats or structures.

### In Addition:

- Maintain your boat and its safety and other systems as recommended in this manual.
- Have the boat inspected by a qualified mechanic or dealer, at least annually.
- Ensure that the Coast Guard required safety equipment is on board and functioning.

## NOTICE

**As a boat owner or operator, YOU are responsible for your safety and the safety of your passengers and other boaters.**

Boating in beautiful weather and calm water conditions can be a wonderful experience. Boating however requires considerably greater skills than operating a land vehicle. Taking a boating course is the best way to prepare for a safe and enjoyable experience on the water.

- Take a Coast Guard, U.S. Power Squadron or equivalent boating safety course. (Call the Boat/U.S. Foundation at 1-800 336-2628 for information on available courses, or go to: “[www.boatus.com/foundation](http://www.boatus.com/foundation)” on the internet.)
- Get hands-on training on how to operate your boat properly.

### Safe Boating Checklist

#### Before Departure

- Update checklists when equipment is added or modified.
- Weather-forecast safe
- Required documents-on board
- Navigation charts & equipment-on board
- Safety equipment-on board
- Safety training-passengers & crew instructed on procedures, location, and use of safety equipment.
- Drain plugs-installed
- Bilge pumps-working & clean
- Blower-working
- Navigation lights-working
- Horn-working
- Fuel system-no leaks or fumes
- Fuel filter-tight & clean
- Power steering fluid-filled(if applicable)
- Steering system-working smoothly & properly
- Battery-electrolyte level within range
- Float plan-filed with friend or relative

#### Trailering (if applicable)

- Boat position-secure on trailer
- Tiedowns-tight
- Winch-locked
- Trailer hitch-connected
- Engine clearance-in trailering position
- Safety chains-attached
- Electrical-Lights, brake lights, turn signals working
- Mirrors-adjusted for trailering

#### After Return

- PFD's & other safety gear-dry, stowed for next use
- Fuel tanks-filled (allow for expansion) to prevent condensation
- Fuel system-no leaks
- Bilge pump-operating properly
- Bilge-clean, no leaks
- Float plan-notify person with whom you filed plan

# Section 1 • Safety

## General Considerations

- Know how your boat handles under different conditions. Recognize your limitations and the boat's limitations. Modify speed in keeping with weather, sea and traffic conditions.
- Instruct passengers on location and use of safety equipment and procedures.
- Instruct passengers on the fundamentals of operating your boat in case you are unable to do so.
- You are responsible for passenger's actions. If they place themselves or the boat in danger, immediately correct them.
- ***Remember the "Rule of Thirds":*** Use one third of the fuel for the trip outbound, one third for the return trip, and keep one third for reserve.

## Maintain Control

High performance boats require intimate knowledge of their handling characteristics for safe high speed operation.

- Learn the effects of trim, steering and throttle changes at gradually increasing levels of speed.
- Approach full throttle while adjusting trim for safe handling of the vessel.

On the water there are no marked traffic lanes, no traffic signs or lights, and boats have no turn signals. The boat operator must keep her or his attention focused not only on what's ahead but what's on the left, right and behind the boat.

The operator must always be alert to approaching boats (from the rear, right and left sides, as well as those ahead). There can be people in the water, partially submerged debris, and other navigational hazards such as rocks, sand bars or dangerous currents, to name a few.

Your passengers are relying on you to operate and maneuver the boat safely so that they are not in danger of going overboard. If you turn too quickly, increase or decrease speed abruptly, your passengers are at risk of being thrown overboard or thrown

about the boat.

When visibility becomes impaired because of weather or time of day, use navigational lights to ensure other boats can see you. In addition, if high bow angle causes reduced visibility, slow down to allow sufficient time to react if an emergency occurs.

## Boarding

- Board only one person at a time.
- Never jump into boat. Step or climb into cockpit.
- Load gear after you are aboard. Carrying gear while boarding can cause you to lose balance.
- Distribute weight evenly.
- Instruct passengers where to sit during on-plane operation to reduce the possibility of falling overboard during high speed maneuvers.
- If gear is not immediately needed, stow it in secure areas.
- Safety gear must be immediately accessible at all times.

## Impaired Operation

### **WARNING**

**CONTROL HAZARD-Federal laws prohibit operating a boat while under the influence of alcohol or drugs. These laws are vigorously enforced.**

The detrimental effects of alcohol and drugs are increased by wind, waves and sun, and will decrease your response time and ability to act in critical situations. Give special attention to the effects of alcohol and drugs while boating. No other single factor causes as many marine accidents and deaths. Death or serious injury and damage to personal and private property can result from being impaired while operating a boat.

### Operator's Responsibility

Your degree of enjoyment on the water depends on you, your equipment and other people who, like yourself boat responsibly. As a boat operator you should:

- Make sure that all occupants always wear a U.S. Coast Guard-approved life jacket while on the water.
- All boat operators should complete a boating safety course (a requirement in many states).
- All boat operators must become familiar with the proper operation of all vessel features prior to departure.
- Always maintain a safe speed.
- Be aware of conditions in every direction always when underway.
- Mind your wake. It can capsize a small boat or damage moored boats or other property. You are responsible for damage caused by your wake.
- Reduce speed and post a lookout to identify hazards when:
  - Visibility is impaired
  - In rough water
  - In congested waterways
- Display navigation lights between sunset and sunrise and during periods of restricted visibility, such as rain, fog, etc.

### ! WARNING

#### STABILITY HAZARD

- Load boat properly. The manufacturer's load rating is the maximum allowed under normal conditions. Adjust downward if weather, water or other conditions are adverse.
- Allow passengers to ride only in areas that do not pose a hazard to themselves or the boat.

**DO NOT allow passengers to ride on the bow of a closed bow boat.**

**DO NOT allow several passengers to ride in the bow of a small open-bow boat, causing the boat to "plow" into the water.**

**DO NOT allow passengers to ride on the stern cushion or gunwales.**

**DO NOT overload the stern.**

- Observe manufacturer's recommended on-plane seating locations.
- Passengers should remain seated while boat is moving.

**PERSONAL INJURY HAZARD-Stay alert. Use of drugs, alcohol, or other substances which impair judgement poses a serious threat to yourself and others. The boat operator is responsible for the behavior of passengers.**

**DROWNING HAZARD-Boats must carry one wearable personal flotation device (PFD) for every passenger on board. Boats must have at least one throwable life preserver.**

**SLIPPING HAZARD-Wet decks are slippery. Wear proper footwear and use extreme caution on wet surfaces.**

### ! WARNING

**A qualified operator must be in control of the boat at all times. Do not operate the boat while under the influence of alcohol or drugs. never operate your boat at speeds which exceed the operator's ability to react if an emergency develops. At night, turn on the appropriate navigation lights and cruise at a reduced speed that will allow you plenty of time to avoid dangerous situations.**

## Legally Mandated Equipment (Minimum Required)

Consult your National Boating Law Enforcement Agency. The following equipment is the minimum required by the U.S. Coast Guard for a boat which is more than 26 ft. (7.9M) in length but less than 40 ft. (12.2M) in length.

### Personal Flotation Devices (PFD's)

One (1) Coast Guard approved Type I, II or III is mandatory for each person aboard.

One (1) throwable Type IV device is also required to be onboard.

A Type V device is acceptable (See page 1-8) if worn for approved use. **ALWAYS WEAR A PFD WHEN BOATING**

### ! WARNING

**There is rarely time to reach stowed life jackets in time of emergency. Boaters should always wear a properly fitting, approved life jacket when on the water.**

**Children and non-swimmers MUST wear PFDs at all times when aboard.**

### NOTICE

**Depending on the state or country of operation, the operator of a vessel may be fined for failure to comply with local or national rules regarding PFD usage.**

### Fire Extinguishers (Portable)

If there is no fixed fire extinguishing system installed in the engine or generator spaces, the Coast Guard requires two (2) Type B-I or one (1) B-II fire extinguisher(s) be on board.

The American Boat & Yacht Council (ABYC) recommends that you carry three (3) A,B or C Type fire extinguishers on board and located within easy reach of the helm, Engine(s), and galley or passenger cockpit.

### Whistle, Horn

You must have on board, some means of making a loud sound signal. Navigation rules require that a sound made by any audible device be capable of a four (4) second blast, and be audible for 1/2 mi. (.80 Km).

### Visual distress Signals

If you operate your boat in coastal waters or on the Great Lakes, you must have a visual distress signals for day and night use on board. At least three (3) U.S.C.G. approved pyrotechnic devices marked with date showing service life must be carried, be readily accessible, in servicable condition and not be expired.

**Store all pyrotechnic signals in a well marked, waterproof container.**

### Additional Recommended equipment for safe operation

In addition to the legally mandated equipment, the following items are neccessary for safe boating, especially if your boat will be out of sight of land.

- First Aid kit
- Charts/Maps
- Visual distress signals (for day or night use)
- Marine VHF radio
- Moisture repellent
- Mooring Lines
- Fenders
- Waterproof flashlights
- High power spotlight
- Spare propeller
- Tool kit:
  - Screwdrivers, (phillips & flat)
  - Pliers, (regular, vise-grip, tongue & groove)
  - Wrenches, (box, open end, allen & adjustable)
  - Socket set, (metric and U.S.)
  - Electrical tape & duct tape
  - Hammer
  - Spare parts kit, (spark plugs, fuses, etc.)
- Compass
- Manual bilge pump
- GPS or LORAN
- Spare keys
- EPIRB-Emergency positioning-indicating radio beacon
- Boat hook
- Extra batteries
- Instruction manuals
- Lubricating oil
- Anchor

## Section 1• Safety

### Carbon Monoxide (CO)

#### ⚠ DANGER

- **Fumes from the engine(s), Generator(s) and other equipment and appliances that burn fuel contain Carbon Monoxide. Carbon Monoxide can kill you. Open all doors, hatches, curtains and windows to allow fresh air to circulate and dissipate the amounts of Carbon Monoxide present in enclosed spaces, especially when the boat is moored or anchored.**
- **Proper ventilation must be maintained, even during inclement weather to prevent dangerous levels of Carbon Monoxide build-up.**
- **Sleeping aboard a boat will require a working Carbon monoxide detection system, preferably in each sleeping quarter.**

Carbon Monoxide is an odorless, colorless, and tasteless, extremely toxic gas produced by engines, heaters, stoves or generators. When inhaled it combines with hemoglobin in the blood, preventing absorption of oxygen and is unlikely to be noticed until the person is overcome.

Prolonged exposure to low concentration or very short exposure to high concentrations can result in asphyxiation and death.

Symptoms of Carbon Monoxide poisoning include:

- Dizziness
- Ringing in the ears
- Unconsciousness
- Headaches
- Nausea

#### GET MEDICAL ATTENTION AS SOON AS POSSIBLE.

Symptoms of CO poisoning are often confused with seasickness or intoxication, so those affected may not receive the medical attention they need.

The poisoning victim's skin often turns cherry red. If CO poisoning is suspected, have the victim breath fresh air deeply. If breathing stops, resuscitate. A victim often revives, then relapses because organs are damaged by lack of oxygen.

Carbon Monoxide can accumulate in dangerous concentrations anywhere in or around your boat including on back decks, swim platforms, or in water around generator exhausts. CO can remain in or around your boat at dangerous levels even if your engine is no longer running.

#### Remember:

- If you can smell engine exhaust, you are inhaling CO.
- Changing course and speed to place boat heading into the wind can improve ventilation.

To minimize the danger of Carbon Monoxide accumulation when the Engine is running (or by use of fuel burning equipment.):

- Do not idle the engine without moving the boat for more than 15 minutes at a time.
- Inspect the exhaust system regularly.
- Operate all fuel burning appliances, such as charcoal, propane, LPG, CNG or alcohol cooking devices in areas where fresh air can circulate.

#### In the event the CO alarm activates:

- Evacuate enclosed areas immediately.
- Shut OFF any fuel burning equipment or appliances.
- Open hatches, doors, portlights, etc. to improve ventilation.
- If making way, head boat into the wind.


#### ⚠ DANGER

**Never ignore an alarm.**

## Section 1 • Safety

### Carbon Monoxide Accumulation Scenarios

Examples of Accumulation of Carbon Monoxide  
Fig. 1.7.1

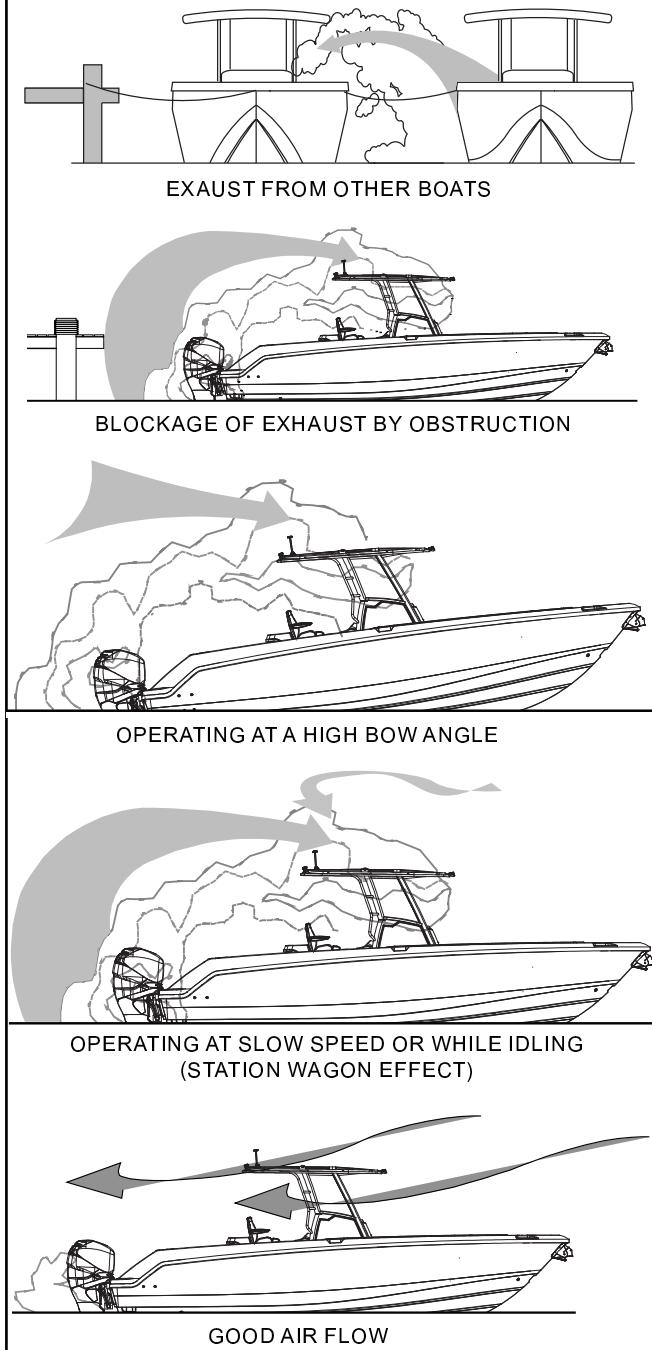

### ⚠ DANGER

**Even in rainy cold weather, ventilation must be maintained to avoid Carbon Monoxide poisoning.  
You will get wet and/or cold.**

### Lifesaving Equipment

Even strong swimmers can tire quickly in the water and drown due to exhaustion, hypothermia, or both. The buoyancy provided by a personal flotation device (PFD) will allow the person who has fallen overboard to remain afloat with far less effort and body heat loss, extending survival time necessary to find and retrieve them.

### PFD Requirement

One (1) Coast Guard approved PFD, Type I, II or III for each person aboard or being towed on water skis, tubes, etc.


The law requires that PFDs must be readily accessible, if not worn. "Readily Accessible" means removed from storage bags and unbuckled.

### NOTICE


**Children and non-swimmers MUST wear PFDs at all times when aboard.**

### PFD Classifications

Listed below are the several different types of PFDs, each life jacket has different purposes, choose one that will suit your purpose.

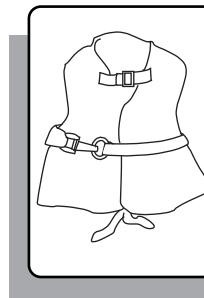


**Type I**, Off-shore Life Jacket is considered the most buoyant, it is designed to turn an unconscious person face up. Use in all types of waters where rescue may be slow, particularly in cold or rough water conditions.

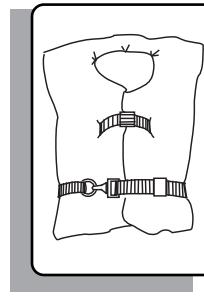

**Type II**, Near-shore Life Vest, "keyhole" vest with flotation filled head and neck support is also designed to turn a person face up, but the turning action is not as pronounced. Use in calm inland waters or where quick rescue is likely.


## Section 1• Safety

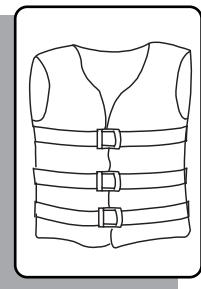

**Type III**, Flotation-aid Life vest is designed so that conscious wearers can turn face-up. Designed for comfort while engaged in water skiing or other forms of water activities.



**Type V**, Special-Use devices, sailboat harnesses, white water vests, float coats, and hybrid vests which have minimum inherent buoyancy and an inflatable chamber.

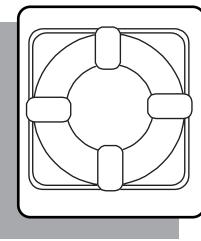

**Type IV**, Throwaway Devices, horseshoe buoys, ring buoys and buoyant cushions are designed to be grasped, not worn.

Before purchasing PFDs, ensure that there is an attached tag indicating they are approved by the U.S. Coast Guard or by your National Boating Law Enforcement Agency.

The operator is responsible for instructing everyone onboard on their location and use. **The best precaution is to wear the PFD at all times while on the boat.**

## Emergency Situations

### NOTICE

**The law requires the owner/operator to assist any person or boat in distress as long as rendering assistance does not endanger the owner/operator, the passengers or the boat.**

Prevention is the safest approach. We hope that you are never involved in an emergency situation, but if you are it is imperative that you react.

## Medical Emergency

You may be far from professional medical help when you are boating. At least two (2) persons on board your boat should be CPR certified, and should have taken a first aid course. Your boat should have a well stocked first aid kit on board. In many situations your radio will be your only link to reaching medical assistance. Keep the radio in working order and understand which channels are used for emergencies, these channels are constantly monitored and will be useful when situations arise. Cell phones are becoming more common and can help in some areas, but they are limited and unreliable and should not be used in the place of a good VHF radio.

## Water Rescue

In most situations a person that has fallen overboard will succumb to hypothermia if not rescued immediately. Life expectancy decreases as rescue time increases in water temperatures below 70° (21.1°C).

There are three (3) steps that must be taken when a person has fallen overboard:

### 1. Returning to the victim:

- Immediately make everyone onboard aware that someone is overboard and keep the victim in sight.
- Slow the boat and keep pointing toward the person overboard. At night or in low light, point the best available light source at the person.
- Throw a life ring/preserver to the victim, even if they are wearing one it will serve as another marker.

### 2. Making contact:

- Stop or slow the boat and circle toward the person overboard.
- Try to approach heading into the wind or into the waves.
- Keep person overboard constantly in sight.
- When almost alongside, stop the engine in gear to prevent propeller “windmilling”.

### 3. Getting back aboard:

- Try to reach the person overboard with a pole, or by throwing a life preserver. NEVER swim to them except as a last resort.
- Assist the person in boarding. Boarding should be done at the stern of the boat.
- If the person is injured or incapable of boarding by themselves, a rescuer should don a life preserver with a safety line and enter the water to assist the person onto the boat.
- Handle the person carefully, spinal injuries might have occurred and could be worsened by rough handling.
- Check for other injuries, render medical assistance immediately.

## Unassisted Reboarding

The transom ladder (See page 2-41) can be deployed to accommodate a person reboarding the boat without assistance.

## Fire

Fire is a serious boating hazard. Boats will burn quickly. Do not remain onboard and fight a fire for more than a few minutes. If the fire is out of control and cannot be put out with the fire suppression equipment onboard, abandon ship immediately.

The fumes released during a fire are toxic and should be avoided. Even after the fire has been extinguished, proper ventilation of the area is required to minimize exposure to harmful fumes.

### ⚠ DANGER

- **Fires can spread quickly. Your reaction to the fire is important. Have the proper fire fighting equipment close at hand, and in good working order to respond quickly.**
- **Small fire extinguishers have small discharge times. Aim at the base of the fire with a sweeping motion to maximize the use of the fire extinguisher contents.**

#### To lessen the danger of fire:

- Extinguish all smoking materials, shut off blowers, stoves, engine(s) and generator(s).
- Keep bilge area clean, oil and fuel spills should be cleaned immediately.
- If possible throw burning materials overboard.
- If fire is accessible, release the contents of the fire extinguisher(s) into the base of the fire.
- If the fire is in an enclosed compartment, and you have an automatic extinguisher for the compartment, wait 15 min. before opening the compartment. Have an extinguisher handy in case of a flare up.
- If possible, signal for help. Radio, visual, and audible signal should be used as needed. You must render assistance to any boater requesting help.
- If fire is out of control, grab all necessary survival gear, distress signals, don your PFD's and prepare to abandon ship.
- If you do abandon ship, make sure the passengers have PFD's. Take a head count before entering the water and take another head count when in the water. **STAY TOGETHER.**

#### Flooding, Swamping and Capsizing

In the event of Flooding, Swamping or Capsizing:

#### Flooding-

- Always wear your PFD, or have it within reach.

- If the bilge pump(s) have not automatically turned ON, switch them ON immediately.
- Find the source of the flooding and determine the best fix.
- Keep the bilge pumps running until the flooding is under control.
- Call for assistance if the source of the flooding cannot be controlled.
- Head back to port if possible.

#### Swamping-

- Always wear your PFD, or have it within reach.
- Swamping is usually a result of wave action, immediately get control of the helm and turn the boat into the waves.
- Swamping can also be caused by an overloaded boat.
- If the bilge pump(s) have not automatically turned ON, switch them ON immediately.
- The deck scuppers on your boat are designed to drain the deck of water.
- Keep the bilge pumps running until the flooding is under control.
- Take a head count of all passengers.

#### Capsizing-

- “Capsized” is when a boat is on its side or completely upside-down (usually as a result of wave action, improper loading or load shifting).
- If the boat will not right itself, get out of the water and climb onto the exposed hull.
- Do a head count for all passengers
- **STAY TOGETHER**
- Usually a capsizing will happen quickly and without warning.
- Use whatever is at hand to signal for help.

# Section 1 • Safety

---

The chances of flooding, swamping or capsizing can be reduced by being aware of:

- Weather
- Water Conditions
- Proper boat handling techniques
- Proper loading of the boat

## Collision

In the event of collision:

- Cut the engine(s)
- Check on passengers
- If the bilge pump(s) have not automatically turned ON, switch them ON immediately.
- Determine the amount of damage to your boats structure.
- Call for assistance
- In the event of collision you are required to file an accident report. Contact a state enforcement agency or the nearest U.S. Coast Guard office. If you are boating outside U.S. waters, consult the nation you are visiting for accident reporting requirements.

## Propulsion, Control or Steering failure:

If there is a propulsion, control or steering failure:

- Stop the engine, (shut off at Ignition or pull on the Emergency Engine Shut-Off Switch.)
- Drop anchor to prevent drifting.
- Determine if the problem can be fixed or will assistance be needed.
- Call for assistance if needed.

When loss of propulsion or steering is noticed, your quick reaction is required to prevent further damage to your boat or injuries to your passengers.

Outboard engines require propulsion to control the direction the boat will take. Without propulsion, the steering is virtually useless. If you are in a congested waterway you will need to react quickly to warn

others that you have lost power, propulsion or steering control and that assistance will be needed.

## Grounding

Running aground may be avoided by paying attention to marker buoys or indicated by waves as they form into breakers when passing over a sand bar.

If you do run aground, the course of action depends on how hard the boat hits bottom and whether the boat remains stranded. If it is a simple touch, you may need only to inspect the lower drive of the engine and the hull of the boat. If possible do a thorough inspection before trying to get loose, throwing the boat into reverse before this is done may do more damage.

## Distress Signals

### Visual Distress Signals, (VDS)

- U.S. Coast Guard regulations require boats in coastal waters and the Great Lakes to carry a Visual Distress Signal (VDS) for day and night use, as well as appropriate for the time of operation. Exempt from the day signals requirement, but not night signals, are boats less than 4.8 meters (16 feet), open sailboats less than 7.9 meters (26 feet), boats participating in organized events and manually propelled boats.
- If you are required to have visual distress signals, at least three safety approved pyrotechnic devices in serviceable condition must be readily accessible. They must be marked with a date showing the service life which must not be expired.
- Carry three signals for day use and three for night use. Some pyrotechnic devices such as red flares, meet both day and night use requirements.
- Store pyrotechnic signals in a cool, dry location. An orange or red watertight container prominently marked "DISTRESS SIGNALS" is recommended.

## Section 1• Safety

Other recognized visual distress signals include:

- Flames in a bucket
- Code flags November & Charlie
- Black square & ball on orange background flag.
- Orange flag (certified)
- Electric distress light (certified)-for night use
- Dye marker (any color)
- Person waving arms (slowly)
- U.S. ensign flown upside down

### Audible Distress Signals, (ADS)

U.S. Coast Guard regulations require one hand, mouth or power operated whistle or horn, audible for at least 1/2 mile.

Other recognized audible distress signals include:

- Radio communication (see **Radio Communication** below)
- Radio-telegraph alarm
- Position indicating radio beacon
- Morse Code S-O-S (3 short 3 long 3 short) sounded by any means.
- Fog horn sounded continuously.

### Radio Communication

A radio is the boat operator's main method of receiving safety information and summoning aid. VHF-FM radio is the primary means of short range communication. Single sideband radio (SSB) is used for longer range communication.

VHF-FM channel 16 and SSB 2182 kHz are designated for emergency use. Such situations can be categorized as:

#### • EMERGENCY-

**“MAYDAY, MAYDAY, MAYDAY,”**- used when life or vessel is in imminent danger.

#### • URGENCY-

**“PAN-PAN, PAN-PAN, PAN-PAN”** (pronounced PAHN-PAHN)-used when a person or vessel is in some jeopardy less than indicated by a “MAYDAY” call.

#### • SAFETY-

**“SECURITY, SECURITY, SECURITY”** (pronounced SAY-CURE-IT-AY)-used for navigational safety or weather warning.

An emergency situation will be hectic and there will not be time to learn proper radio procedure. **LEARN WHAT TO DO BEFORE YOU NEED TO DO IT.** If you hear a distress call, stop all radio transmissions. If you can directly assist, respond on the emergency frequency. If you cannot assist, do not transmit on that frequency. However, continue to monitor until it is obvious that help is being provided.

### Weather

#### **! DANGER**

**DO NOT attempt to boat in severe weather conditions. Death or serious injury can occur. Get to shore before the weather turns bad.**

Getting caught in severe weather is hazardous. Bad weather and/or rough sea or water conditions can cause an unsafe situation. Consult local weather services for up-to-date forecasts on weather and sea conditions. Television, Radio, Internet can give you access to NOAA weather reports that will help you make a determination on where and when to get underway.

Following are some weather related rules:

- Understand the design limitations of your boat.
- Check the weather forecast and water conditions before leaving and while underway.
- Wear a Personal Flotation Device, (PFD)

## Section 1 • Safety



### WARNING


**A sudden change in wind direction or speed or an increase in wave height indicates deteriorating weather.**

### NOTICE

**Check the weather forecast and water conditions before leaving and while underway**

Weather Warning Penanats

Fig. 1.13.1

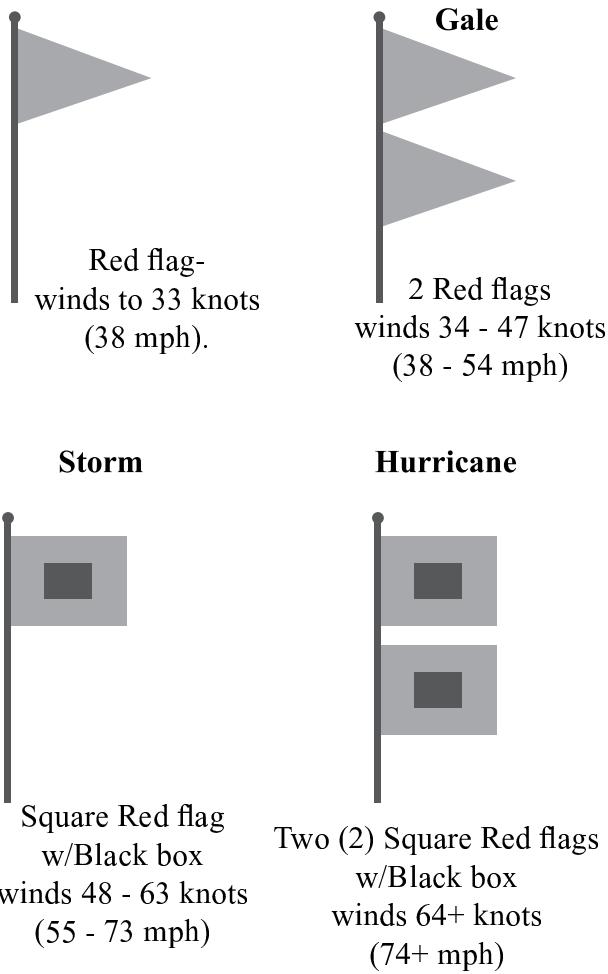

- If a storm approaches, immediately seek a safe harbor.
- If a storm hits have everyone sit in the cabin or cockpit deck in the boat. Head the bow into the wind with enough power to maintain slow headway.

- If you encounter fog, determine your position, set a safe course, slow down and alert other boats of your presence with a sound signal.
- If a lightning storm approaches, the safest action is to dock and disembark. If you cannot return to shore, have passengers go inside the cabin and remain there until the storm passes.
- Stay out of the water during a lightning storm. If caught swimming during a storm, get back into the boat and remain there until the storm passes. (remember that lightning can strike several miles away from the storm itself. Be aware of the storms location relative to your location and the direction the storm is moving).

### Swimming, Diving & Water Skiing

#### Swimming


- Do not swim from a moving boat.
- Many areas prohibit swimming from a boat except in designated areas.
- Turn off engine in gear (to prevent propeller “windmilling”) before picking up swimmer.

#### Diving

Recognize and respect diving flags. Keep at least 30 meters (100 ft.) away.

Diver's Flags

Fig. 1.13.2

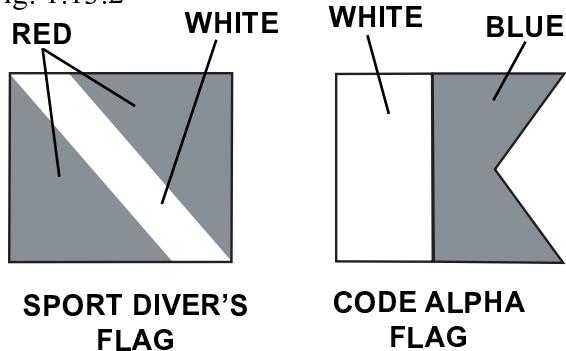

**SPORT DIVERS FLAG**-Red flag with diagonal white stripe marks a diver in the water.

**CODE ALPHA FLAG**-Blue and white pennant designates boat being used in dive operations.

## Section 1• Safety


### Water Skiing

- Always have two persons in the boat, one at the controls and one who can easily and continuously look at the skier.
- Insist that anyone who water skis must know how to swim.
- Insist that skiers wear approved Personal Flotation Devices (PFD's)
- Ski only in daylight when visibility is good.
- Never drive the boat directly behind a water skier. At 22 knots (25 m.p.h.), it takes only 5 seconds to overtake a fallen skier who was 60 meters (200 feet) in front.
- Ski only in areas where skiing is permitted.
- Observe local restrictions on length of tow line.
- Learn the signals to communicate with a skier. The skier is to control the boat through hand signals (Figure 1.14.1).
- Your boat will handle differently while towing a skier. Experiment carefully to learn the difference.
- Skiers may start from the shore or dock, if boat traffic allows. When returning, pick up skiers from water. Do not ski back to shore or dock.
- Give immediate attention to fallen skiers.
- Keep a downed skier in sight and on the operator's side of the boat when approaching the skier. **Never back up to anyone in the water.**
- Turn off engine in gear (to prevent propeller "windmilling") before picking up skier.
- If the skier suddenly releases the tow rope, it can backlash into cockpit. Spotters who are watching the skier must be aware of this fact and be prepared to take appropriate action to avoid injury.

### Water Skiing Signals

#### Skiing Signals

Fig. 1.14.1

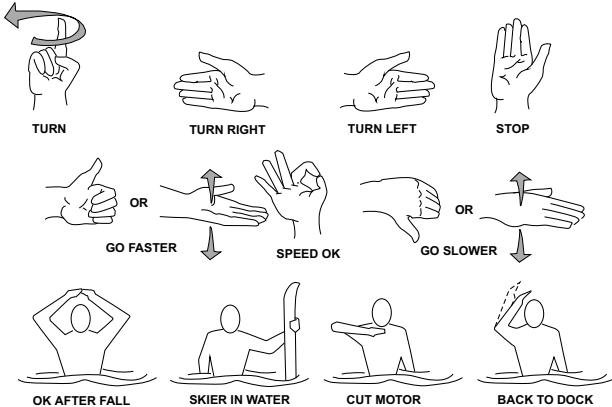

**Turn** – Arm raised, circle with index finger extended.

**Turn Right** – Extend arm out from body to the right.

**Turn Left** – Extend arm out from body to the left.

**Stop** – Raise arm with palm vertical and facing forward.

**Faster** – Thumb pointed up or palm up, move hand up and down.

**Speed OK** – Raise arm and form a circle with thumb and index finger.

**Slow Down** – Thumb pointed down or palm down, move hand up and down.

**OK After a Fall** – Clasp hands together overhead.

**Skier in Water** – Extend one ski vertically out of water.

**Cut Motor** – Draw finger across throat.

**Back to Dock** – Pat top of head.

## ! WARNING

### SWIMMING/DIVING HAZARD

- Keep clear of areas designated only for swimmers and skin divers. Recognize markers used for such areas.
- Never swim when there is lightning in the area.

### SKIING HAZARDS

- Skiers must use a safety approved Personal Flotation Device (PFD).
- Ski only during daylight and in good visibility.
- Avoid shallow water, other boats, navigational aids and other obstructions.
- Keep at least 30 meters (100 ft.) from other objects.
- Never drive directly behind a water skier.
- A competent observer must watch the skier at all times. A competent observer is a person that has the ability to assess when a skier is in trouble, knows or understands water skiing hand signals and is capable of helping a skier.
- Keep a downed skier in constant sight.
- Turn off engine in gear before you get close to person in the water.
- Never back up to anyone in the water.
- Use caution in boat when skier is being towed. Sudden release of tow rope can cause it to backlash into the cockpit.

### PERSONAL INJURY HAZARD

Use transom tow ring only to pull water skiers. Unless specified by the manufacturer, any other use, such as parasailing, kite flying, towing other boats, etc. may create too much stress on the tow ring, resulting in personal injury and/or equipment damage.

## ! DANGER

### PROPELLER SAFETY

- Before starting your boat, walk to the stern and look in the water to assure there is no one near your propeller. People near propeller may not be visible from helm.
- NEVER allow passengers to board or exit your boat from the water when engines are on.
- Educate passengers about the dangers of propellers
- Be especially alert when operating in congested areas. NEVER enter swimming zones.
- Take extra precautions near boats that are towing skiers or tubers.
- NEVER permit passengers to ride on the bow, gunwale, transom, seatbacks, or other locations where they may fall overboard.
- STOP! if someone falls overboard. Slowly turn the boat around, and keep the person in sight as you approach. Turn your engine off FIRST and then bring the person aboard.
- NEVER reverse your boat to pick someone up out of the water.

### Ignition Shutdown Safety Switch

#### **! WARNING**

**Wear the lanyard at all times when operating the boat. Use it to stop only in an emergency. DO NOT use it to shut off the engine during normal operation**


Your boat is equipped with an ignition shutdown safety switch. The switch is located below the gear shift/throttle control unit. The ignition shut down safety switch incorporates a shut-off switch, switch clip, lanyard and lanyard clip, which is clipped to the operator when running.

If an emergency arises and the engine must be shut down, a pull on the cord to release the clip from the shut-off will shut off the engine.

This switch is designed to shut the engine off when the operator of the boat leaves the control station, either accidentally by falling into the boat, or by being ejected overboard. This would most likely occur as a result of poor operating practices.

Emergency Engine Stop Switch

Fig. 1.16.1

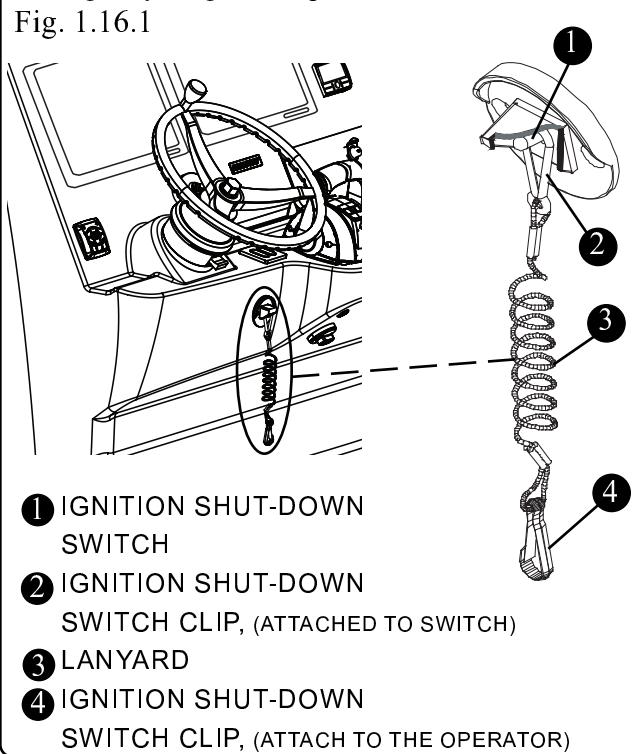

The lanyard should be long enough to prevent inadvertent activation. Do not let the lanyard become entangled.

Accidental loss of power can be hazardous, particularly while docking or in heavy seas, strong current or high winds. Passengers and crew may lose balance and the boat may lose steering control.

Should the operator fall out of the boat at planing speed, it may take several seconds for the engine and propeller to stop turning. The boat may continue to coast for several hundred feet, causing injury to anyone in its path.

### Float Plan

Float plans are important to you should you encounter problems on the water. A float plan should contain a description of your boat along with any distinguishing features. It should describe where you will be boating, your departure time and estimated return. The number and names of passengers, and destination should also be noted.

The float plan should be given to a friend or relative, so they can give the information to a national boating agency like the U.S. Coast Guard, in the event you do not return at the time specified on the float plan.

If there are any changes to the float plan they should be conveyed to the person holding the float plan. Once you return you should contact the person holding the float plan to let them know you are back.

### Chart Your Course

To avoid boating in unsafe areas where there are underwater obstructions, shallow water, unnavigable conditions such as dangerous currents, and others, you must chart a course. This means having and using National Oceanic and Atmospheric Administration (NOAA) charts for coastal waters, observing and understanding all navigational aids, using the knowledge and guidance of experienced boaters, and being aware of the tides and times where appropriate. If you are boating in an area you are unfamiliar with, proceed with caution and post a lookout to watch for hazards.



### WARNING

**Hitting an object in or under the water or boating in dangerous currents can cause serious injury or death to occupants in the boat.**

**You must know where the hazards are and avoid them. In uncharted waters, boat very slowly and post a lookout.**

**If an object is struck or if you run aground:**

- **Shut the engine OFF**
- **Check the hull for damage**
- **Check propeller for damage**
- **If aground, consider the bottom grade before moving off, (damage to the hull and propellers could be worsened).**
- **Determine the tides and whether it will help or hinder you from the grounding.**
- **Do not have anyone other than a trained and competent service tow your boat.**

bilge discharge. Use rags or sponges to soak up fuel or oily waste, then dispose of it properly ashore. If there is much fuel or oil in the bilge, contact a knowledgeable marine service to remove it. Never pump contaminated bilge overboard. Help protect your waters.

### Excessive Noise

Many areas regulate noise limits. Even if there are no laws, courtesy demands that boats operate quietly.

### Wake / Wash

Power boat wakes can endanger people and vessels. Each power boat operator is responsible for injury or damage caused by the boat's wake. Be especially careful in confined areas such as channels or marinas. Observe "no wake" warnings.



### WARNING

**SPEED HAZARD - Watch your wake. It might capsize a smaller craft. You are responsible for damage caused by your wake.**



### CAUTION

**Reduce speed in congested waterway. Be alert for No Wake markers.**

## Environmental Considerations

### Fuel & Oil Spillage

Regulations prohibit discharging fuel or oily waste in navigable waters. Discharge is defined as any action which causes a film, sheen or discoloration on the water surface, or causes a sludge or emulsion beneath the water surface. A common violation is

## Section 1• Safety

---

### Homeland Security Restrictions

Recreational boaters have a role in keeping our waterways safe and secure. Violators of the restrictions below can expect a quick and severe response.

- **DO NOT** approach within 100 yards, and slow to minimum speed within 500 yards of any U.S. Naval vessel. If you need to pass within 100 yards of a U.S. Naval vessel for safe passage, you must contact the U.S. Naval vessel or the Coast Guard escort vessel on VHF-FM channel 16.

#### **! DANGER**

**DO NOT approach within 100 yards of any U.S. Naval vessel without first contacting the vessel on VHF-FM channel 16. To do so will result in a quick and severe response.**

- Observe and avoid all security zones. Avoid commercial port areas, especially those that involve military, cruise line or petroleum facilities. Observe and avoid other restricted areas near dams, power plants, etc.

- **DO NOT** stop or anchor beneath bridges or in channels.

### America's Waterway Watch

In March, 2005, the U.S. Coast Guard officially launched *America's Waterway Watch* to encourage the boating public to report suspicious activities in our nation's ports and waterways. *America's Waterway Watch* simply asks anyone who works, lives, or recreates on the water to keep an eye out for suspicious activities. Anyone who spots such activity is asked to call the National Response Center's 24-hour hotline, 800-424-8802 or 877-24WATCH (877-249-2824).

### Warning Label Locations

Mounted at key locations throughout the boat (See figure 1.19.1 thru 1.22.1), warning labels advise the owner/operator of imperative safety precautions to follow when operating and/or servicing equipment. **DO NOT REMOVE OR OBSTRUCT ANY WARNING LABEL.** Replace any label which becomes illegible.

# Section 1 • Safety

## Warning Label Locations

Warning Label Locations

Fig.1.19.1

### Proposition 65

#### **! WARNING**

A WIDE VARIETY OF COMPONENTS USED ON THIS VESSEL CONTAIN OR EMIT CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS AND OTHER REPRODUCTIVE HARM.

#### EXAMPLES INCLUDE:


- ENGINE AND GENERATOR EXHAUST
- ENGINE AND GENERATOR FUEL, AND OTHER LIQUIDS SUCH AS COOLANTS AND OIL, ESPECIALLY USED MOTOR OIL
- COOKING FUELS
- CLEANERS, PAINTS, AND SUBSTANCES USED FOR VESSEL REPAIR
- WASTE MATERIALS THAT RESULT FROM WEAR OF VESSEL COMPONENTS
- LEAD FROM BATTERY TERMINALS AND FROM OTHER SOURCES SUCH AS BALLAST OR FISHING SINKERS

#### TO AVOID HARM:

- KEEP AWAY FROM ENGINE, GENERATOR, AND COOKING FUEL EXHAUST FUNES
- WASH AREAS THOROUGHLY WITH SOAP AND WATER AFTER HANDLING THE SUBSTANCES ABOVE

#### CALIFORNIA RESIDENTS ONLY



THIS WARNING IS ATTACHED TO THE STEERING WHEEL PRIOR TO DELIVERY OF ANY BOAT SOLD IN THE STATE OF CALIFORNIA IN ACCORDANCE WITH CALIFORNIA HEALTH & SAFETY CODE §§ 25249.5-.13

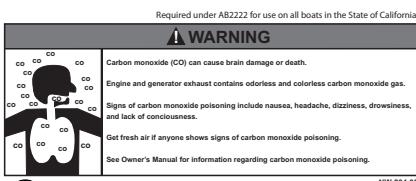


6

1

2

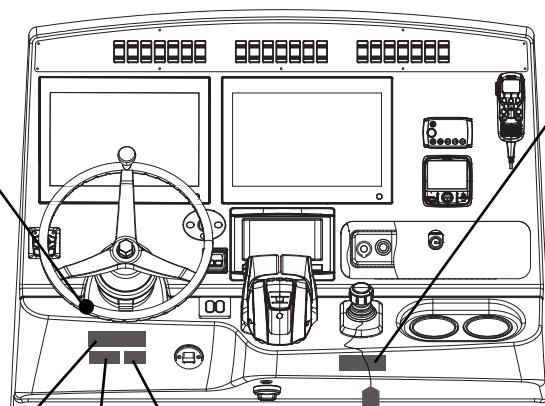

5

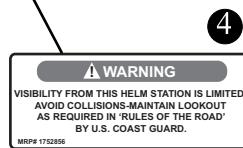

4

3

- The joystick is for boat docking and low speed maneuvers.
  - Use the joystick only when the ERC controls are in neutral.
  - When the ERC controls are shifted into gear, the joystick disengages.
  - To limit engine power during docking and maneuvering, engage the dock feature by pressing the DOCK button.
  - To prevent the boat from being shifted into gear during operation and to disengage the joystick, engage the throttle-only feature by pressing the THROTTLE ONLY button.
  - For complete details of features and operation, please refer to the operation, maintenance, and warranty manual.
- 90-879288287

### Replacement Part No.

1	PROPOSITION 65, HANG TAG .....	1795087
2	WARNING W/JOYSTICK LABEL KIT (OPTION ) .....	2121785
3	HANG TAG W/JOYSTICK LABEL KIT (OPTION ) .....	2121785
4	WARNING, LTD VISIBILTY FROM HELM STN .....	1752856
5	WARNING, PROP DANGER.....	1950698
6	WARNING, CO HELM .....	1811368


### NOTICE

It is important to replace any damaged or unreadable label. Call your Boston Whaler dealer for replacement labels.

# Section 1• Safety

## Warning Label Locations (Cont'd)

Fig.1.20.1

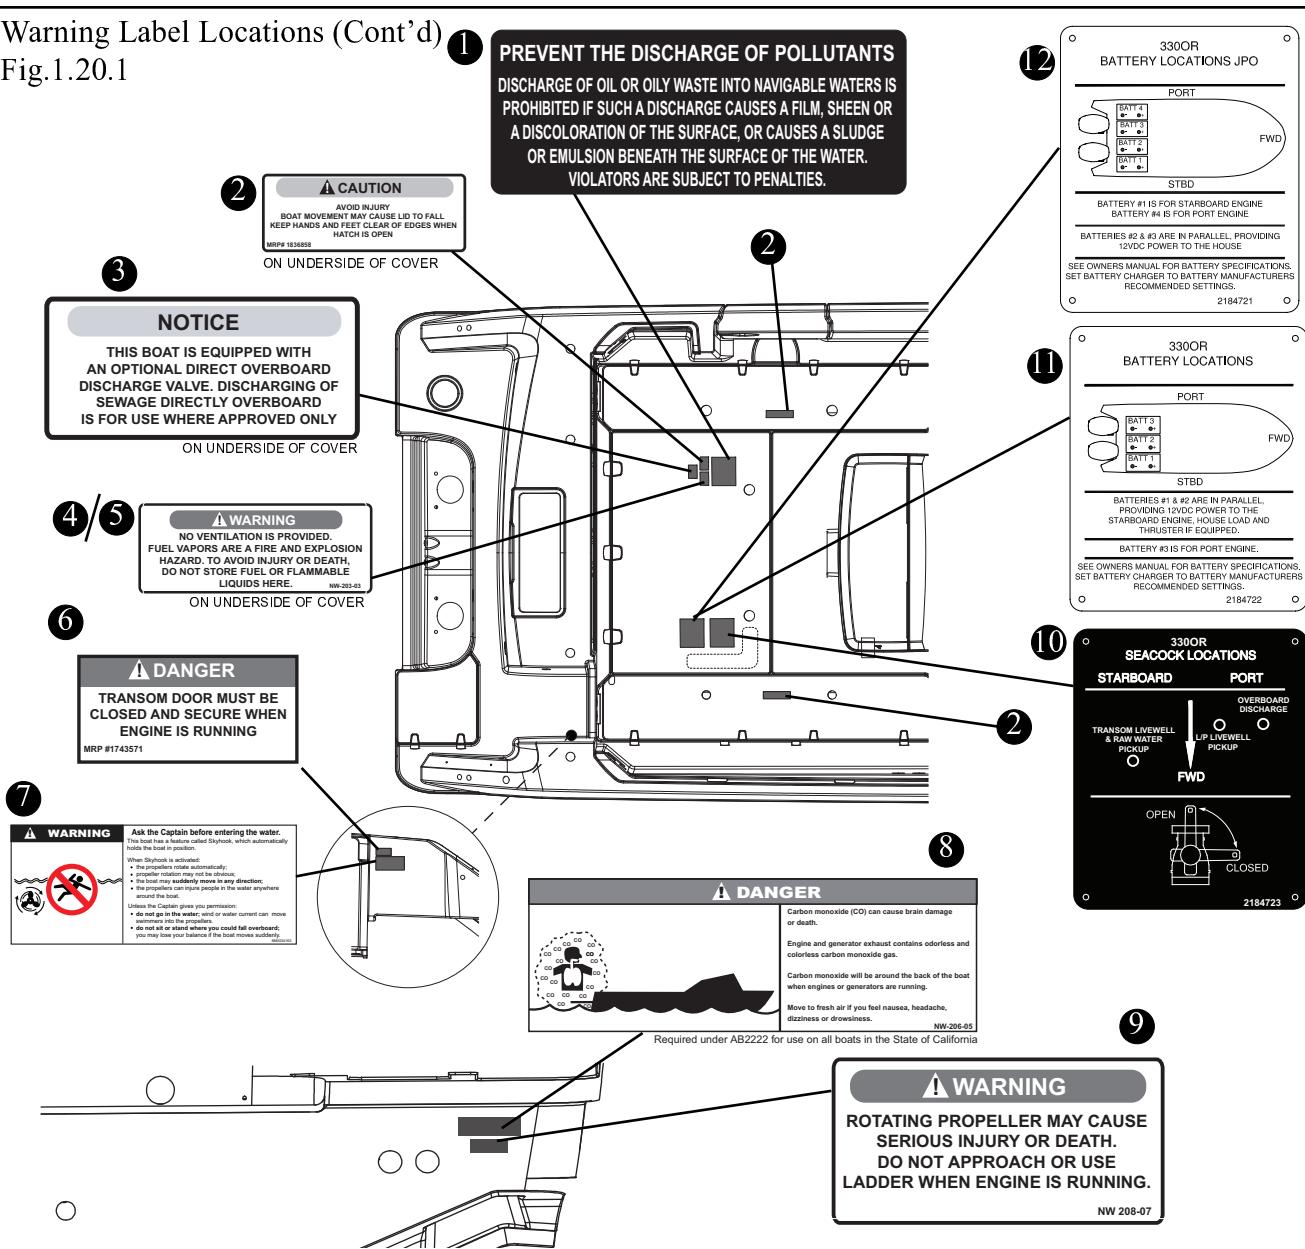

### Replacement Part No.


- 1 LABEL, DISCHARGE OF POLLUTANTS ..... 2063413
- 2 CAUTION, AVOID INJURY, BOAT MOVEMENT ..... 1836858
- 3 NOTICE, OVERBOARD DISCHARGE ..... 2063381
- 4 WARNING, DO NOT STORE FUEL ..... 1691003
- 5 CANADIAN CERTIFICATION (OPTION) ..... 2175076
- 6 DANGER TRANSOM DOOR ..... 2063385
- 7 WARNING W/JOYSTICK LABEL KIT (OPTION) ..... 2121785
- 8 DANGER, CO TRANSOM ..... 1811367
- 9 WARNING, ROTATING PROP DANGER ..... 1903624
- 10 BATTERY LOCATION PLATE ..... 2184721
- 11 BATTERY LOCATION PLATE/JOYSTICK (OPTION) ..... 2184722
- 12 SEACOCK LOCATION PLATE ..... 2184723

**NOTICE**  
It is important to replace any damaged or unreadable label. Call your Boston Whaler dealer for replacement labels.

# Section 1 • Safety

## Warning Label Locations (Cont'd)

Fig.1.21.1

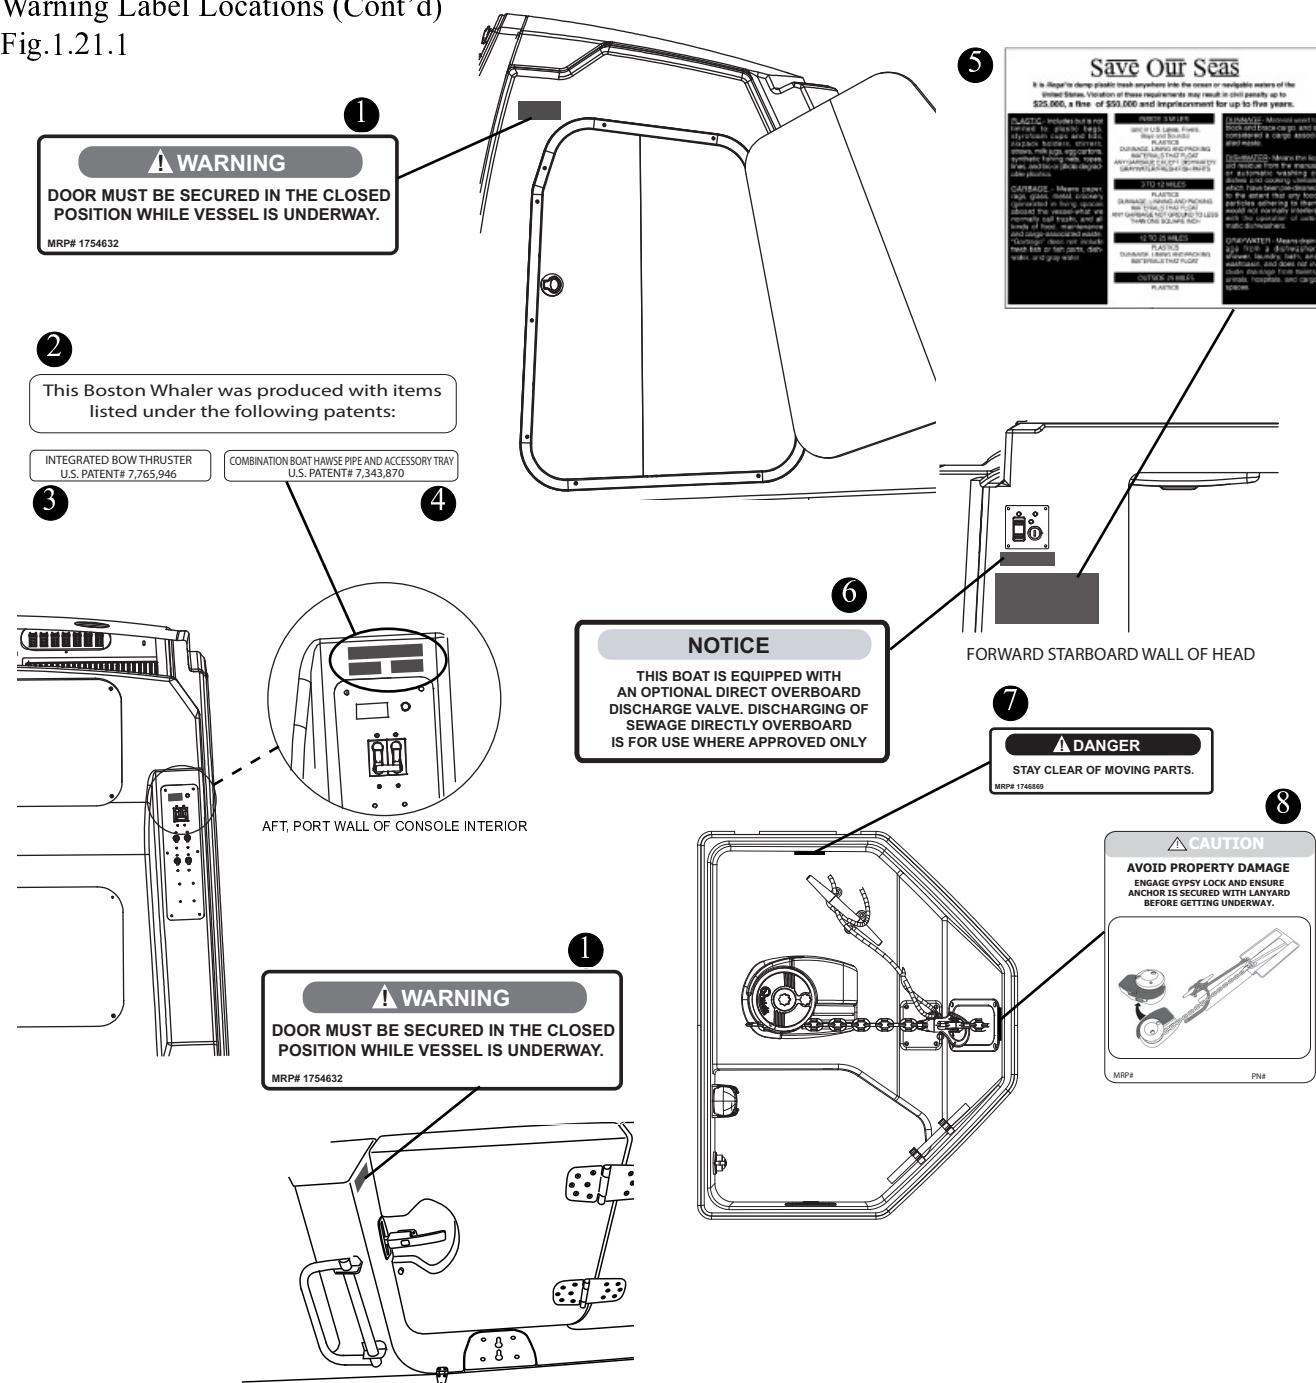

## Replacement Part No.


1	WARNING, DOOR SECURED.....	2063402
2	LABEL, PATENT HEADER.....	2088481
3	LABEL, PATENT BOW THRUSTER .....	2063996
4	LABEL, PATENT HAWSE PIPE/DRINKHOLDER .....	2063995
5	SAVE-OUR-SEAS (DISPOSAL OF GARBAGE).....	2029125
6	NOTICE, OVERBOARD DISCHARGE.....	2063381
7	DANGER, STAY CLEAR OF MOVING PARTS .....	2028932
8	CAUTION, AVOID PROPERTY DAMAGE .....	2147835

**NOTICE**  
It is important to replace any damaged or unreadable label. Call your Boston Whaler dealer for replacement labels.

## Section 1• Safety

### Warning Label Locations (Cont'd)

Fig.1.22.1

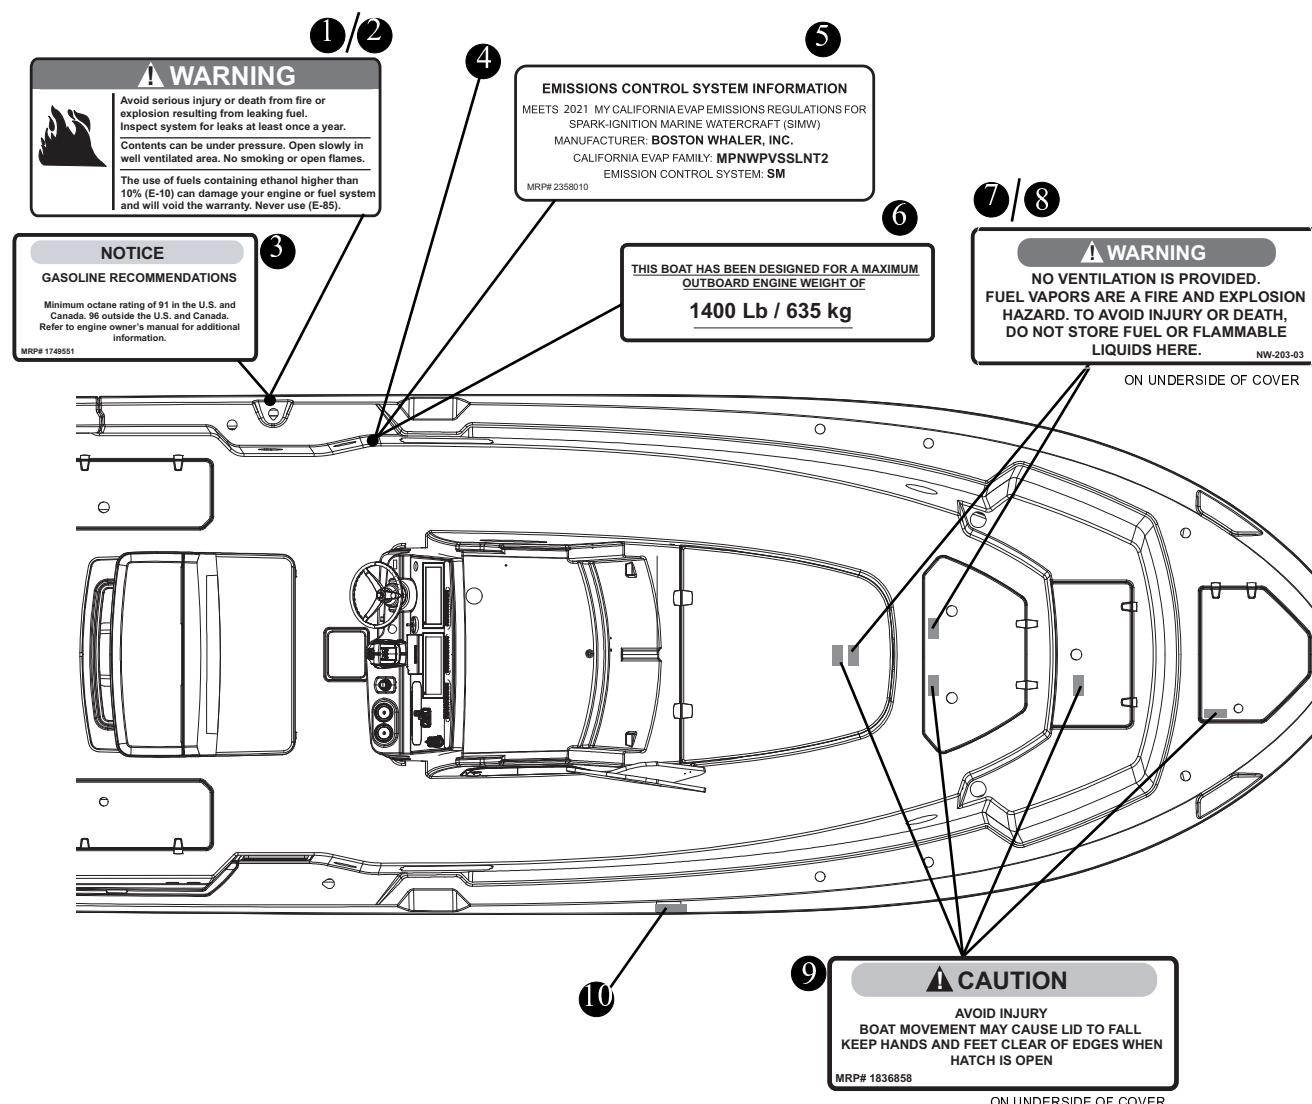

### Replacement Part No.

1	WARNING, FUEL HAZARD .....	2096004
2	CANADIAN CERTIFICATION (OPTION) .....	2175077
3	FUEL RECOMMENDATION .....	2038447
4	BUILDER'S PLATE.....	SEE FIG. 2.2.1
5	LABEL, CALIFORNIA ARB COMPLIANCE .....	2358010
6	MAXIMUM ENGINE WEIGHT .....	1774307
7	WARNING, DO NOT STORE FUEL .....	1691003
8	CANADIAN CERTIFICATION (OPTION) .....	2175076
9	CAUTION, AVOID INJURY, BOAT MOVEMENT .....	1836858
10	SLING TAG (P&S) .....	1743532



















### NOTICE

It is important to replace any damaged or unreadable label. Call your Boston Whaler dealer for replacement labels.

## Section 1 • Safety

### Key to Symbols on Controls & Prints

Although not used in this manual, some of these symbols may be found on the controls, gauges, and hardware on your boat. This page is to help you understand what the symbols mean.

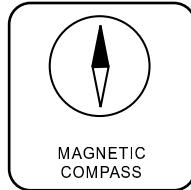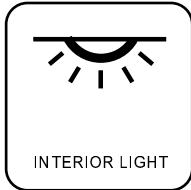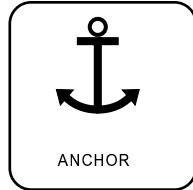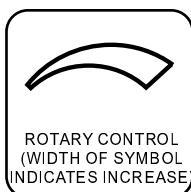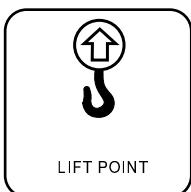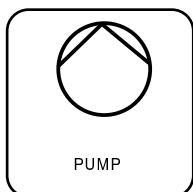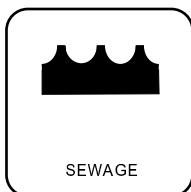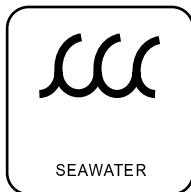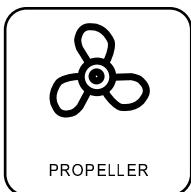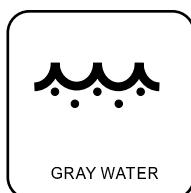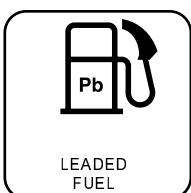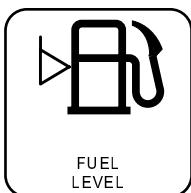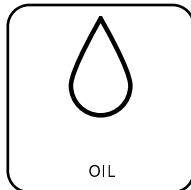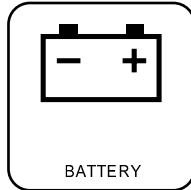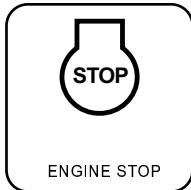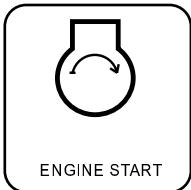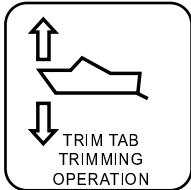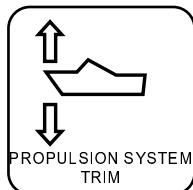

## Section 1• Safety

---

---

THIS PAGE INTENTIONALLY LEFT BLANK

## Section 2 • General Information

### Construction Standards


Boston Whaler® is dedicated to creating a superior product which will provide comfort, performance, safety and dependability. All of our boats comply with the safety standards set by the United States Coast Guard and are designed, engineered and manufactured in accordance with applicable recommendations and guidelines of the American Boat and Yacht Council (A.B.Y.C.) and certified by the National Marine Manufacturers Association (N.M.M.A.).

### Our Hull

Boston Whaler® hulls are constructed with our patented Unibond™ construction process. This involves foam injection into a closed mold system where the foam expands to fill all voids in the hull. When the finished product is pulled from the mold, the hull and deck are chemically bonded to form a solid, inseparable unit.

#### Hull Construction

Fig. 2.1.1

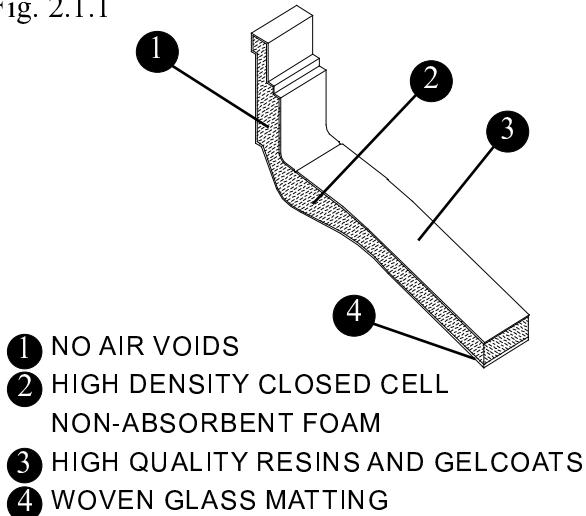


### Hull Identification Number

The "Hull Identification Number" is located on the starboard side of the transom.

This is the most important identifying factor and must be included in all correspondence related to your vessel. Also of vital importance are the engine serial numbers, part numbers, etc. when writing about or ordering parts for your engine.

### Hull Identification Number (HIN)

Fig. 2.1.2

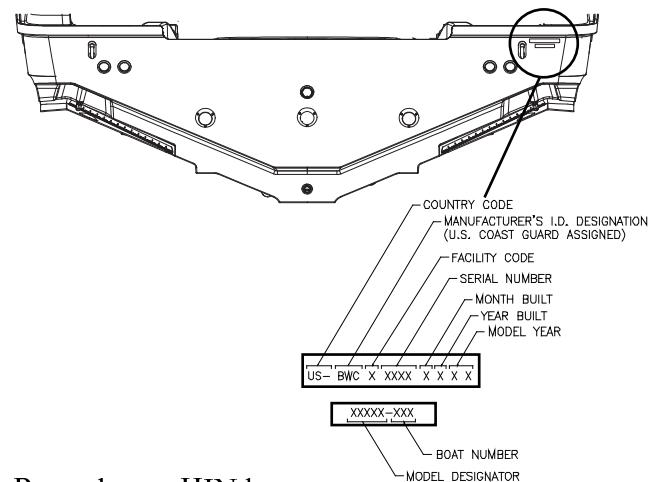

Record your HIN here:

### Servicing Your Boston Whaler

When your Whaler requires service or maintenance work, it should be taken to an authorized Boston Whaler® dealer.

To find a Boston Whaler® dealer in your area call:  
**1-800-942-5379** (Domestic/International).

In the unlikely event that a problem is not handled to your satisfaction, discuss any warranty related problems directly with the service manager of the dealership or your sales person. Give the dealership an opportunity to help the service department resolve the matter for you.

### Manufacturer's Certification

All boats must comply with federal regulations regarding maximum capacities. The certification plate (See figure 2.2.1) located on the port gunwale opposite the operator's console indicates certification by the National Marine manufacturer's Association and in the case of international certification the sticker or plate indicates the maximum weight, number of persons, and horsepower your boat is rated to handle.

## Section 2 • General Information

### ⚠ DANGER

**NEVER carry more weight or passengers than indicated on the certification plate, regardless of the weather or water conditions.**

The number of persons on board must be reduced if you go out in poor weather and rough water.

The information present on the certification plate does not relieve the operator from responsibility. Use common sense and sound judgement when placing equipment and/or passengers in your boat.

- Do not load to capacity in poor weather or rough water.
- The number of seats does not indicate how many people a boat can carry in poor weather or rough water
- Above idle speed, all passengers must be seated on the seats provided or positioned so they can hold onto the hand holds provided (See page 2-6, recommended on-plane locations).

An **NMMA Certification** means that your Boston Whaler® has been judged by the National Marine manufacturers Association to be in compliance with applicable federal regulations and American Boat and Yacht Council standards.

A **Canada Conformity Sticker** means that your Boston Whaler® has been certified to comply with construction standards for small vessels by Transport Canada.

A **CE mark** means that your Boston Whaler® has been certified with the applicable international Organization for Standardization directives.


An **Australian Builder's Plate** means that your Boston Whaler® has been certified with safety standards set by the National Marine Safety Committee.

### Certification Plates


Fig. 2.2.1



Replacement Part No. 125062

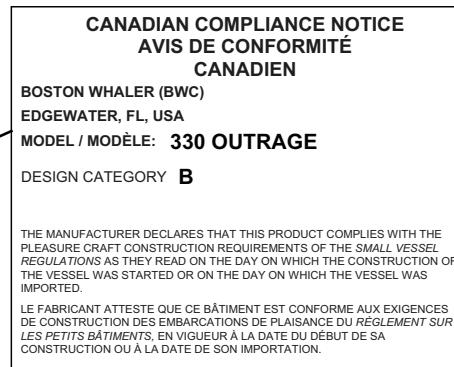

Replacement Part No. 2184718

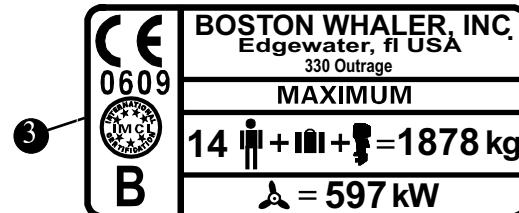

Replace Part No. 2184716



Replacement Part No. 2184717

- 1 NMMA CAPACITIES PLATE
- 2 CANADA CONFORMITY STICKER
- 3 CE MARK BUILDER'S PLATE
- 4 AUSTRALIAN BUILDER'S PLATE

## Section 2 • General Information

### Certification Design Category

**A:** A recreational craft given design category A is considered to be designed for winds that may exceed wind force 8 (Beaufort scale) and significant wave heights of 4 meters and above but excluding abnormal conditions, such as storm, violent storm, hurricane, tornado and extreme sea conditions or rogue waves.

**B:** A recreational craft given design category B is considered to be designed for a wind force up to, and including, 8 and significant wave heights up to, and including 4 m.

**C:** A watercraft given design category C is considered to be designed a wind force up to, and including 6 and significant wave heights up to, and including, 2 m.

**D:** A watercraft given design category D is considered to be designed for a wind force up to, and including 4 and significant wave heights up to, and including, 0,3 m, with occasional waves of 0,5 m maximum height.

The significant wave height is considered to be the primary factor for determining design category. Other parameters (e.g. meteorological) are descriptions of when these wave heights may be expected to occur. Refer to page 1-11 for weather information.

### Power Capacity

The certification plate, as well as “Specifications & Dimensions” on the following page has the maximum rated power listed for your boat. **DO NOT EXCEED THIS RATING.** The various engine types offered today are more powerful and require constant maintenance to stay at optimal performance. It is required of the owner/operator to read all information regarding safety features, warning notices and maintenance schedules for continued safe operation of the engine.

The engine on the 330 Outrage has been tested and proven to be best suited for general use under normal conditions and load.

If you are re-powering your Boston Whaler®, you should pay particular attention to the maximum/minimum horsepower and maximum safe engine weight load your Boston Whaler® boat is rated for.

**The 330 Outrage is designed for a maximum outboard engine weight of 1400 LBS (635 kg).**

### WARNING

**DO NOT Exceed the maximum engine power rating for your boat.**

**Use caution while accelerating. Make sure passengers are safely seated in designated areas of the boat and all gear is stowed securely.**

### NOTICE

**Always adjust the speed and direction of the craft to the varying sea conditions.**

### NOTICE

**The 330 Outrage is category B**




### WARNING

**It is imperative that you follow the recommendations listed on your capacity plate regarding the maximum amount of weight your boat can safely carry.**

## Section 2 • General Information

### Dimensions & Clearances

Fig. 2.4.1

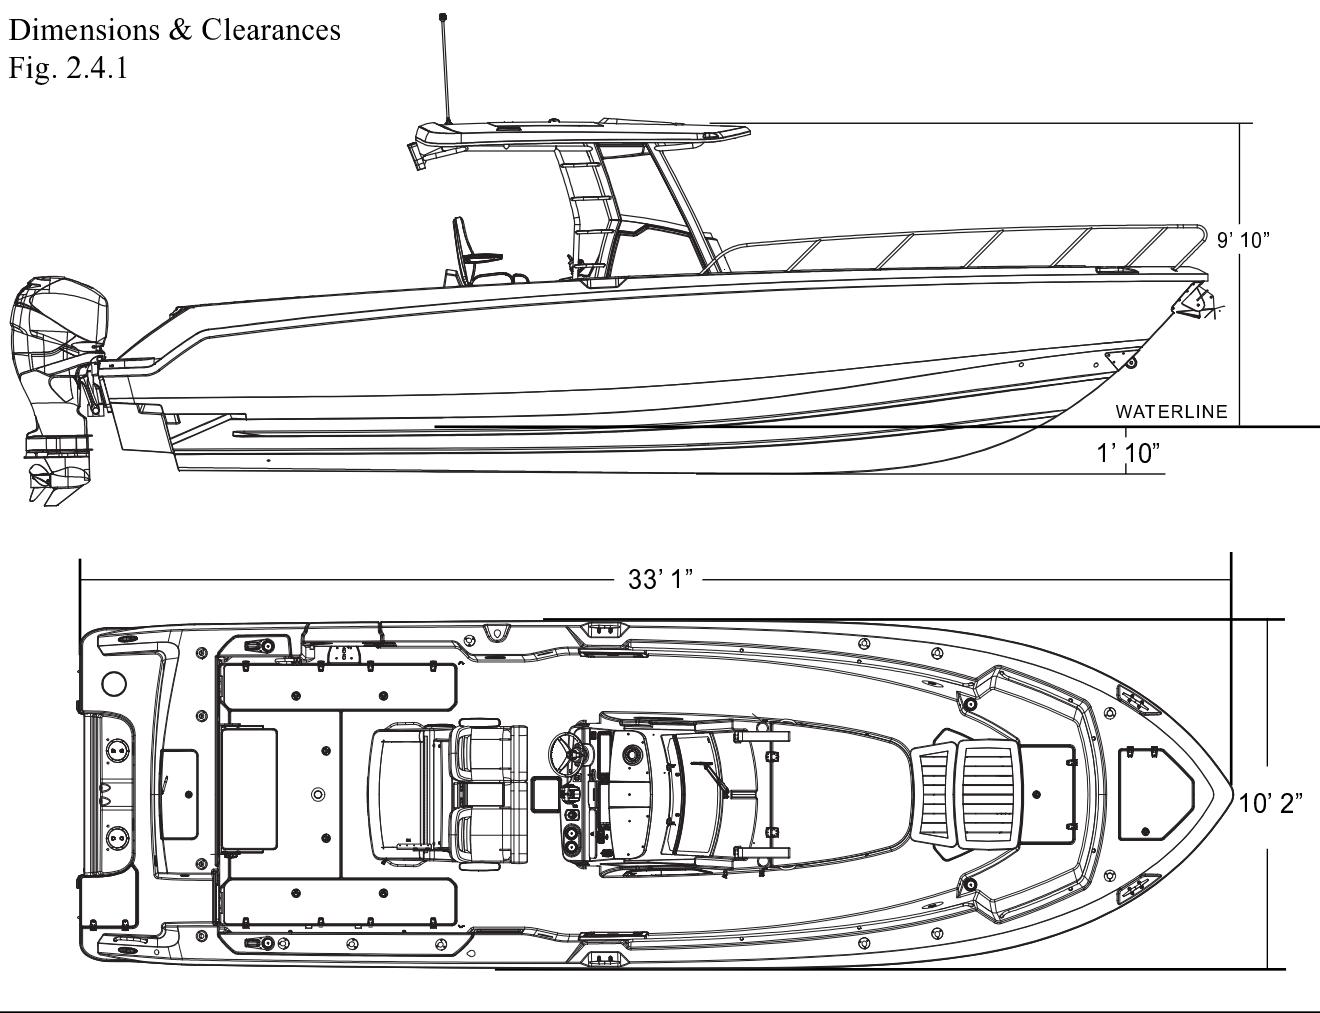

### Specifications & Dimensions

(Specified measurements are approximations and are subject to variance.)

Overall Length	33' 1"	10.08 m	Maximum Weight, (passengers, engine(s), gear) <sup>3</sup>	4140 lbs	1878 kg
Bridge Clearance	9' 10"	3.0 m	Persons	14	
Beam	10' 2"	3.09 m	Maximum Horsepower	700 HP	522 kw
Draft, (hull only) <sup>2</sup>	1' 10"	.55 m	Minimum Horsepower	500 HP	373 kw
Weight (dry, no engine)	9000 lbs.	4083 kg	Fuel Capacity	300 gal.	1135 L
Weight (engine, fuel & water)	12579 lbs.	5705 kg	Water Capacity	40 gal.	151 L
Swamped Capacity	4260 lbs.	1932 kg	Waste Capacity	6.5 gal.	24.6 L
Maximum Engine Weight	1400 lbs.	635 kg			

<sup>1</sup>This is an approximate measurement. The true height of your boat on your trailer is dependent on a number of variables (i.e. bunk adjustment, bunk padding, tire pressure, etc.)

<sup>2</sup>Optional equipment and loading of the boat will affect the draft measurements. Follow the recommendations regarding the maximum amount of weight your boat can safely carry.

<sup>3</sup>Exceeding this weight will affect the boat's performance. **DO NOT** Exceed the weight listed.

### Passenger Areas

#### Deck Occupancy

Fig. 2.5.1

#### Working deck:

This area is intended for occupation ONLY while mooring, anchoring, loading/unloading or when the boat is at rest. NEVER operate the engine while loading or unloading swimmers/divers from the swim platform/ladder.

#### Accommodation deck:


This area of the boat is inside the cockpit and includes helm seating. Movement in this area should be done with extreme caution while the boat is underway. A sudden shift in boat direction can cause a loss of balance and lead to injury or death.

#### ! DANGER

**Be aware of your footing while the boat is underway, slipping or falling could result in serious injury or death, especially if the boat is in motion or in rough seas. Keep the accommodation deck clean, so if movement is necessary it will be free of obstruction.**

#### ! WARNING

- Gelcoat surfaces are slippery when wet. Use extreme caution when walking on wet surfaces.
- Never occupy the working decks while the boat is underway.
- Use care when waxing to ensure that walkways are not made dangerously slippery.

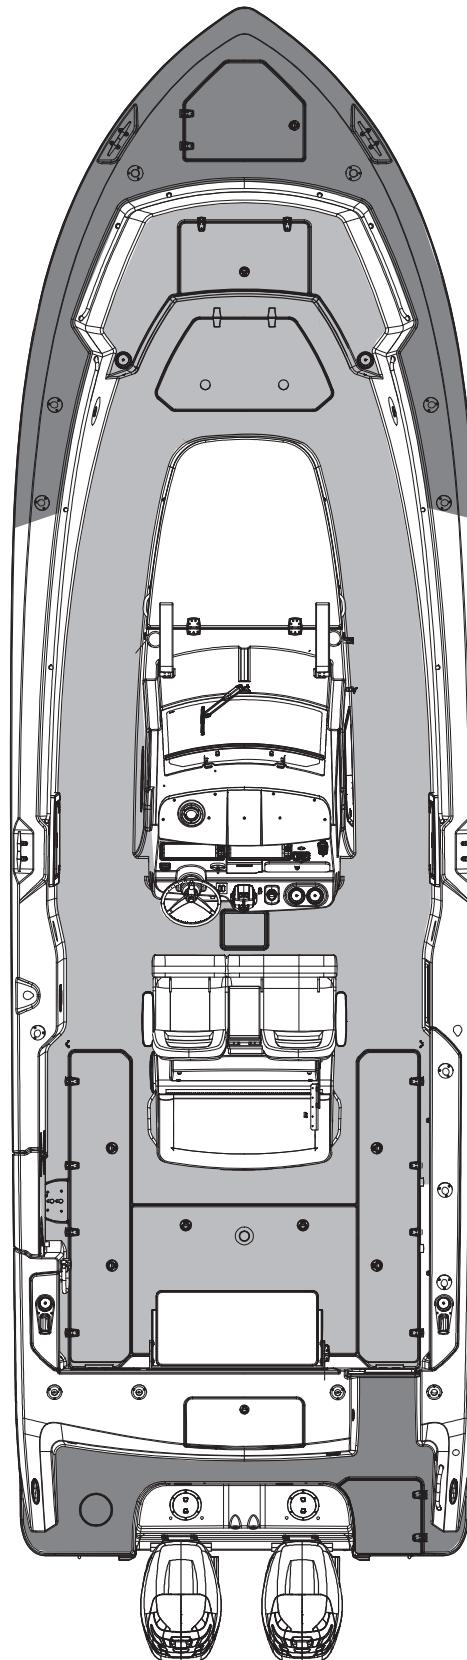


## Section 2 • General Information

### Recommended Passenger Locations


Recommended Seating & On-Plane Locations

Fig. 2.6.1

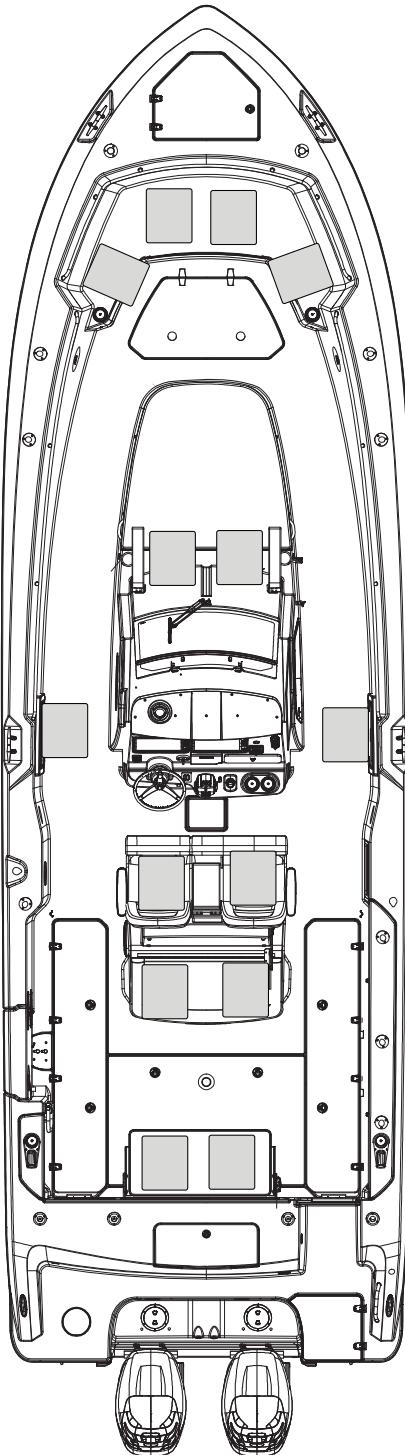

#### WARNING

NEVER allow passengers to ride in an area (i.e. bow, gunnels, transom, etc. that will pose a hazard to themselves or the boat.

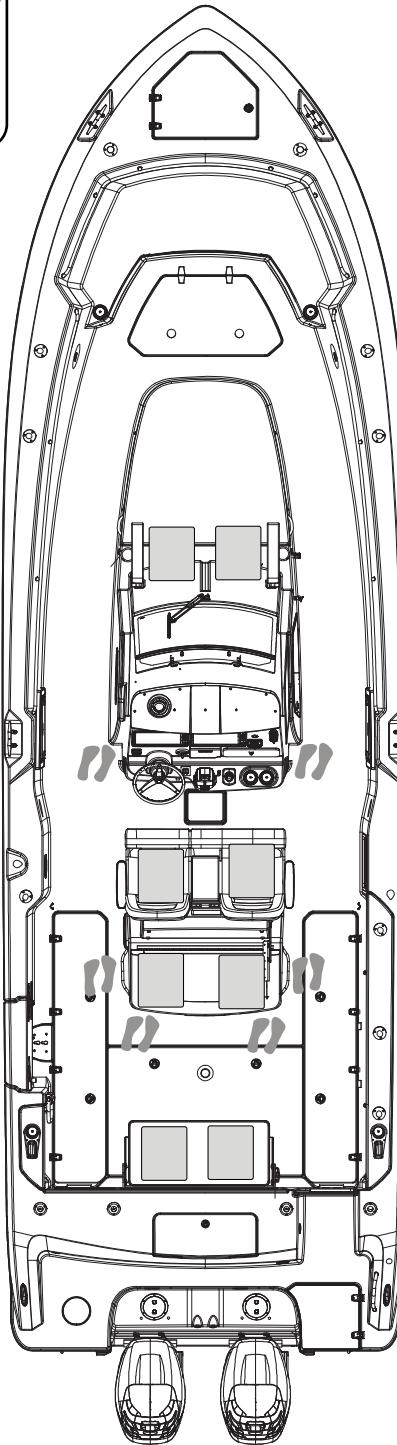

NOTE: Hardtop removed for clarity

**RECOMMENDED SEATING**  
while moored, at idle or at speed under 5 mph


**RECOMMENDED ON-PLANE LOCATIONS**

## Section 2 • General Information

### Location of Thru-Hull Fittings

Thru-Hull Fittings


Fig. 2.7.1

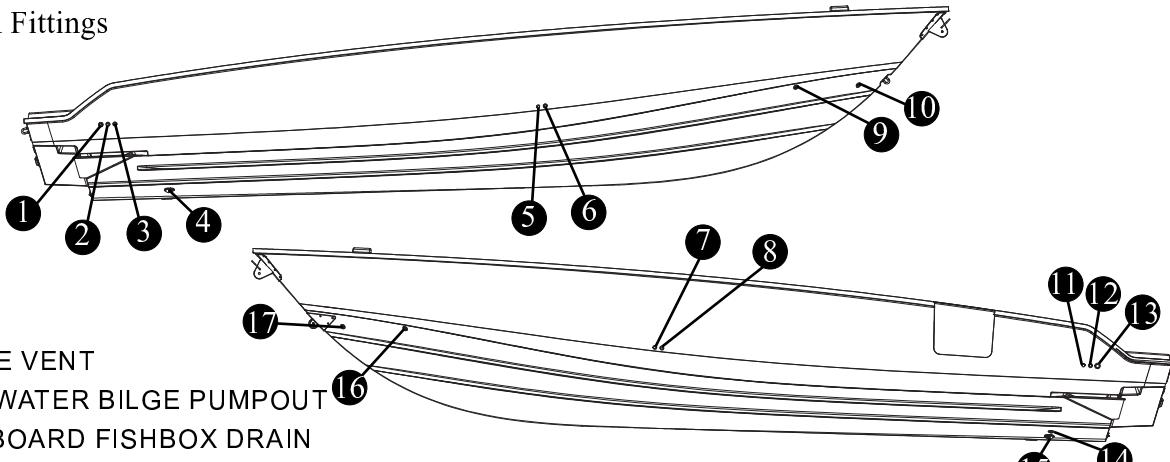

Thru-Hull Fittings, Aft

Fig. 2.7.2

- 1 DECK DRAINS
- 2 LEANING POST LIVEWELL (OPTION),  
STORAGE & SINK DRAIN
- 3 GARBOARD DRAIN

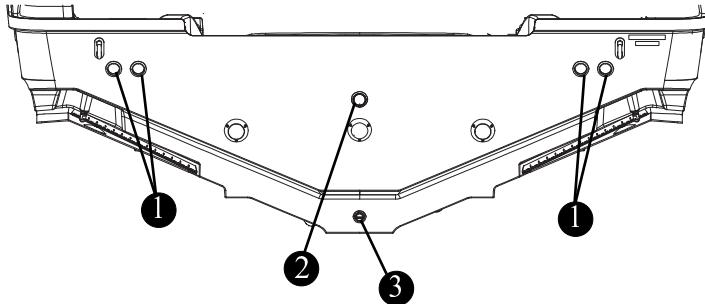

### NOTICE

- The deck drain provides self-bailing capabilities while the boat is static in the water and no passengers on board. This feature prevents the accumulation of water in the cockpit.
- Depending on the type of boat you have, you may have underwater fittings that need drain plugs. Garboard drain plugs and fishbox drain plugs need to be in place before the boat goes into the water. Any fitting that will be underwater needs to be plugged or the seacock needs to be closed.
- Through hull fittings and deck drain scupper flaps should be checked for proper seal annually. When the boat is in the water the underwater fittings can be checked for dripping. It is recommended that the underwater fittings be removed, cleaned and resealed every other year.
- If the through hull fittings need to be replaced, it is recommended that an authorized Boston Whaler® dealer perform this type of repair. Through hull fittings that are improperly installed can cause premature hull failure and may void the Boston Whaler® limited warranty.
- A standard 1" "Snap-Tite" plug can be used to replace the drain plug(s) in your boat. It is recommended that you carry spare plugs to be used in the event that the drain plug(s) become lost or damaged.


## Section 2 • General Information

### General Layout

General Layout, Deck

Fig. 2.8.1

- 1 ANCHOR LOCKER
- 2 BOW CLEATS (10" P&S)
- 3 ROD HOLDERS (14)
- 4 BOW SEAT STORAGE
- 5 BOW SEATING
- 6 LOW PROFILE INTERIOR BOW RAIL
- 7 CUP HOLDERS
- 8 FORWARD IN-DECK STORAGE
- 9 CONSOLE FORWARD LOUNGE W/LOCKABLE STORAGE
- 10 LOUNGE FLIP-DOWN ARM RESTS
- 11 WINDSHIELD WIPER
- 12 MAGNETIC COMPASS
- 13 FOLD AWAY TROLLING SEAT (P&S) (OPTION)
- 14 SPRING LINE CLEATS (10" P&S)
- 15 COMPANION SEAT
- 16 FUEL FILL DECK PLATE
- 17 LEANING POST W/STORAGE UNDERNEATH
- 18 DIVE LADDER BRACKET
- 19 DIVE DOOR
- 20 INSULATED FISHBOX W/PUMPOUT (P&S)
- 21 HAWSE PIPE W/CUPHOLDER (P&S)
- 22 TRANSOM CROSS TIE CLEATS (8" P&S)
- 23 WASTE PUMPOUT DECK PLATE
- 24 FOUR STROKE MERCURY ENGINES
- 25 50 GAL TRANSOM LIVEWELL
- 26 TELESCOPING SWIM LADDER WITH COVER
- 27 STAINLESS STEEL GRAB RAIL
- 28 TRANSOM FRESH WATER SPRAYER
- 29 TRANSOM DOOR
- 30 FOLD AWAY STERN BENCH SEAT
- 31 COCKPIT DECK MECHANICAL HATCH
- 32 FRESH WATER FILL DECK PLATE
- 33 CAPTAIN'S CHAIR
- 34 MID DECK ACCESS HATCH
- 35 CONSOLE
- 36 HEAD ACCESS DOOR
- 37 ELECTRICALLY ADJUSTABLE WINDSHIELD VENT
- 38 WINDSHIELD
- 39 ADJUSTABLE BOW TABLE (OPTION)

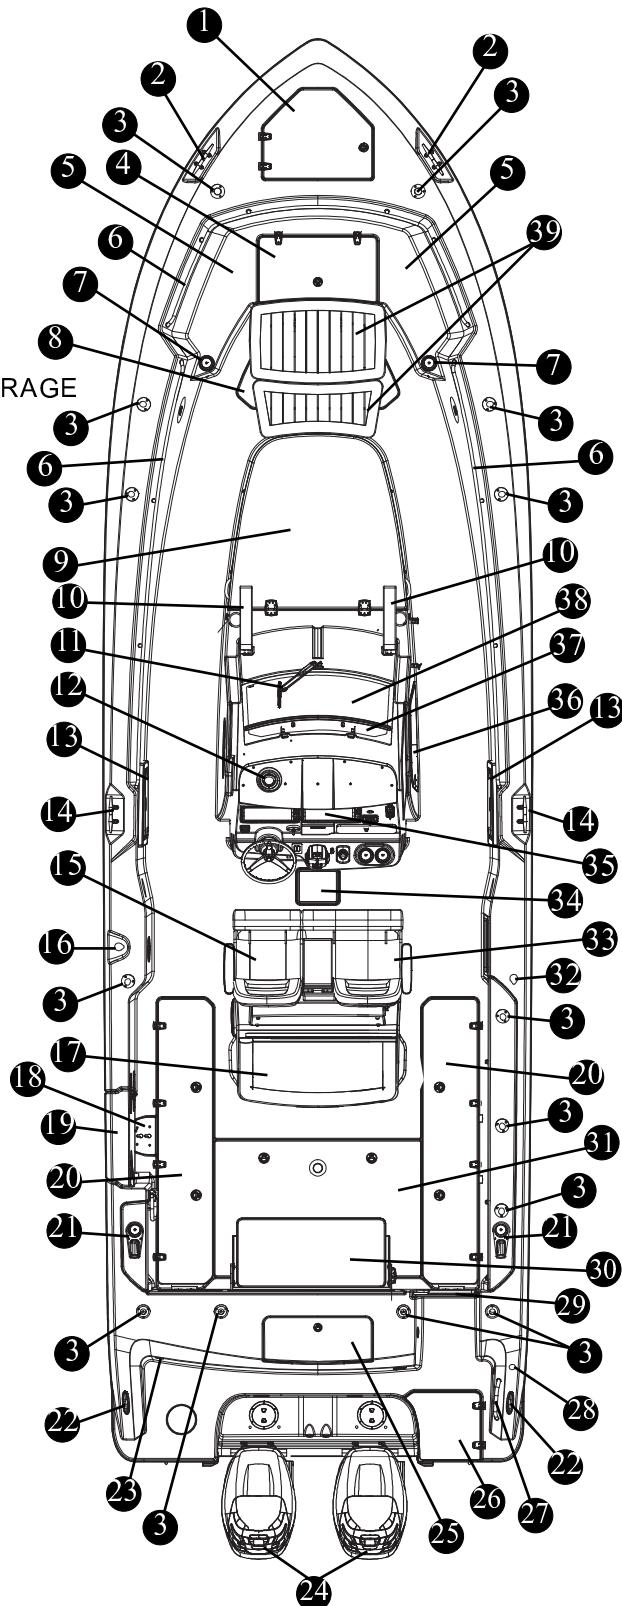


## Section 2 • General Information

### Control Station Features

Fig. 2.9.1

- 1 ELECTRONIC SWITCH PANELS
- 2 RAYMARINE AXIOM PRO S 12" SCREEN ADDITIONAL DISPLAY PACKAGE (OPTION)\*
- 3 VHF RADIO
- 4 STEREO REMOTE
- 5 VESSEL VIEW
- 6 LOCKABLE STORAGE BOX
- 7 USB DUAL INPUT
- 8 CUPHOLDERS
- 9 12V ACCESSORY RECEPTACLE
- 10 JOYSTICK PILOTING TOGGLE (OPTION)
- 11 GEAR SHIFT/THROTTLE
- 12 AMBIENT TEMPERATURE SENSOR
- 13 ENGINES ON/OFF SWITCH
- 14 TRIM TAB CONTROL PAD
- 15 ENGINE SHUT OFF SWITCH
- 16 STAINLESS STEEL STEERING WHEEL

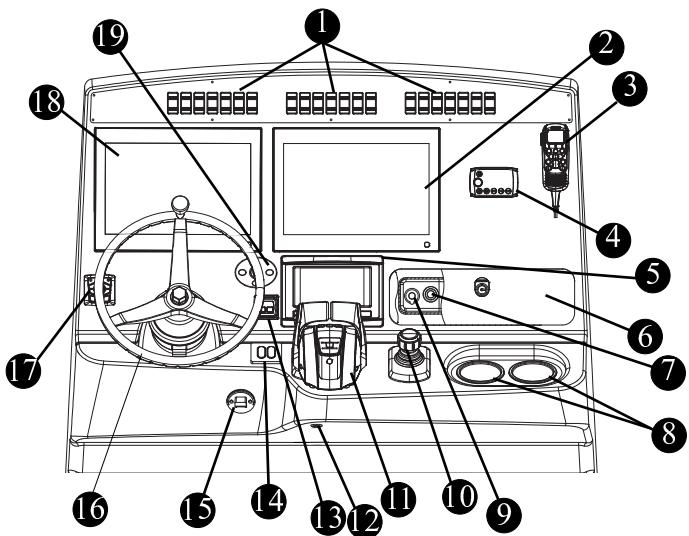

- 17 AUTOPILOT (OPTION)
- 18 RAYMARINE AXIOM PRO RVX, 12" SCREEN ELECTRONICS/NAVIGATION PACKAGE (OPTION)\*
- 19 SPOTLIGHT TOGGLE (OPTION)

\*Optional screens available:


- 12" Raymarine AXIOM RV 12.1" screen electronics/navigation package
- 12" Raymarine AXIOM 12.1" screen additional display electronics package\*\*
- 16" Raymarine AXIOM PRO RVX 15.6" screen electronics/navigation package w/CHIRP sonar
- 16" Raymarine AXIOM PRO S 15.6" screen electronics/navigation package w/CHIRP sonar
- 16" Raymarine AXIOM XL 15.6" screen electronics/navigation package

\*\* Must select Navigation Package (Not compatible with Vessel View 7)

## Section 2 • General Information

### General Layout, Bilge

Fig. 2.10.1

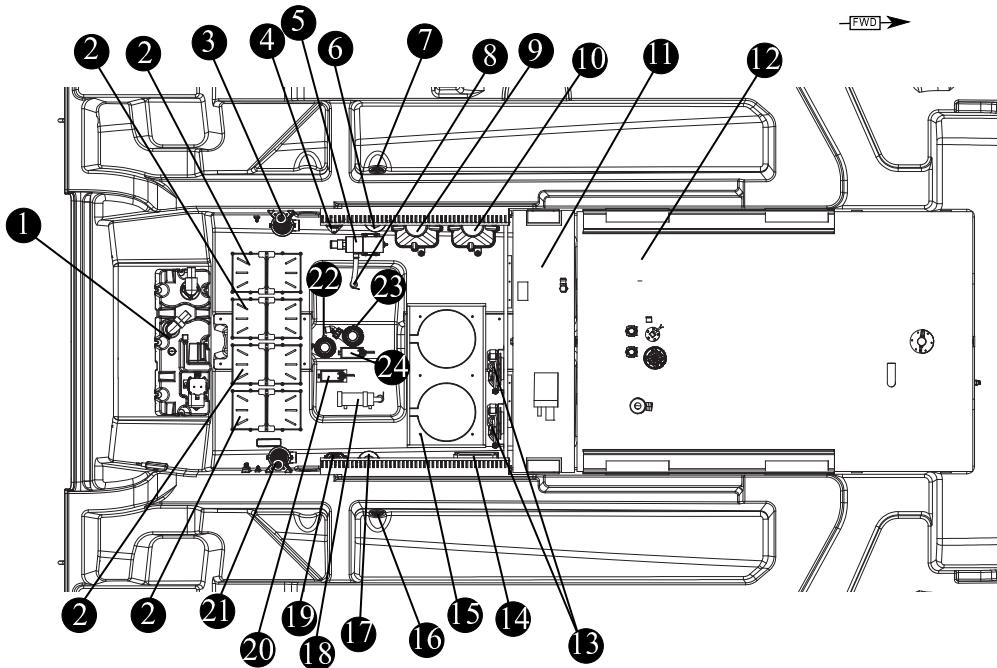


- 1 6.5 GAL. (24.6 L) WASTE HOLDING TANK  
W/PUMPOUT
- 2 BATTERY TRAYS
- 3 PORT FISHBOX PUMPOUT
- 4 FRESHWATER PUMP
- 5 MACERATOR
- 6 PORT ENGINE FUEL/WATER SEPARATOR
- 7 PORT FISHBOX DRAIN
- 8 WASTE SYSTEM OVERBOARD DISCHARGE SEACOCK
- 9 POWER STEERING PUMP
- 10 POWER STEERING PUMP (JOYSTICK OPTION)
- 11 40 GAL (151.4 L) FRESH WATER TANK
- 12 300 GAL (1136 L) FUEL TANK
- 13 JOYSTICK PILOTING ELECTRONICS PANEL (OPTION)
- 14 BATTERY CHARGER

- 15 BILGE STORAGE SHELF
- 16 STARBOARD FISHBOX DRAIN
- 17 STARBOARD ENGINE FUEL/WATER SEPARATOR
- 18 TRANSOM LIVEWELL/RAW WATER SYSTEM INTAKE SEACOCK
- 19 RAW WATER PUMP
- 20 HIGH WATER AUTOMATIC FLOAT SWITCH
- 21 STARBOARD FISHBOX PUMPOUT
- 22 2000 GPH (7571 LPH) HIGH WATER BILGE PUMP
- 23 2000 GPH (7571 LPH) BILGE PUMP
- 24 AUTOMATIC FLOAT SWITCH

## Section 2 • General Information

### General Layout, Leaning Post

Fig. 2.11.1

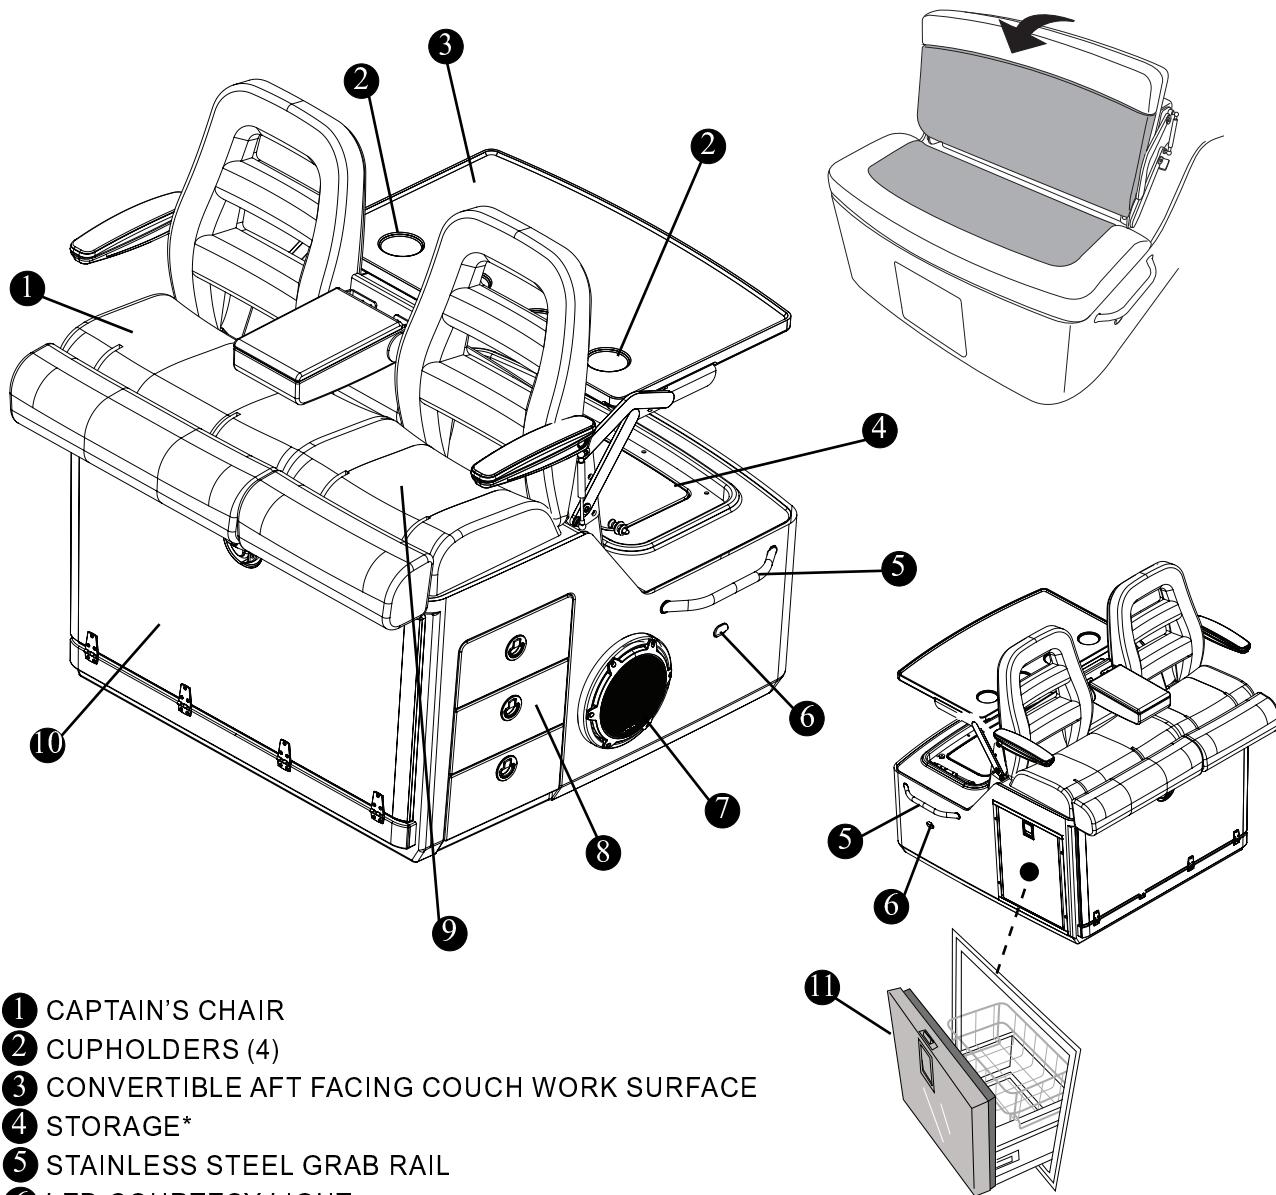


- 1 CAPTAIN'S CHAIR
- 2 CUPHOLDERS (4)
- 3 CONVERTIBLE AFT FACING COUCH WORK SURFACE
- 4 STORAGE\*
- 5 STAINLESS STEEL GRAB RAIL
- 6 LED COURTESY LIGHT
- 7 WATERPROOF STEREO SPEAKER
- 8 STORAGE DRAWERS (3)
- 9 COMPANION SEAT
- 10 FLIP DOWN VISIBILITY PLATFORM
- 11 12/120V REFRIGERATOR (OPTION)

\* 40 gal. (151.4 L) livewell available (Option)

## Section 2 • General Information

General Layout, Leaning Post w/cooler (Option)

Fig. 2.12.1

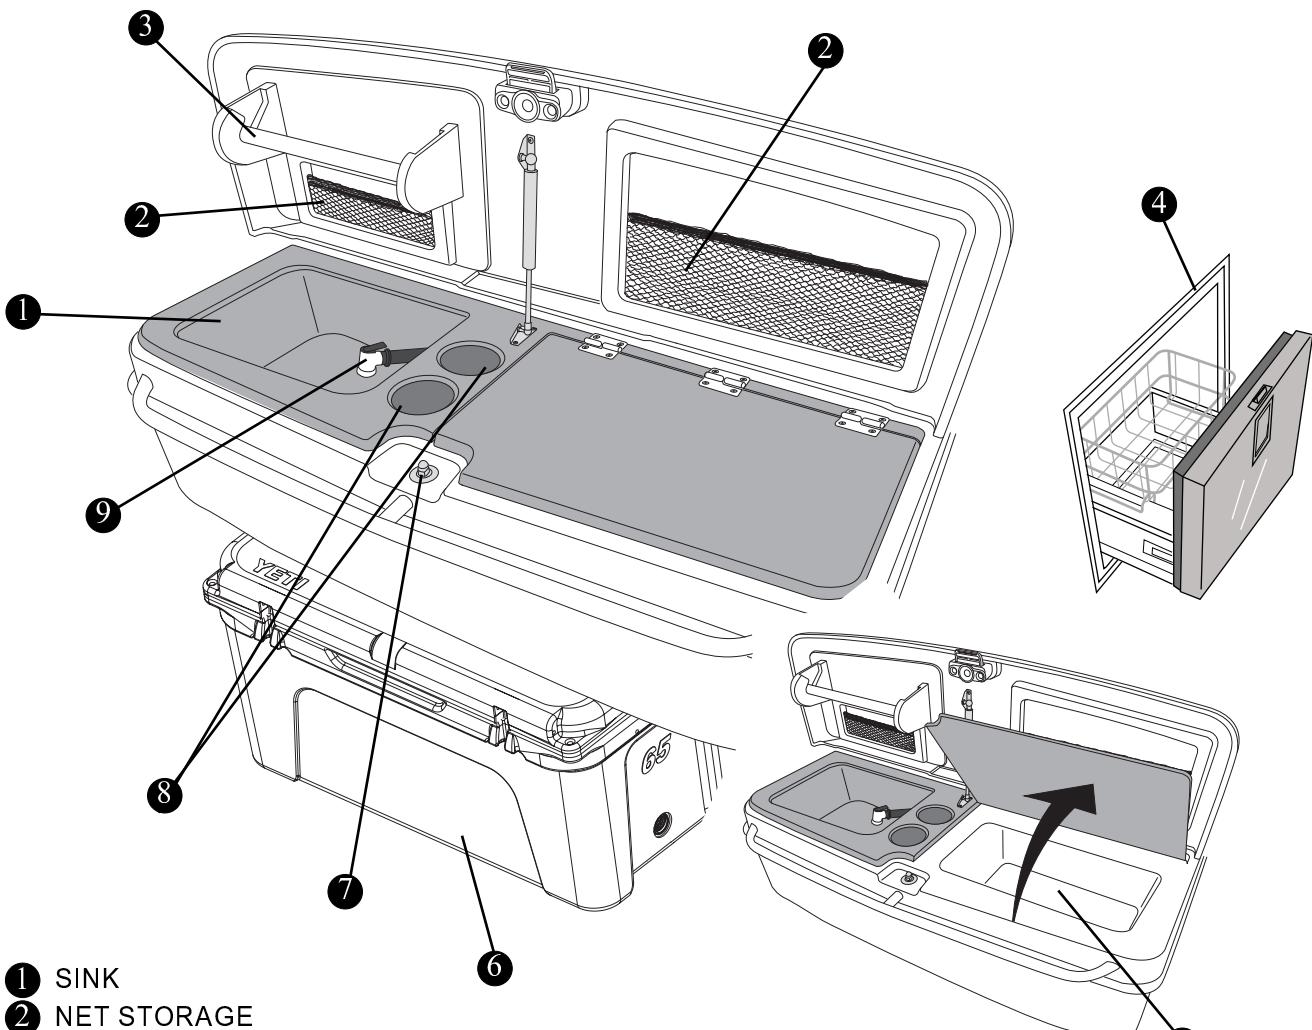


- 1 SINK
- 2 NET STORAGE
- 3 TOWEL RACK
- 4 12/120V REFRIGERATOR (OPTION)\*
- 5 STORAGE
- 6 YETI COOLER
- 7 COVER LATCH
- 8 CUPHOLDERS (2)
- 9 SPRAYER W/EXTENDABLE HOSE

\* Located under captains chair if equipped.

## Section 2 • General Information


General Layout, Summer Kitchen (Option)

Fig. 2.13.1

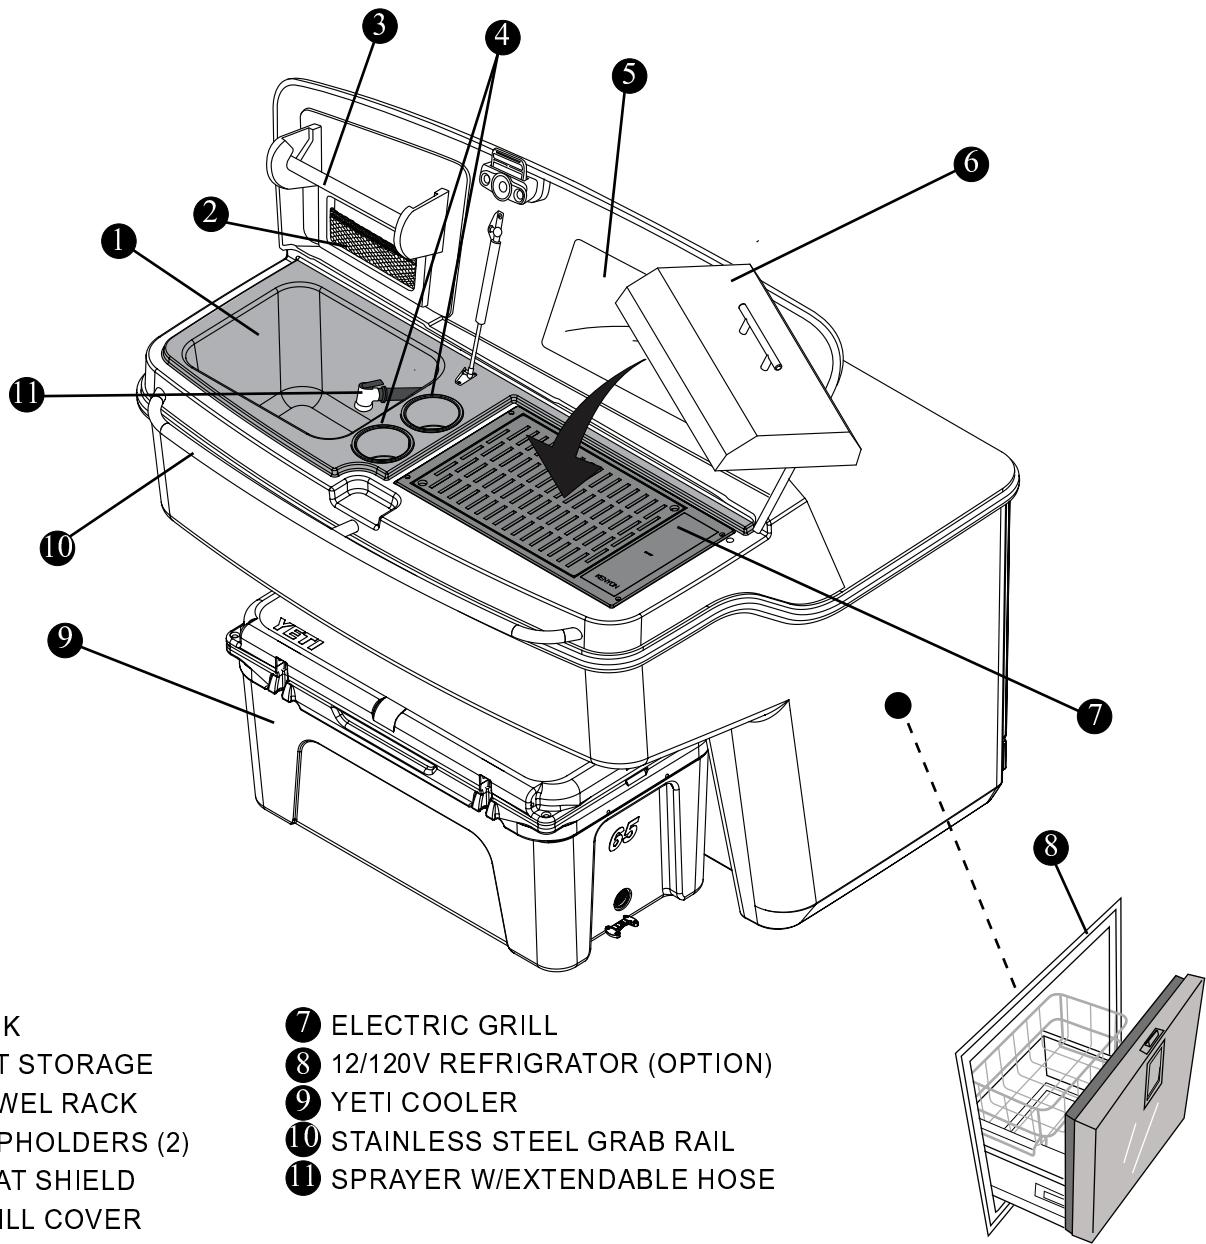

## Section 2 • General Information

General Layout, Console Interior (Head)  
Fig. 2.14.1

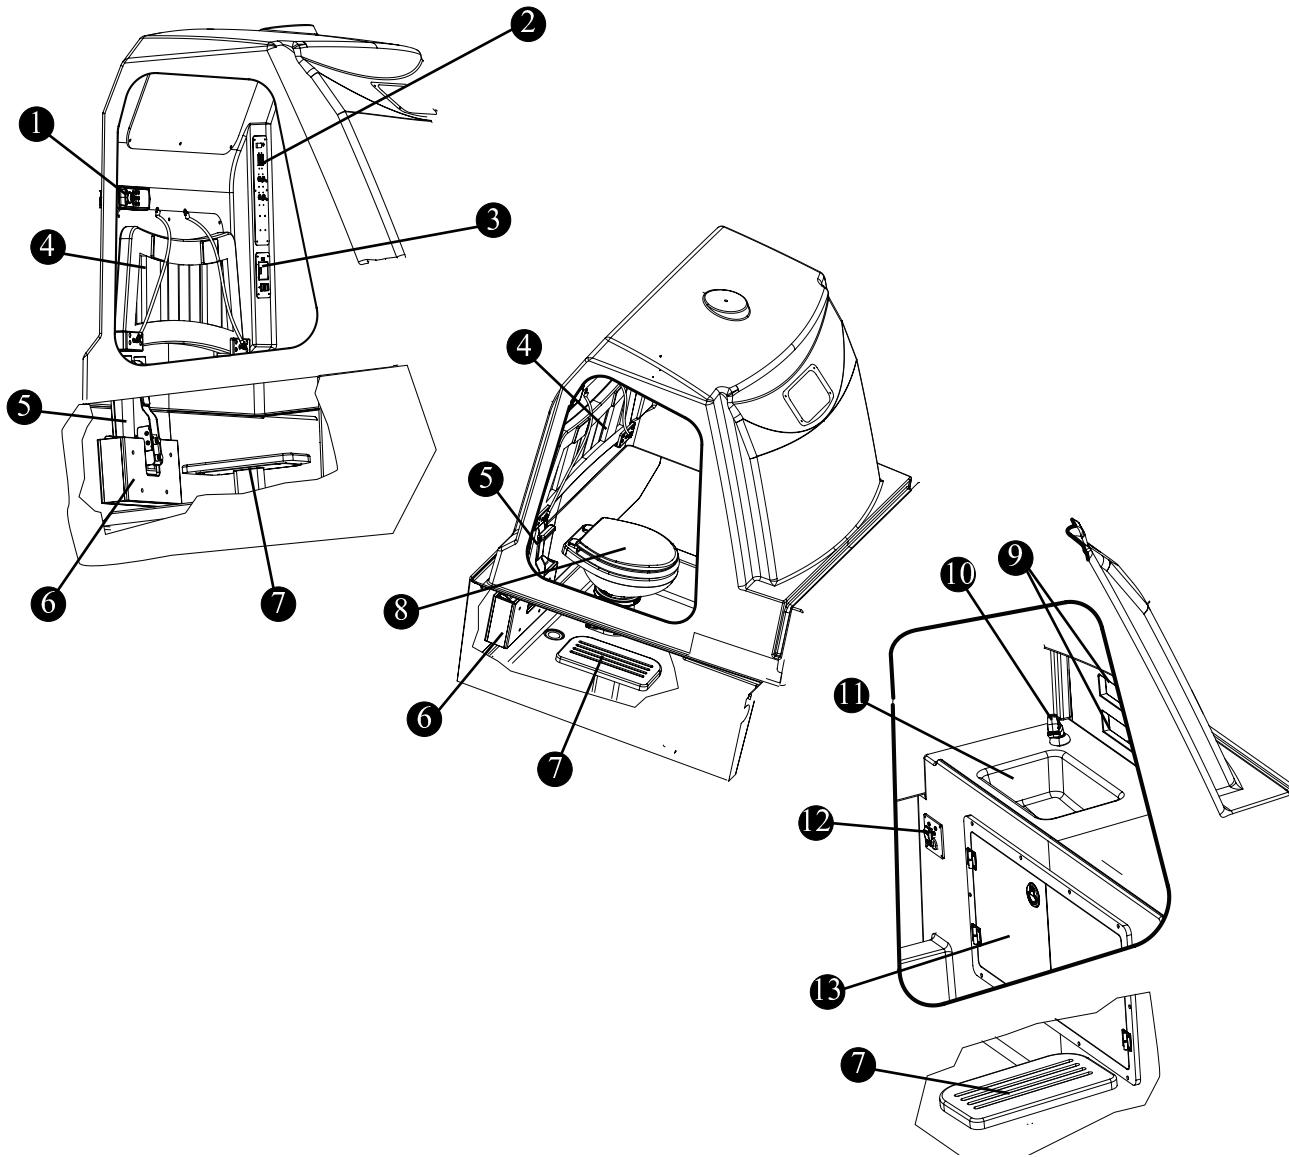


- 1 FUSION® STEREO W/IPOD/IPHONE DOCK, AM/FM/USB, SIRIUS XM READY, MP3 & USB INPUTS
- 2 AC MDP
- 3 INVERTER SWITCH PANEL (OPTION)
- 4 SUN LOUNGE FILLER (STOWED)
- 5 DIVE LADDER (STOWED)
- 6 DEDICATED STORAGE FOR DIVE LADDER


- 7 ENTRY STEP
- 8 VACU-FLUSH TOILET
- 9 PASS THROUGH SLOTS FOR ROD STORAGE
- 10 EXTENDABLE SPRAYER
- 11 SINK
- 12 WASTE DISCHARGE PANEL
- 13 STORAGE

## Section 2 • General Information

General Layout, Hardtop  
Fig. 2.15.1

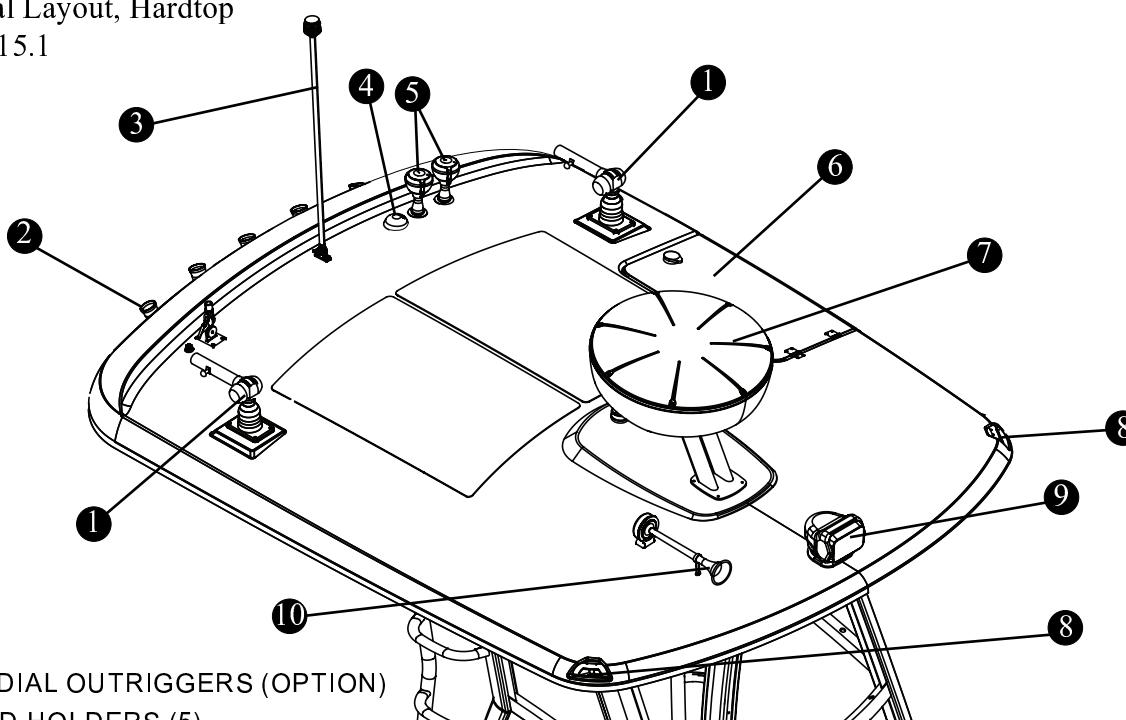

- 1 RADIAL OUTRIGGERS (OPTION)
- 2 ROD HOLDERS (5)
- 3 ANCHOR LIGHT
- 4 SIRIUS® SATELLITE ANTENNA (OPTION)
- 5 GPS ANTENNA (OPTION)
- 6 HARDTOP ACCESS HATCH
- 7 RAYMARINE 4KW 24" HD DIGITAL RADOME (OPTION)\*
- 8 NAVIGATION LIGHTS
- 9 SPOTLIGHT (OPTION)
- 10 ELECTRIC HORN
- 11 ELECTRICALLY ACTUATED WINDSHIELD VENT

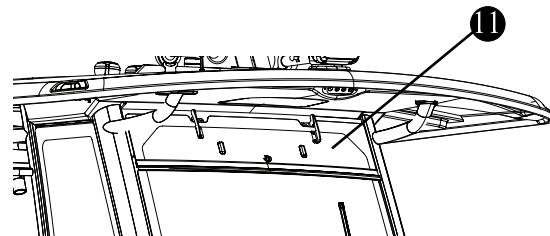

\*Also available:

- Raymarine 4kW HD digital radar w/48" Open Array antenna


### ! CAUTION

Accent lights are not to be used when navigational lights are in use as this may interfere with the effectiveness of the navigational lights.

General Layout, Anchor Locker  
Fig. 2.15.2

- 1 WINDLASS
- 2 ANCHOR CHAIN SAFETY LANYARD
- 3 ANCHOR CLEAT
- 4 CHAIN (25')\*
- 5 EMERGENCY HANDLE
- 6 FRESH WATER INLET
- 7 WINDLASS REMOTE
- 8 WINDLASS REMOTE POWER


\* 200' Rode

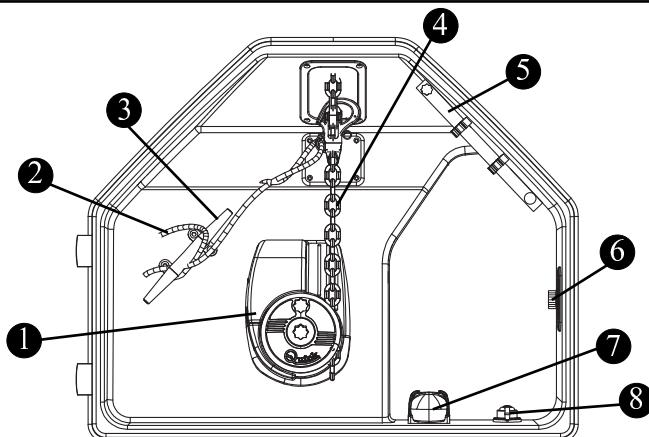

## Section 2 • General Information

General Layout, port aft gunwale/transom

Fig. 2.16.1

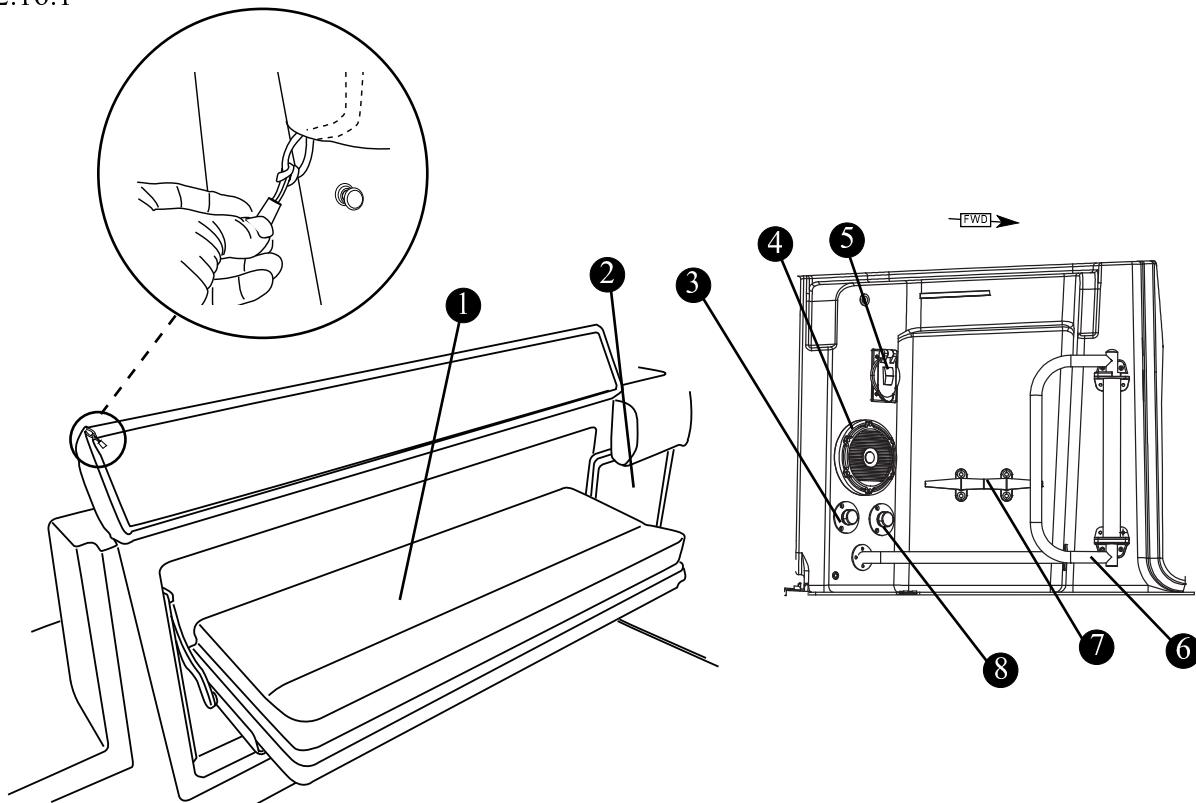

1 STERN FOLDAWAY SEAT

2 STORAGE

3 FRESH WATER CONNECTION

4 WATERPROOF STEREO SPEAKER

5 125V/30AMP SHORE POWER REC'PT. FOR ELECTRIC  
REELS AND/OR DOWNRIGGERS (P&S) (OPTION)


6 DIVE DOOR FOLD AWAY GRAB RAIL

7 STERN CLEAT (P&S)

8 RAW WATER CONNECTION

General Layout, starboard gunwale

Fig. 2.16.2

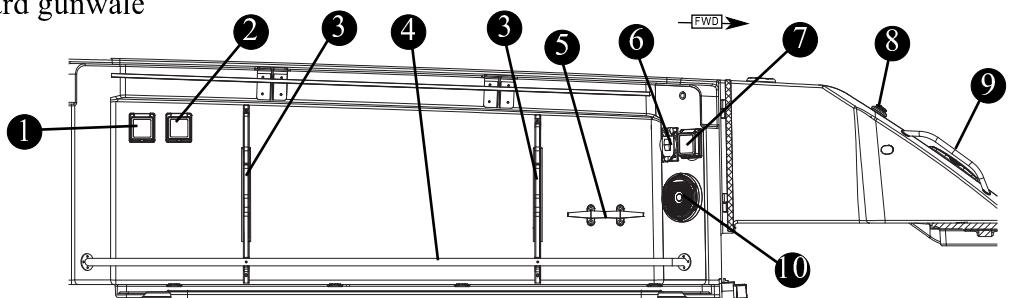

1 SHORE POWER MAIN BREAKER

2 ELCI (EQUIPMENT LEAKAGE CIRCUIT INTERRUPTER)

3 UNDER GUNNEL ROD RACKS

4 FOOT KICK ROD

5 STERN CLEAT (P&S)

6 125V/30AMP SHORE POWER REC'PT. FOR ELECTRIC  
REELS AND/OR DOWNRIGGERS (P&S) (OPTION)

7 SHORE POWER RECEPTACLE

8 AFT FRESH WATER SPRAYER

9 STAINLESS STEEL GRAB RAIL


10 WATERPROOF STEREO SPEAKER

## Section 2 • General Information

### Control Station Switch Panel

Switch Panel


Fig. 2.17.1

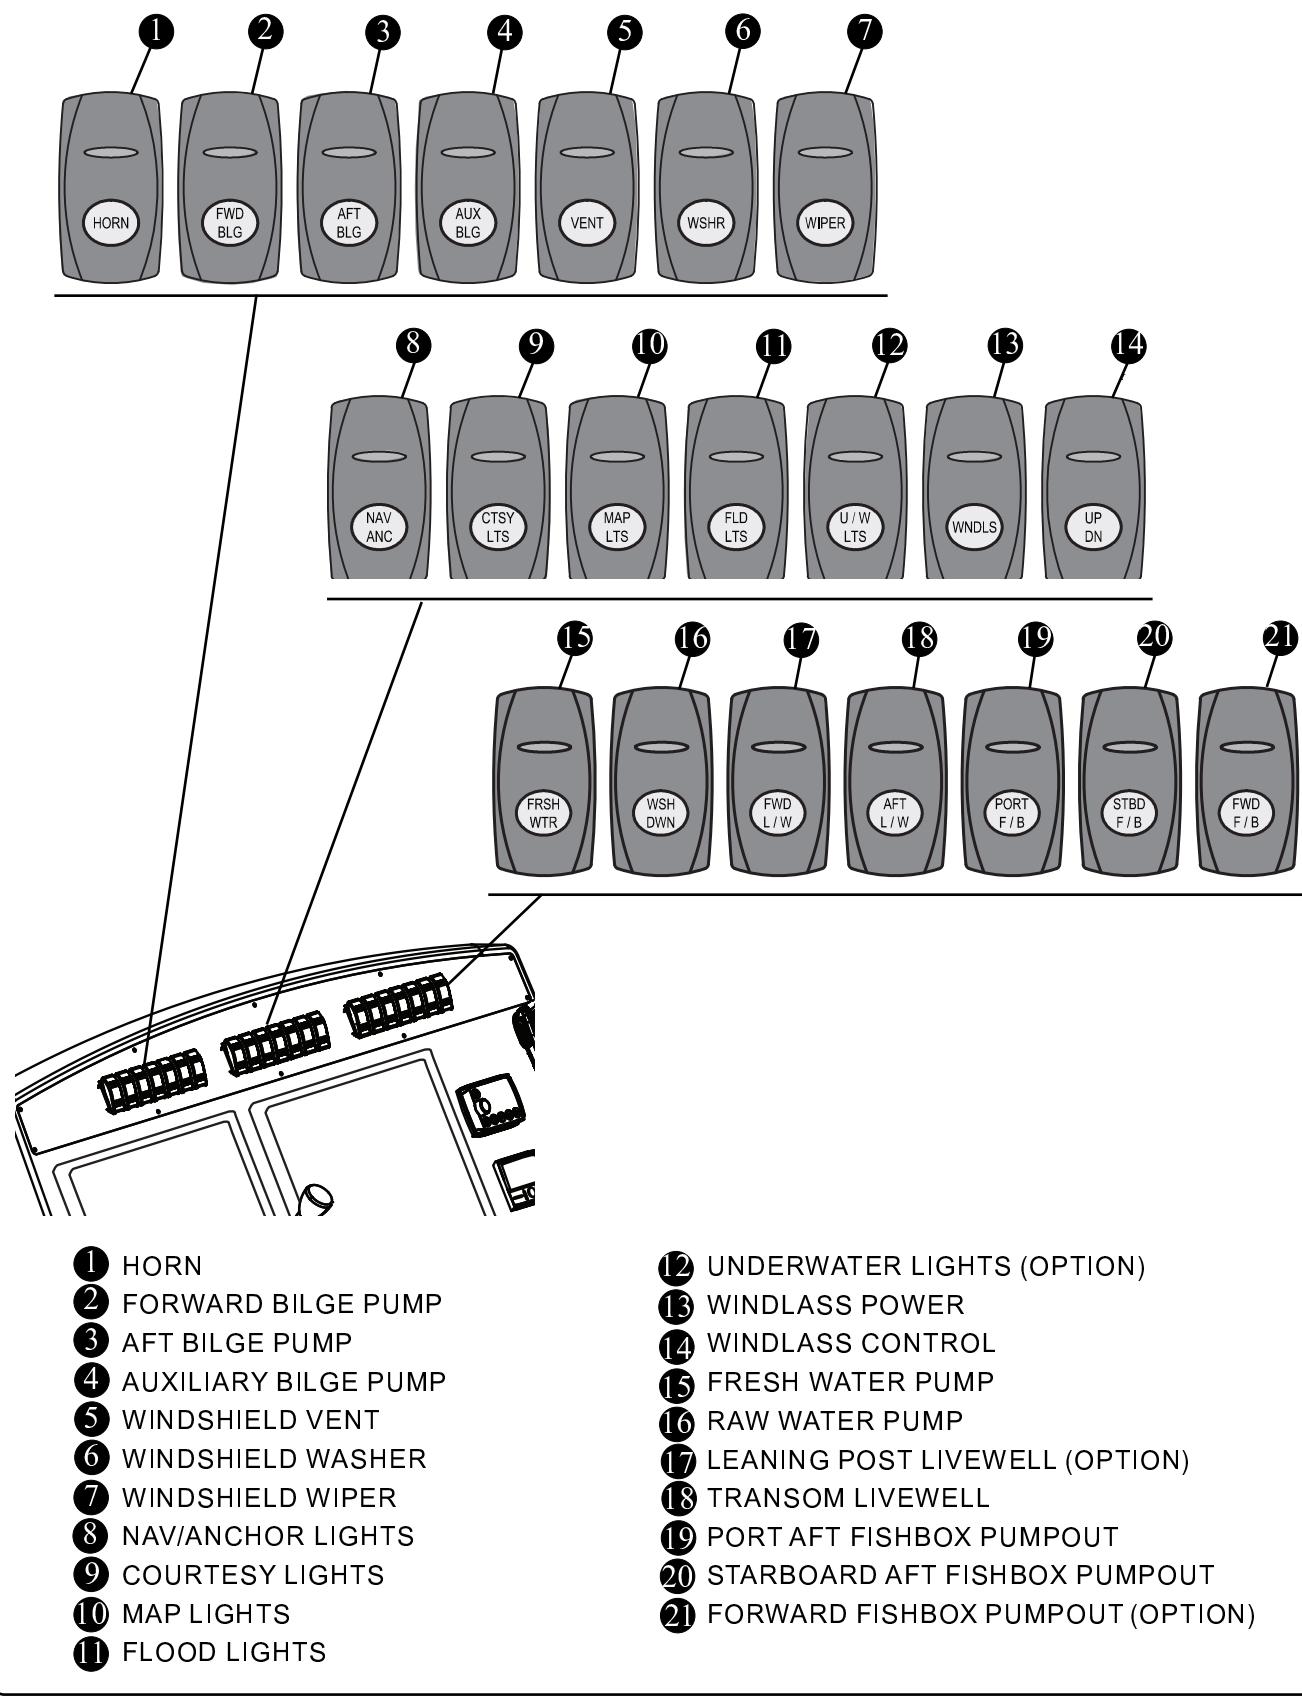

## Section 2 • General Information

### Storage

Storage  
Fig. 2.18.1

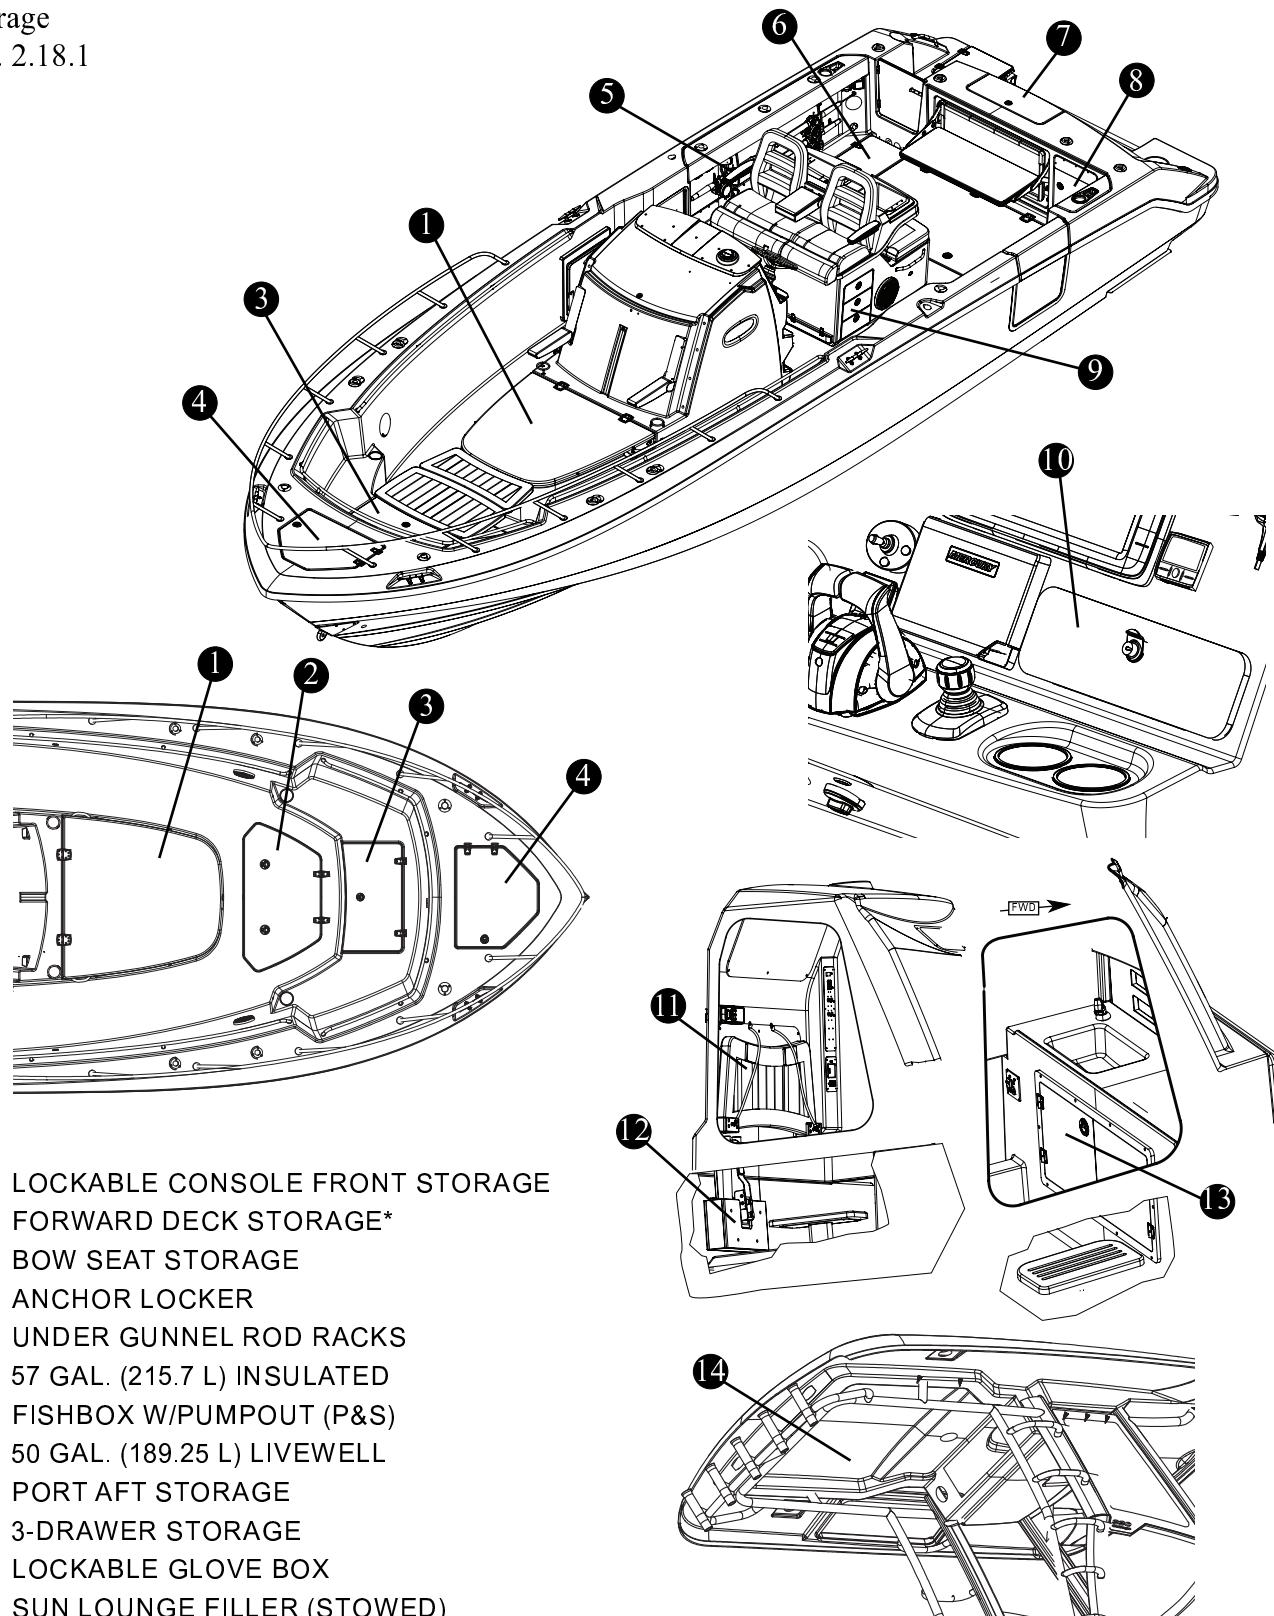

- 1 LOCKABLE CONSOLE FRONT STORAGE
- 2 FORWARD DECK STORAGE\*
- 3 BOW SEAT STORAGE
- 4 ANCHOR LOCKER
- 5 UNDER GUNNEL ROD RACKS
- 6 57 GAL. (215.7 L) INSULATED FISHBOX W/PUMPOUT (P&S)
- 7 50 GAL. (189.25 L) LIVEWELL
- 8 PORT AFT STORAGE
- 9 3-DRAWER STORAGE
- 10 LOCKABLE GLOVE BOX
- 11 SUN LOUNGE FILLER (STOWED)
- 12 DIVE LADDER STORAGE RACK
- 13 CONSOLE INTERIOR STORAGE
- 14 LIFE JACKET STORAGE


\* Forward Fishbox w/Pumpout (Option)

## Section 2 • General Information

### Seating

Seating

Fig. 2.19.1

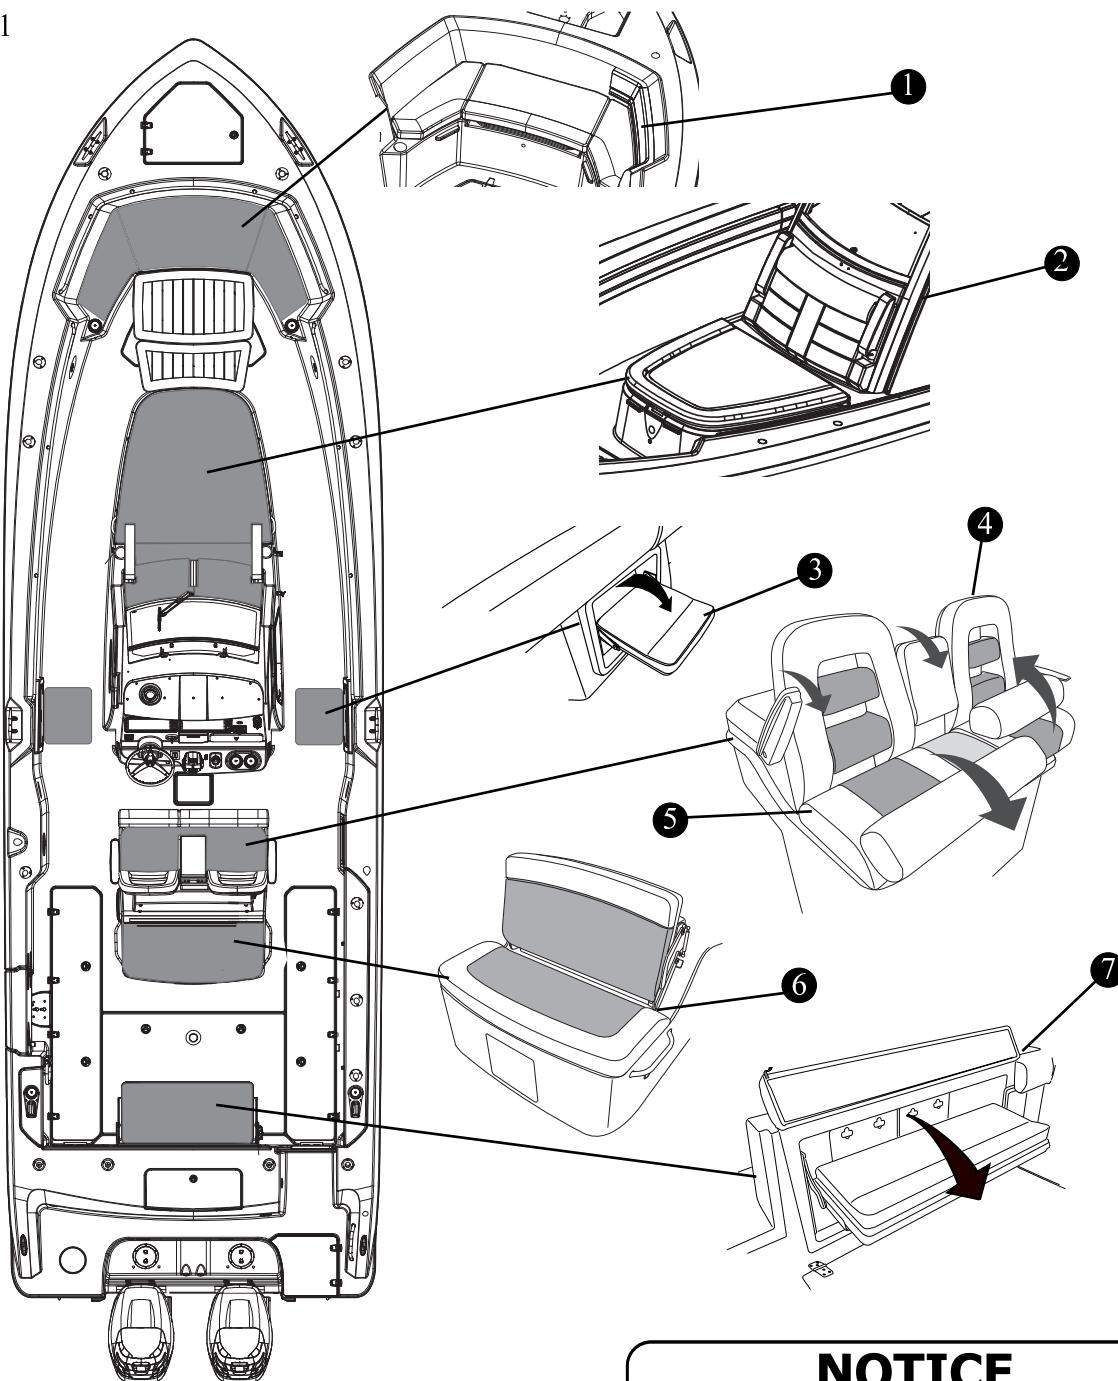

- 1 FORWARD SEATING AREA
- 2 FORWARD CONSOLE LOUNGE
- 3 FOLDAWAY TROLLING SEATS (OPTION) (P&S)
- 4 COMPANION'S CHAIR W/ FLIP-UP THIGH RISER
- 5 CAPTAIN'S CHAIR W/FLIP-UP THIGH RISER
- 6 LEANING POST CONVERTIBLE BENCH
- 7 AFT FOLDAWAY BENCH SEAT

#### NOTICE

##### SEAT MAINTENANCE

- Always wash metallic parts with soap and water and rinse thoroughly with fresh water. Once dry, apply a light coating of lubricant to protect moving parts.
- Check for loose or damaged hardware and tighten or replace as necessary.

## Section 2 • General Information

### Joystick Piloting (Option)

Joystick technology is the latest enhancement in vessel control, providing effortless maneuverability. The joystick Piloting system replaces the traditional bow thruster set up. Joystick Piloting takes the stress out of docking, maneuvering in tight spaces and operating in less-than-ideal environments by providing the vessel operator 360-degree movement at their fingertips.

The system allows the operator to effortlessly move a multi-engine boat in any direction - including sideways, diagonally or spinning on its own axis - with a simple push or twist of a joystick. The operator controls the throttle, shifting and steering with one hand, with the joystick working in conjunction with the independently steered engines to move the boat in the desired direction.

If equipped, the joystick is located on the control console forward of the throttle/gearshift.



### System Features

#### Digital Throttle & Shift (DTS)

Amazingly smooth and responsive, DTS replaces the lag and hesitation of traditional throttle and shift


Joystick Piloting (Option)

Fig. 2.20.1

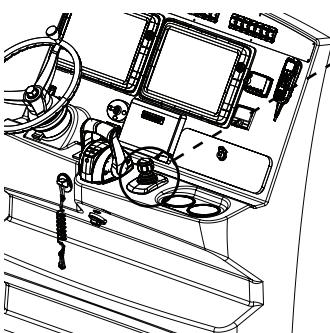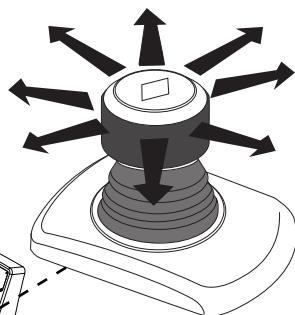


REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

cables with digital precision, resulting in smooth shifting and instant throttle response. DTS includes many advanced features to improve your boating experience. Auto Sync synchronizes multiple engine rpms automatically and Single Lever Mode allows you to control multiple engines with just one control lever.

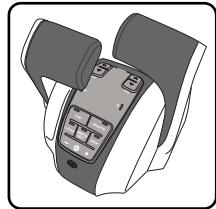


### VesselView®

The VesselView system provides up-to-date information for more than 30 engine parameters, including fuel level and range, oil temperature and pressure, water depth and more. It also provides advanced features such as Smart Tow®, ECO-Screen, Troll Control, Cruise Control, and much more.

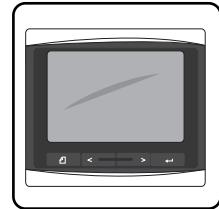


### Skyhook® (digital anchor)

With the push of a button, Skyhook pinpoints the boat's position using a GPS satellite antenna and the engines and drives move independently to maintain the position and heading. It's ideal for holding a boat over a fishing spot, waiting for a drawbridge to open or maintaining position while waiting to refuel at a marina.

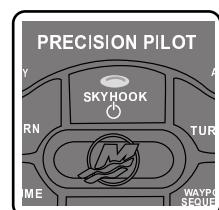

### Integrated Autopilot

Auto Heading and Waypoint Sequencing make navigating to a destination simple and efficient. A built-in digital compass on Auto Heading allows the captain to maintain course and make precise corrections with the touch of a finger. One-degree heading adjustments can be made with a tap on the joystick; 10-degree adjustments can be accomplished using the control panel. Trips with multiple stops between the starting point and final destination are a breeze with Waypoint Sequencing, which allows the operator to plot the boat's course using multiple points.

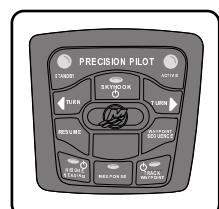

## Section 2 • General Information

### Gear Shift & Throttle Control

#### ! CAUTION

**Shift controls into NEUTRAL before starting engine. Shift only when engine is at idle. Reversing at high speeds can cause flooding/swamping due to water being pushed over the transom.**

#### NOTICE

**Wind and sea currents can change how your boat responds while in motion. Understanding your boat and its reactions at speed will make your boating safer and more enjoyable.**


#### Digital Throttle/Shift (DTS®)

Your 330 Outrage features a state of the art digital “drive-by-wire” gear shift and throttle control system. The Digital Throttle/Shift (DTS)® is the latest technology in recreational boating.

The DTS® system is monitored through the Smartcraft® VesselView display which will give you a visual readout of all functions regarding your boats engine as well as direction, and applicable fluid capacities.

Digital Throttle/Shift (DTS®)

Fig. 2.21.1

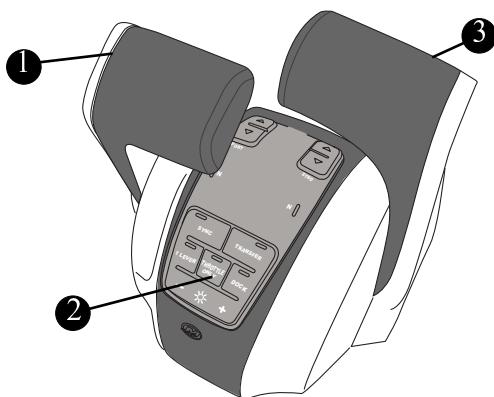

1 PORT ENGINE GEAR SHIFT/THROTTLE

2 "THROTTLE ONLY" BUTTON

3 STARBOARD ENGINE GEAR SHIFT/THROTTLE

The throttle control regulates the RPM of the engine. Regulating the RPM of the engine will control the speed of the boat. Moving the lever forward engages the forward gear. Continuing to move the lever forward will increase the forward speed of the boat.

Likewise, to reverse power, bring the control lever back to engage the reverse gear and increase the reverse thrust by continuing to pull back on the throttle control..

The control must be in the “NEUTRAL” position to start your engine. Neutral is in the center position of the unit and acts as an idle. While in this position, the propeller is not rotating. By moving the control arms back and forth you can feel a detent in the center position and will hear a click when neutral is engaged.

There is a “THROTTLE ONLY” button on the control unit that when depressed will disengage the shifting mechanism and will allow you to operate the throttle without engaging the propeller. The button will automatically engage the shifting mechanism once the throttle control has been moved back to its center position (you will hear and feel a click when it is engaged).

REFER TO THE ENGINE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS, INFORMATION AND WARRANTY.

#### Power Trim


#### ATTENTION

**Ensure continuous visibility of other boats, swimmers and obstacles during bow-up transition to planing. Adjust engine to an intermediate trim as soon as boat is on plane.**

The power trim & tilt system located on the shift control lever (Fig. 2.19.1). allows you to raise and lower the engine to achieve optimum performance and is used for trailering, launching and beaching.

## Section 2 • General Information

Power Trim Switch  
Fig. 2.22.1

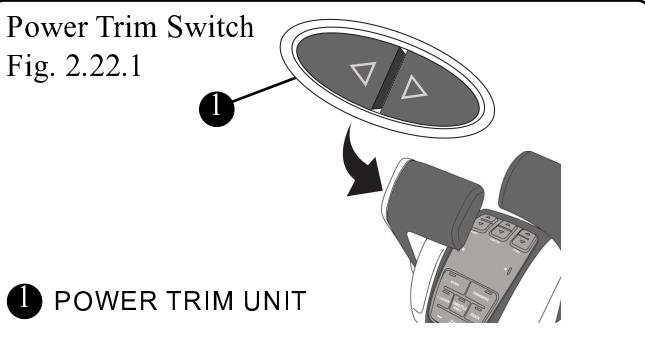


### Operation

The engine trim is controlled by a momentary rocker switch, where constant pressure must be applied to the switch during the raising and lowering cycles. Use the power trim switch to obtain ideal boat angle (in relation to the water surface) for a given load and water condition. In most cases the best all-round performance is obtained when the boat runs at an angle between a 3 to 5 degrees.

**REFER TO THE ENGINE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY INFORMATION.**

### SmartCraft™ VesselView

The SmartCraft™ Vessel View is a comprehensive boat information center allowing the boat operator to receive a wealth of critical operational information, instantly at the helm. The VesselView continuously monitors and reports important information ranging from basic operating data to detailed vessel environment information including:

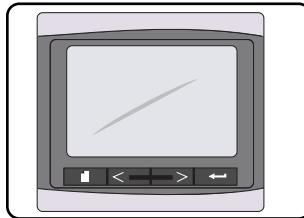

- Real-time engine/vessel information
- **SmartTow**-Set launch profile/cruise speed for skiing/wakeboarding
- **Eco-Screen** - Trim Status/engine RPM
- **Cruise control**
- **Troll control**
- **Start-Up scan** - All engine systems scanned for performance at start-up.
- System Alarms

In addition, VesselView can be fully integrated with the boat's GPS, if equipped, to provide up to the minute course, speed, and fuel-to-destination information.

### System Calibration (For First Time Use)

Boston Whaler® or your Boston Whaler® dealer has calibrated the Smartcraft™ VesselView to the equipment on your boat. If equipment is added, the system will need to be recalibrated.

For recalibration or manufacturers information regarding the Smartcraft™ VesselView refer to the SmartCraft™ VesselView owner's manual found in your owner's packet.

### SmartCraft™ VesselView MOBILE

VesselView MOBILE connects the SmartCraft™ data network to your iPhone or android mobile device via Bluetooth Low Energy4.0(BLE). With VesselView MOBILE you have the power of SmartCraft™ on your mobile device with all the digital data your SmartCraft™ engine supports plus new features such as:

- Maintenance reminders
- Mapping
- Performance summary
- Fault code diagnostics

**REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.**

### Navigation Lighting

#### NOTICE

**Regulations state that all boats, no matter the size, must display navigation lights.**

Your boat comes equipped with navigation lighting for your safety. Regulations state that all boats must display navigation lights between sunset and sunrise and during periods of restricted visibility, such as rain, fog, haze, etc. If operating in reduced visibility or between sunset and sunrise it is necessary to maintain a safe speed and post a lookout.

## Section 2 • General Information

It is the responsibility of the operator to ensure that the navigation lights are in good working order and that the proper lighting is shown and not obstructed in its intended arc of visibility. This vessel's navigation lights may include an expiration date on the housing. If one is located, replace light before expiration date, even if light is functional, as lighting quality may be compromised.


Do not add lights that interfere with required navigation lights. Some lights, such as blue colored lights, may be illegal to display on a boat. It is the owner's responsibility to ensure that displayed lights are also compliant with local regulations.

### Operating the Navigation Lighting

A three-position switch, located on the console switch panel marked "NAV/ANC" (See page 2.17.1), controls the navigation and anchor lighting. In the "Navigation Lights" position, the port (red), starboard (green) and all around (white) light will illuminate. These lights let other vessels know the approximate size and direction of travel of your boat, depending on which lights they can see. In the "Anchor Lights" position, the white, 360-degree light will illuminate, showing other boaters your location while at anchor.


Navigation/Anchor Lighting

Fig. 2.23.1

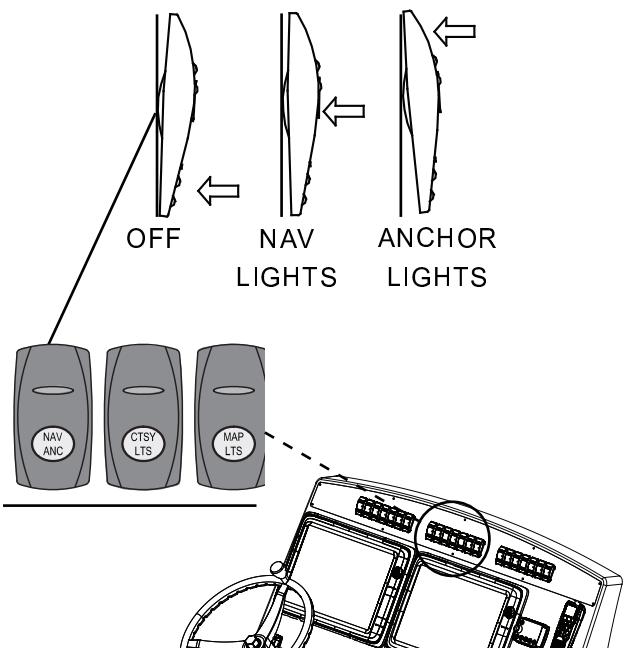

Navigation/Anchor Lighting

Fig. 2.23.2

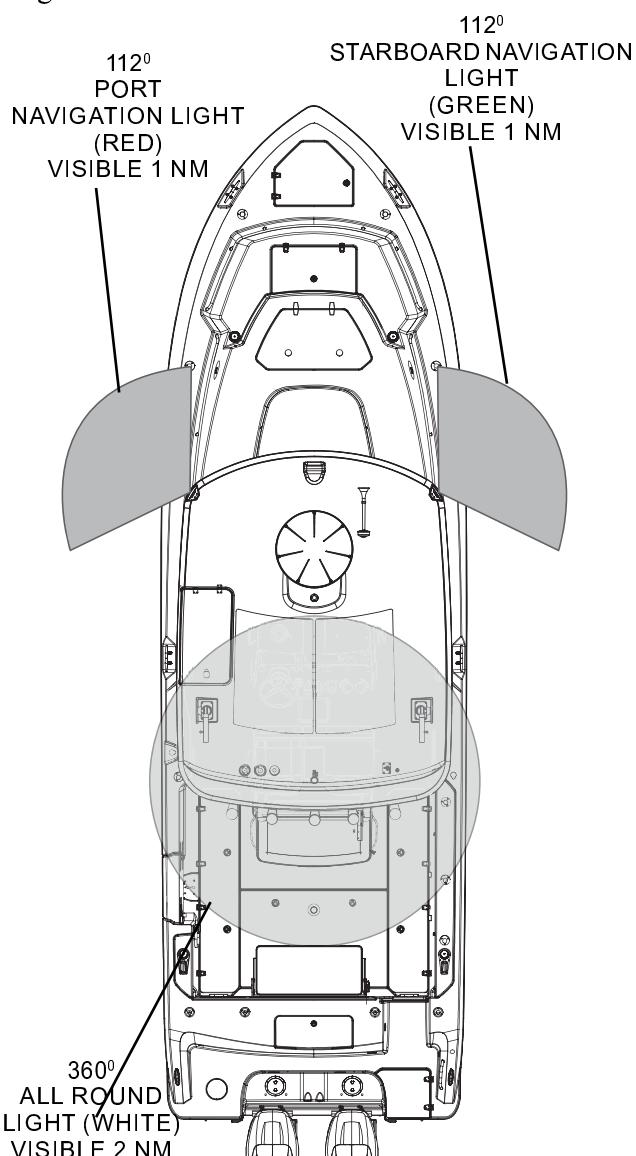

### NOTICE

**The improper sequence of navigation lighting may be as dangerous as no lighting at all.**

### CAUTION

Accent lights are not to be used when navigational lights are in use as this may interfere with the effectiveness of the navigational lights.

## Section 2 • General Information

### 12V/30AMP Receptacles (Option)

If equipped, the 12V/30A receptacles necessary to power electric downriggers or reels are located inside port and starboard of the aft cockpit. The receptacles are protected by the "SWITCHED" breaker on the Main Distribution Panel located in the forward console (see Figure 4.6.1).


Consult with your Boston Whaler® dealer for details on selecting and mounting the downriggers that will best suit your application.

#### ! CAUTION

**DO NOT mount downriggers on areas of the gunwale that are not designed to withstand the stress which the downriggers will generate.**

#### 12V/30 AMP Receptacle P&S (Option)

Fig. 2.24.1

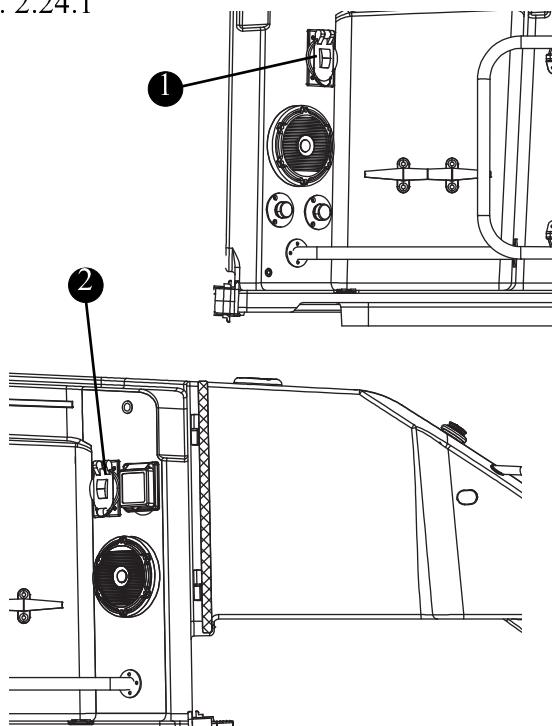

1 PORT 12V/30A RECEPTACLE

2 STARBOARD 12V/30A RECEPTACLE

REFER TO THE DOWNRIGGER MANUFACTURER'S MANUAL FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Canvas (Option)

#### ! DANGER

##### CARBON MONOXIDE DANGER

**Prolonged exposure can cause serious injury or death. To reduce CARBON MONOXIDE accumulation, increase air movement by opening windows or adjusting the canvas to allow for more air circulation**

Removing or installing canvas on the open water can be difficult since rough water or wakes can cause you or your passengers to lose balance while attempting to install or remove canvas panels.

For your safety and ease of installation or removal of the canvas, use two (2) people to perform the operation. Remove or install canvas before leaving the boat slip or off-loading your boat from the trailer.

#### ! DANGER

**Exhaust fumes from engines contain deadly carbon monoxide gas (CO). Boats enclosed with canvas or with poor ventilation are most likely to collect fumes.**

**CO sickness symptoms include headache, nausea and dizziness. DO NOT mistake these symptoms for sea sickness.**

**In rainy and/or cold weather, fresh air must circulate through the boat to avoid carbon monoxide poisoning.**


**See page 1-3 of this manual for additional important information regarding carbon monoxide.**

REFER TO THE CANVAS MANUFACTURER'S INSTRUCTIONS FOR COMPLETE CARE AND MAINTENANCE OF YOUR CANVAS SET.

## Section 2 • General Information

Canvas Cover Package (Option)

Fig. 2.25.1

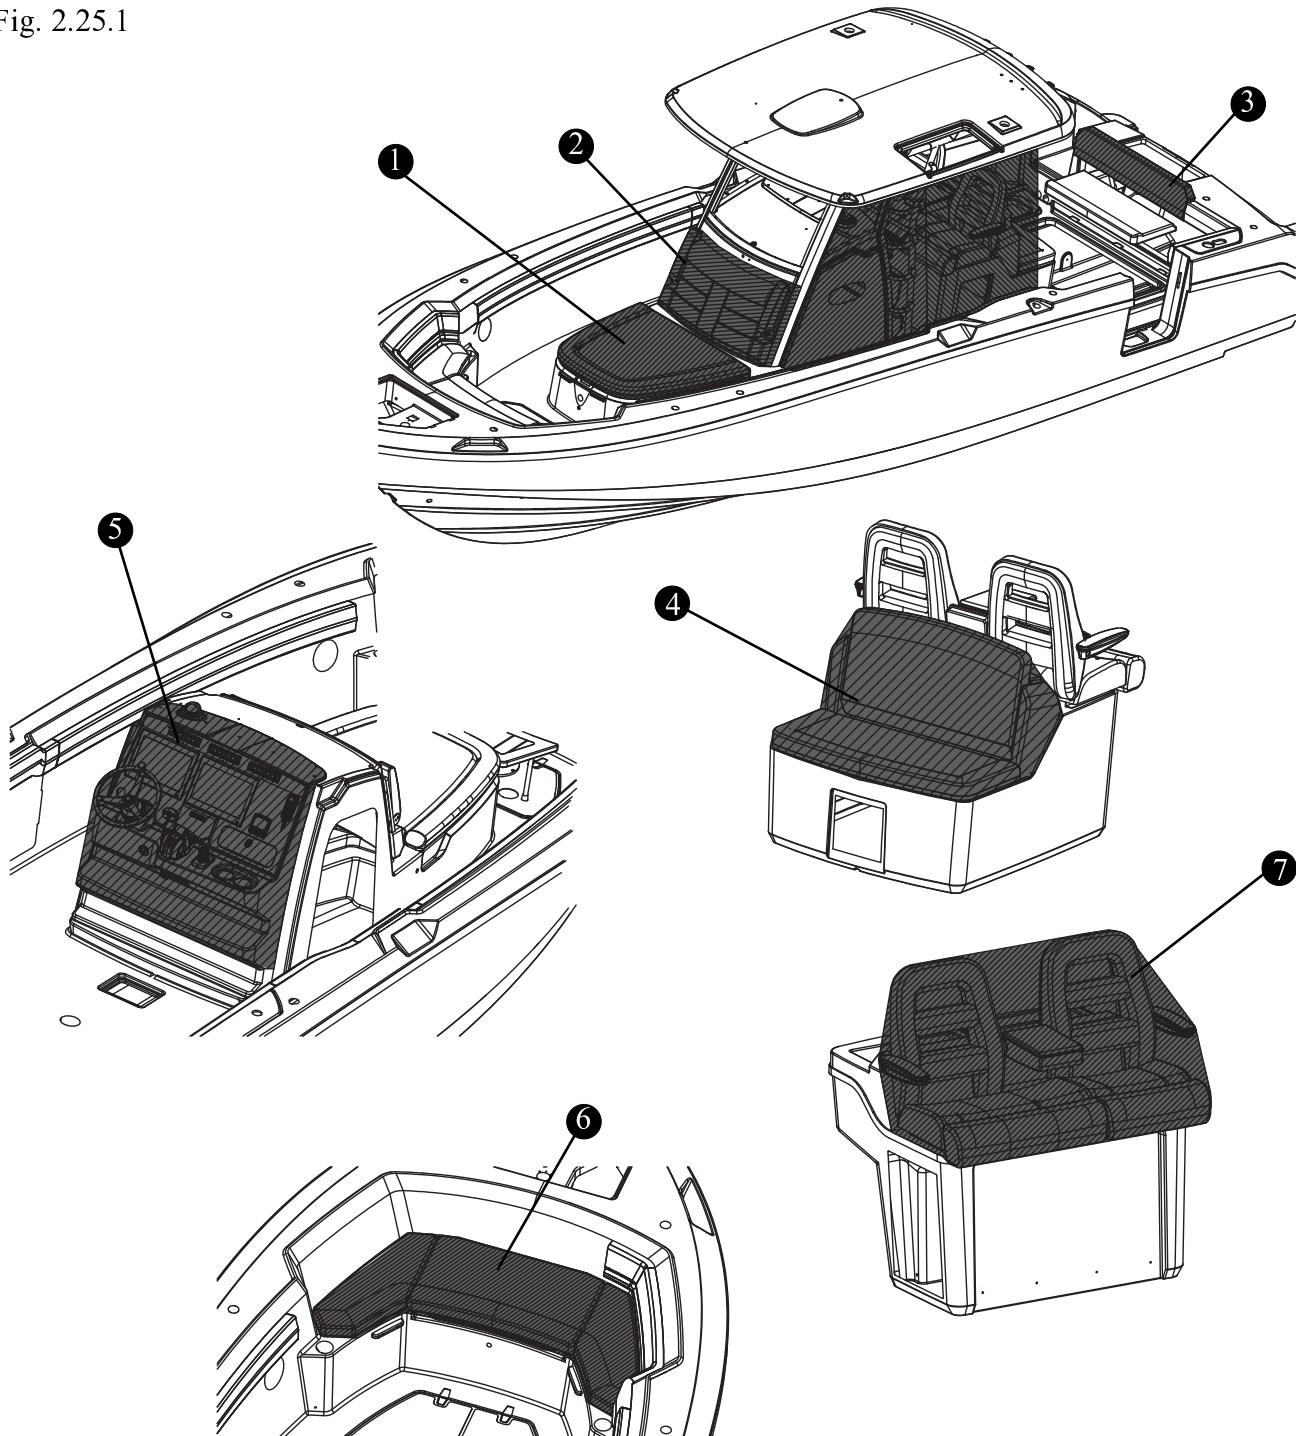


- 1 FORWARD LOUNGE BASE COVER (BLACK)
- 2 FORWARD LOUNGE BACKREST COVER (BLACK)
- 3 STERN SEAT BACKREST (BLACK)
- 4 LEANING POST COVER (BLACK)

- 5 CONSOLE COVER (BLACK)
- 6 FORWARD CUSHION COVER (BLACK)
- 7 HELM SEATING COVER (BLACK)

## Section 2 • General Information

Canvas (Option)

Fig. 2.26.1

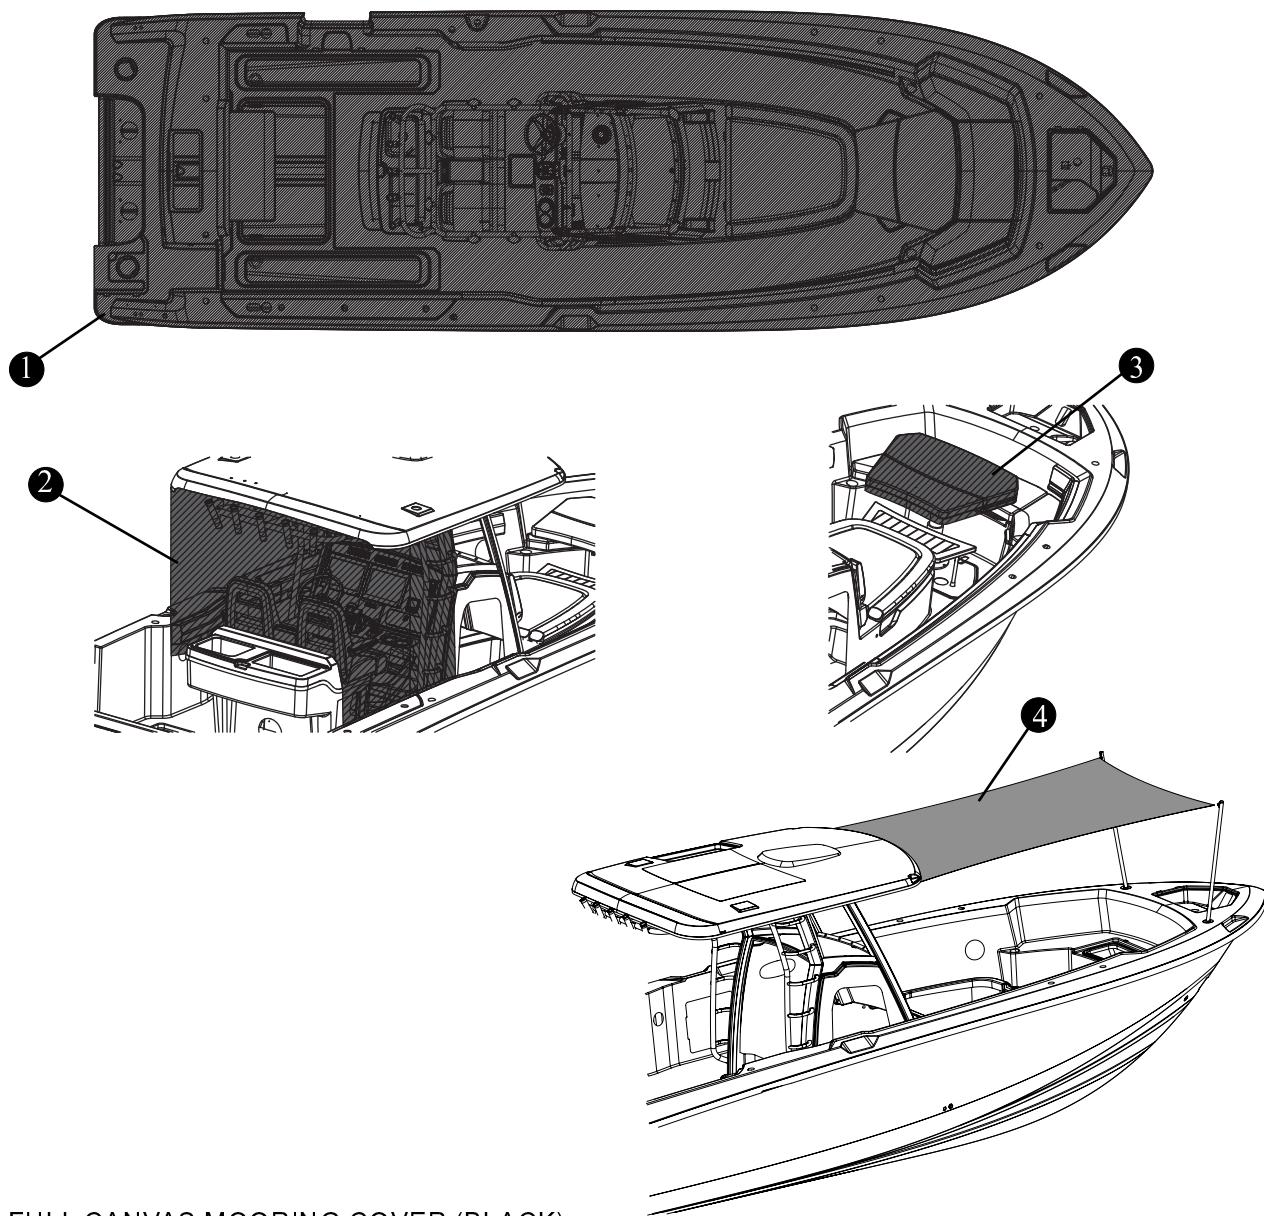


- 1 FULL CANVAS MOORING COVER (BLACK)
- 2 HARDTOP ENCLOSURE CURTAINS (WHITE OR BLACK)
- 3 BOW TABLE COVER (BLACK) (OPTION)
- 4 BOW SHADE (OPTION)

## Section 2 • General Information

### Docking, lifting and trailering

Cleat Locations

Fig. 2.27.1

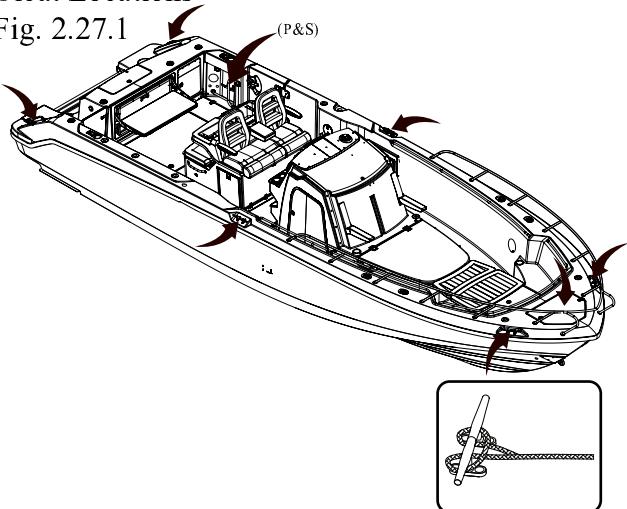


### Docking

Your boat has six (6) 10 inch pop-up cleats, two at the bow, two located amidship and two located at the stern with hawse pipes. There is also one (1) 8 inch cleat in the anchor locker and two (2) 8 inch pop-up cleats, one each port and starboard at the transom. The cleats are used to secure the boat to the dock. While loading/unloading or mooring, please learn the proper way to secure the boat and how best to use the mooring points of your boat.

Figure 2.27.2 shows the correct method for tying a belaying knot, commonly used to secure a boat to a dock. This knot will hold fast and is simple to release when needed.

#### Belaying Knot

Fig. 2.27.2

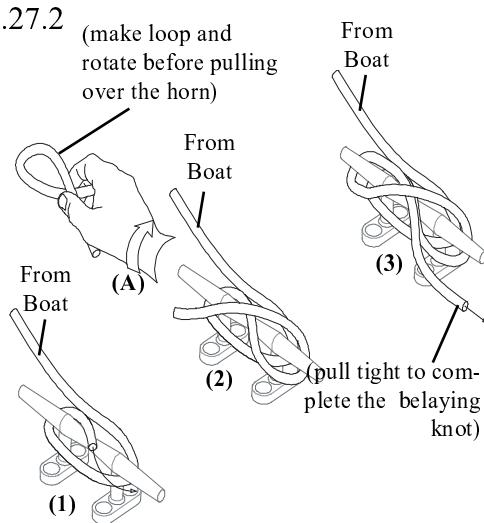

### Lifting

#### DANGER

**Use only the lifting points specified. Using the cleats for lifting is dangerous and could cause serious injury or death.**

#### NOTICE

**Avoid lifting with chains or cables as damage to the rub rail may occur.**

The bow eye is used to haul and hold your boat onto a trailer. The stern eyes are used as tie down points while trailering the boat. The bow and stern eyes may be used only for short term lifting of the boat. Long term lifting with bow and stern eyes will cause stress on the fiberglass and gel coat.


For long term lifting or storage, use flat, wide belt-type slings and spreaders long enough to keep pressure from gunwales. Place slings where indicated by "Sling" tag on the hull. **DO NOT** place slings where they may lift on underwater fittings.

#### CAUTION

**Long term lifting with the bow and stern eyes can cause stress on the fiberglass and gel coat and is not recommended.**

#### Proper Short Duration lifting

Fig. 2.27.3

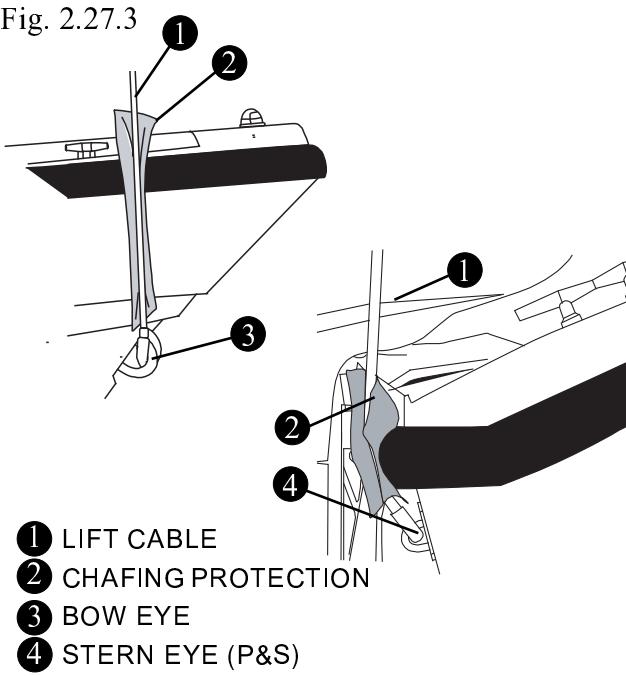

## Section 2 • General Information

Whether you are lifting your boat out of the water for routine maintenance or long term storage, consider the following:

- If you are using a professional lifting service, it is prudent to check all credentials and ask for proof of insurance to protect your investment.
- Use a wide, flat, belt sling for lifting ,to minimize stress on the gunwales. Careful placement of the slings should be observed.  
**DO NOT PLACE SLINGS WHERE UNDER WATER FITTINGS WILL BE IN CONTACT.**
- If using a lifting hook, attach to bow eye and the stern lifting eyes mounted on the transom. Always use a spreader bar on the stern eyes and use chafing protection on the top of the transom.
- All drain plugs (i.e. transom, fishwell, deck, etc.) should be pulled out and the boat positioned with the bow slightly higher than the stern so that any water which is allowed to accumulate in the cock pit and/or bilge can easily drain from the boat.

### NOTICE

**Place slings ONLY WHERE INDICATED by the "Sling" tags on the hull of the boat (P&S).**

## Trailering

Your 330 Outrage has the option of being fitted with a galvanized trailer. This trailer is best suited for your boats length and width. If you have a trailer or plan on purchasing a trailer separately there are some points you need to consider, such as:

- Having a center roller and keel guards will help provide good support for the keel, also provide good fore and aft support.

- Trailers equipped with rollers instead of bunks can damage the foam sandwich hull of your boat and **should never be used**.
- Bunks provide a more even weight distribution.

### NOTICE

**Use a trailer with bunks ONLY. Your warranty may be voided if you use a trailer with rollers.**

## Trailer Safety

### Securing the Boat to the Trailer

**Safety Chain/cable** - There is a safety chain/cable that attaches to the bow eye and will keep the boat from sliding off the trailer in the event that the winch strap or cable breaks. Hook this up first.

**Tie-Down Straps** - Can be used to secure the boat from the stern. The tie-down straps hook into the tie-down loops on the trailer frame and to the stern eyes on the transom. Padding (or similar) chafe protection should be used wherever the tie-down straps come in contact with the hull.

### Securing the Trailer to the Tow Vehicle

**Safety Chains/cables** - Safety chains/cables connected to the trailer should be of sufficient length to reach the frame of the tow vehicle and should be long enough to allow the tow vehicle to turn without binding or tensioning .

**Trailer Hitch** - A properly matched trailer hitch ball and coupler is important.

Make certain that the coupler and the hitch ball are properly seated and locked.

### ! DANGER

**Tie-down straps should never be used by themselves, they are only used to help in keeping the boat secured to the trailer. Make certain that the safety chain is properly secured to the bow eye.**

## Section 2 • General Information

### Trailering the Engines

It is best to trailer your boat with the outboards tilted down in a vertical operating position.

However, if additional road clearance is required due to railroad crossings, driveway clearance, trailer bounce, etc., the outboard should be tilted up and supported using an accessory outboard support device.

Your Boston Whaler® dealer will have recommendations regarding the support of your engines.

#### ! CAUTION


**DO NOT rely on the power trim/tilt system or tilt support lever on your outboards to maintain proper ground clearance for trailering. THE OUTBOARD TILT SUPPORT LEVER IS NOT INTENDED TO SUPPORT THE OUTBOARDS FOR TRAILERING**

### Trailer description

Bunk Trailer (Typical)

Fig. 2.29.1

- 1 SAFETY CHAINS/CABLES
- 2 TONGUE/BALL HITCH RECIEVER
- 3 TRAILER LIGHT CONNECTION, (4-PIN)
- 4 TONGUE JACK
- 5 WINCH STAND/ASSEMBLY
- 6 CABLE ROLLER
- 7 WINCH HOOK/STRAP
- 8 TRAILER FRAME
- 9 SIDE LIGHT
- 10 FENDER W/ STEPS
- 11 TAILLIGHT
- 12 TIE-DOWN EYE
- 13 BUNK ASSEMBLY
- 14 TIRES
- 15 SPARE TIRE
- 16 WINCH SAFETY CHAIN
- 17 KEEL PROTECTOR
- 18 AXLES

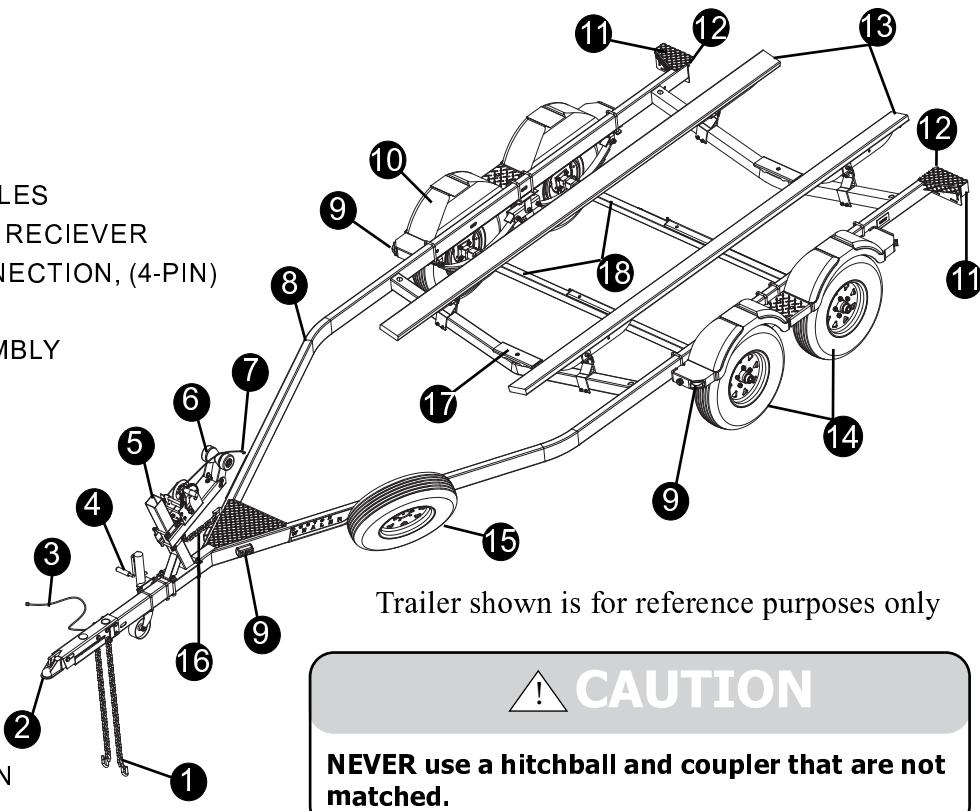

Trailer shown is for reference purposes only

#### ! CAUTION

**NEVER use a hitchball and coupler that are not matched.**

#### ! CAUTION

**DO NOT secure the chains to the bumper of the tow vehicle.**

#### NOTICE

**Refer to the engine manual in your owner's manual packet for proper engine support while trailering.**

## Section 2 • General Information

---

---

THIS PAGE INTENTIONALLY LEFT BLANK

## Section 3 • Systems & Components Overview & Operation

### Bilge Pumps


Your 330 Outrage is equipped with three (3) automatic bilge pumps, one forward (1,100 GPH - 4,160LPH) and two (2) aft (2000 GPH - 7,571LPH). Each pump is activated automatically by a mercury-free float switch when the water in the bilge reaches a predetermined level.

By depressing the "AFT BILGE" or "FWD BILGE" switch(es) on the control station switch panel (See figure 2.17.1) the operator can energize the pumps regardless of the position of the float switches.

The aft pump discharges water overboard by way of a thru-hull fitting on the aft port hull. The emergency high water pump discharges water overboard by way of a thru-hull fitting on the aft starboard hull. The forward pump discharges water by way of a thru-hull fitting on the mid port hull (See figure 2.7.1).

Bilge Pump Locations

Fig. 3.1.1

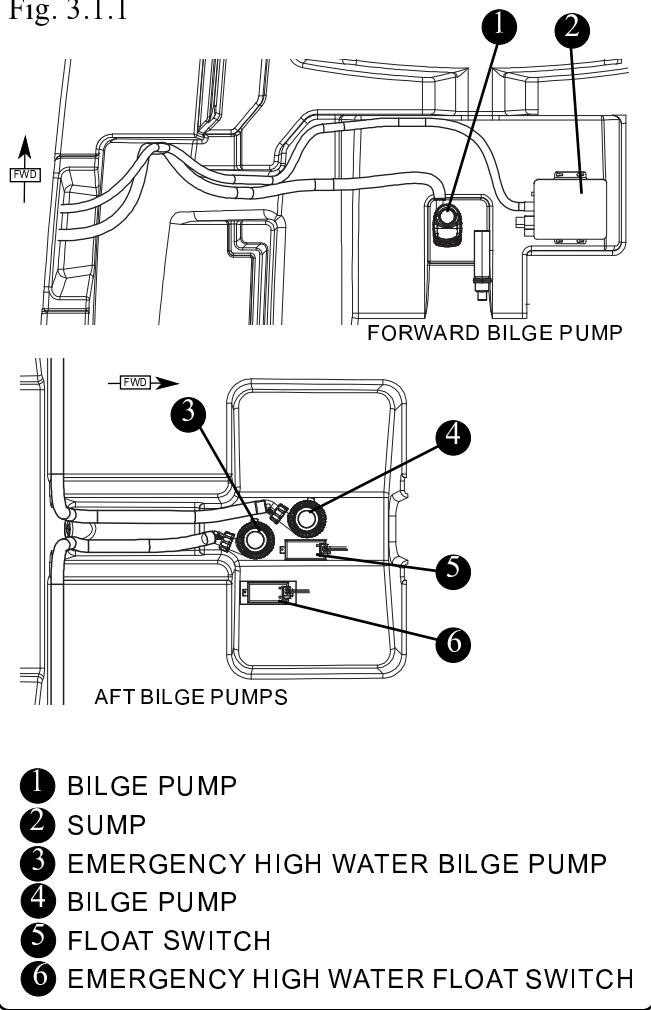

### Maintenance

The aft pump is accessed through the hatch in the bottom of the motorwell. Access to the forward pump can be made through a hatch on the aft wall of the forward console. Frequently inspect the area under the float switches to ensure they are free from debris and gummy bilge oil. To clean, soak in heavy duty bilge cleaner for 10 minutes, agitating several times. Check for unrestricted operation of the float. Repeat the cleaning procedure if necessary.


**Inspect the bilge pump intakes and keep them free of dirt or material which may impede the flow of water through the pump.** To clean the pump strainer, depress the lock tabs on both sides of the pump and lift the pump motor (Figure 3.1.2).

If water does not come out of the discharge hose:

1. Remove the motor module to see if the impeller rotates with the power on.
2. Remove any debris that may have accumulated in the impeller section or strainer base.
3. Check hose and connection on hull side for debris and proper connections.

Bilge Pump & Float Switch

Fig. 3.1.2

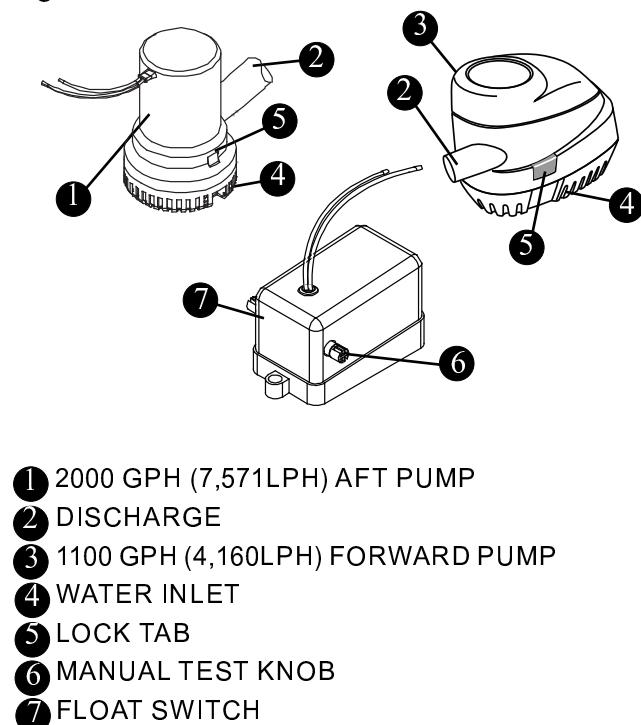

## Section 3 • Systems & Components Overview & Operation

### Fuel & Oil Spillage

Regulations prohibit discharging fuel or oily waste in navigable waters. Discharge is defined as any action which causes a film, sheen or discoloration on the water surface, or causes a sludge or emulsion beneath the water surface. A common violation is bilge discharge.

Use rags or sponges to soak up fuel or oily waste, then dispose of them properly ashore. If there is a large quantity of fuel or oil in the bilge, contact a knowledgeable marine service to remove it. Never pump contaminated bilge discharge overboard.

Fill fuel tank less than rated capacity. Allow for fuel expansion.


### Power Steering

The Verado four-stroke engine uses an enclosed hydraulic pump unit. **The pump is electrically operated to provide hydraulic pressure to the steering system pump.** The pump is located in the starboard aft bilge which can be accessed through the cockpit deck hatch..


### Filling & Maintenance

The system is virtually maintenance free, aside from regular fluid checks and visually inspecting the outside of the unit for signs of leaks or damage.

- Release cover by pressing on the locking tabs on the sides of the unit.

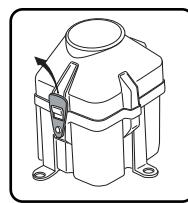

- Unscrew cap and check the fluid level in the reservoir, fill **ONLY** with SAE 0W-30 Full Synthetic Power Steering Fluid if necessary.
- Replace cap and cover

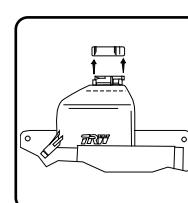

Check the fluid level before each trip.

REFER TO THE ENGINE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Fuel System

#### CAUTION

- Oil and fuel spills can be dangerous and can subject offenders to severe penalties**
- Leaking fuel is a fire and explosion hazard, inspect the system regularly. Examine fuel tanks and exposed lines for leaks and corrosion.**

This system has been designed to meet the EPA regulations using certified components to limit the fuel vapor emissions.

Your fuel system provides the following benefits:

- Automotive style refueling, automatic nozzle shut-off, fuel nozzle retention. This system sends a signal to the pump nozzle to shut off before there is any spit-back or well-back through the fill opening.
- Overfill protection is included with each system, reducing the possibility of accidental fuel spills.
- Reduce hydrocarbon emissions through the use of a specially designed fuel fill. This fuel fill has a permanently attached cap with a positive closure mechanism with an audible click, to let you know when it is sealed.

#### CAUTION

**Use of improper fuel can seriously damage your engine. Engine damage resulting from use of improper fuel is considered misuse of engine and will void the warranty. Follow engine manufacturer's recommendations regarding the types of fuel and oil to use.**

#### NOTICE

**It is your responsibility to read and understand the engine manufacturer's manual in your owner's manual packet for complete fuel and fueling information and warnings.**

## Section 3 • Systems & Components Overview & Operation

### Fuel tank

Your boat is equipped with a low permeation aluminum fuel tank with a combined useable fuel capacity of 300 gallon (1,135 L). The useable capacity of the fuel tank is different from the tank capacity marked on the tank from the manufacturer. The difference is the non-useable portion of the tank which results from the fuel in the tank that is below the pickup tube and the ullage area that has been incorporated into your tank. It is recommended that you follow all instructions regarding the filling of fuel tanks. **Please take time to read and understand all the fuel related information and warnings regarding gasoline and your boat, in the engine owner's packet.**

Fuel tanks with levels less than 1/4 full can cause engine stalling problems due to fuel starvation or by allowing sediment and dirt to enter the fuel supply lines. Keep the tank full and monitor the fuel level often to prevent this from happening.


### Fuel Vent

The fuel tank vent is integrated into the fuel fill deck fitting (See fig. 3.2.1). The VaporTec fuel pressure management system, (fuel fill deck fitting, integrated check valve, fill limit vent valve, grade valve), ensures that the fuel system constantly maintains proper vapor pressure in all situations. This eliminates any unintended pressure which can seriously damage a boat or engine. The vent serves as an over pressure/vacuum release with anti-surge and flame/spark arresting protection. The fuel vent system also plays an important role in controlling the "FULL" level of fuel with the use of the FLVV (Fill Limit Vent Valve). Grade Valves have been added to the tank which allows proper ventilation of the tank when the boat is stored, or trailered, on a moderate incline, without fuel seepage.

### Filling The Tank

This fuel system is designed to automatically shut off the fuel nozzle when the tank is full, similar to

Fuel System  
Fig. 3.3.1

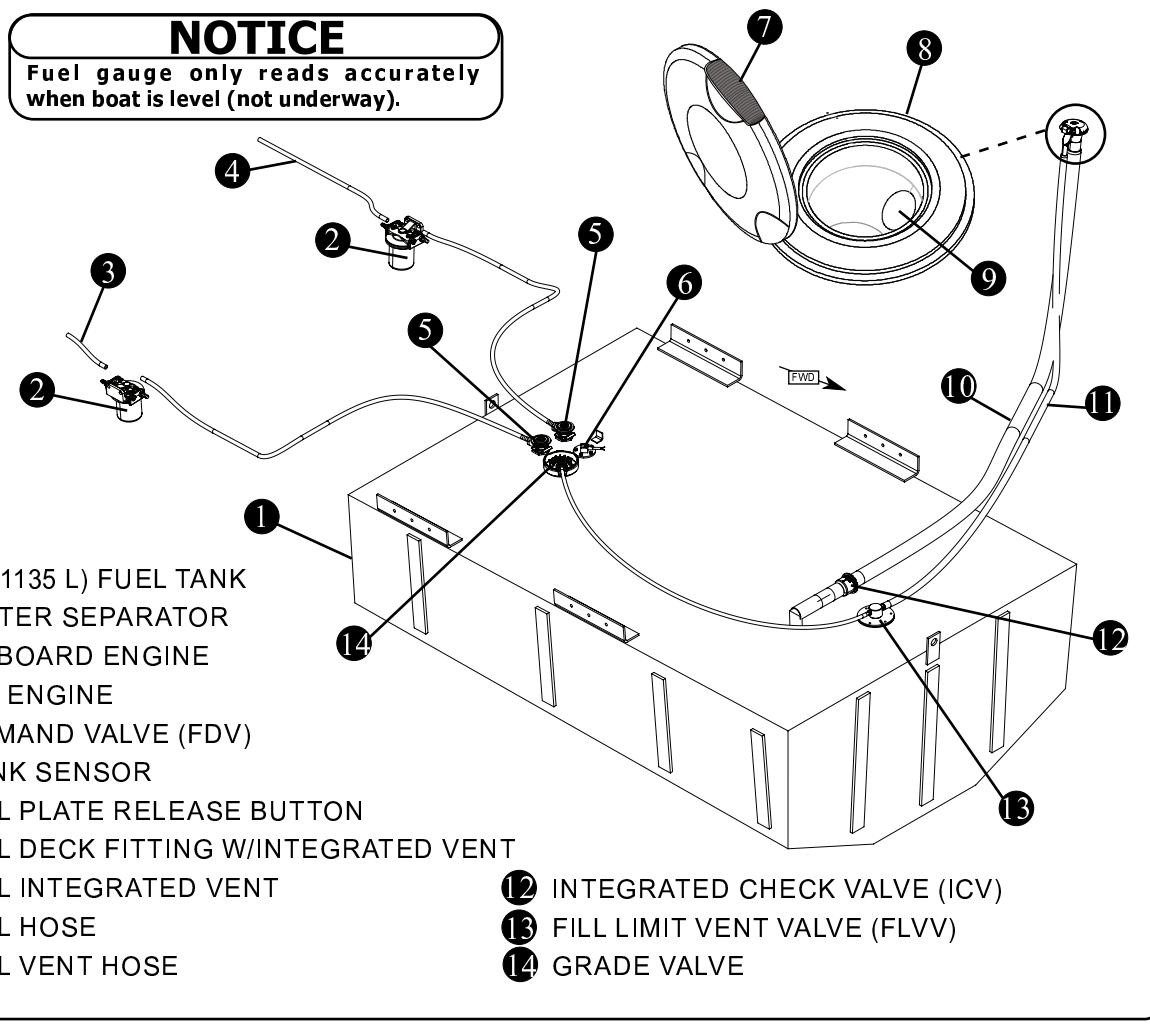

## Section 3 • Systems & Components Overview & Operation

an automotive fuel system. The tank is filled when the fuel fill nozzle has shut itself off the second time. The SecureStop automatic fuel shutoff system (Fuel Fill Deck Fitting, Integrated Check Valve, Fill Limit Vent Valve), guarantees the boater a clean trouble-free fillup. Details such as valve design and deck fill nozzle retention features ensure consistent fillup/shutoff. Attempting to fill the tank past this point may cause some of the components to not function properly, or malfunction.

### Fuel Distribution System

The fuel is delivered from the tank to the engine through the Fuel Demand Valve (FDV), anti-siphon valve, and the fuel line. The FDV prevents the built up pressure inside the tank from being transferred to the engine while still allowing fuel to flow as the engine requires it for operation. The anti-siphon valve is a safety feature designed to prevent the fuel from siphoning out of the tank if the fuel line were to be cut or broken below the level of the fuel in the tank. In this case, some fuel would leak from the line, but would not allow the entire contents of the tank to siphon into the boat.



### WARNING

**The use of a portable fuel tank to fill your boat's tank can result in overfilling and circumvent the safety features designed into your tank.**



### WARNING

**The modification of any of the fuel system components or the replacement of these components with unauthorized parts may result in over-pressurization of the fuel system and circumvent the safety features designed into your tank.**

### NOTICE

**Keep records of the fuel capacity and consumption of your boat. Drastic changes in consumption and mileage may indicate a problem.**

REFER TO THE ENGINE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Maintenance

Follow your engine manufacturers recommendations for scheduled maintenance. Check the hoses for cracks, abrasions and deterioration on a regular basis and **NEVER start your engines if there is a strong gasoline odor present**. Replace worn or damaged hoses and fittings with marine grade replacement parts only. Your Boston Whaler® dealer will have all the parts and information you will need to maintain your boat.

Excessive water and sediment in the fuel tank(s) due to improper usage may require you to have the tank(s) professionally cleaned. Consult a professional tank cleaning contractor regarding this procedure and the proper disposal of residue and water.

### NOTICE

**Improper disposal of fuel or oily waste can subject the offender to severe state and federal penalties.**

REFER TO THE ENGINE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Static Electricity and the Fuel System

There is a danger that static electricity can ignite gasoline vapors that have not been ventilated outside an enclosed area. Use extreme caution when fueling your boat from a source outside the regular venues, (e.g. marinas, fuel service stations).

Your boats bonding system protects it from creating and discharging static electricity. Your boat must be in contact with the water or a land based grounding system while fueling.

Your boat has safety features that can be circumvented by not adhering to standard fueling practices. The following suggestions will help keep you safe from static electricity while refueling your boat.

- **NEVER** fuel your boat in unsafe conditions such as suspended on a sling or in a situation that increases the likelihood of static discharge.

### ⚠ DANGER

**Static electricity can ignite gasoline vapors causing serious injury/death and/or destruction of property.**

**Check for leaks in tubing, connections and hoses. Correct the cause of any leaks and ventilate the area to insure that no fumes remain, prior to energizing any electrical equipment and/or starting the engines.**

- NEVER use homemade containers to fill your fuel tanks.
- Fuel carried on-board outside of a fixed fuel system should be stored in an approved container or in a portable tank such as provided for outboard engines and be stowed safely outside of the engine or living compartment(s).
- Shut down the engine, motors and fans prior to taking on fuel. Any ignition sources should be extinguished before filling the fuel tanks.
- Close all ports, windows, doors and hatches.
- Fueling should never be done at night except in well-lighted areas.
- Always keep the fuel nozzle in contact with the fuel fill plate or the edge of the fuel tank opening throughout the filling process.
- Allow areas where gasoline vapors could collect to be ventilated before starting the engine.
- Wipe any spillage completely and dispose of rags or waste on shore.
- Secure the fill cap tightly.
- Portable tanks should only be filled while on the ground, never on-board the boat.

REFER TO THE “DO’S AND DON’TS AT THE GAS PUMP” DVD IN YOUR OWNER’S MANUAL PACKET FOR MORE INFORMATION.

### Ethanol-Blended Fuel

Ethanol is an oxygenated hydrocarbon compound that has a high octane rating and therefore is useful in increasing the octane level of unleaded gasoline.

### NOTICE

**The use of improper gasoline or additives can damage your fuel system and is considered misuse of the system. Damaged caused by improper gasoline or additives WILL NOT be covered under warranty.**

The fuel-system components of your Mercury engine(s) have been tested to perform with the maximum level of ethanol-blended gasoline (10% ethanol) currently allowed by the EPA in the United States.

Special precautions should be considered with the use of fuel containing ethanol in your system. Fuels with ethanol can attack some fuel-system components, such as tanks and lines, if they are not made from acceptable ethanol-compatible materials. This can lead to operational problems or safety issues such as clogged filters, leaks or engine damage.

Your boat was manufactured, and shipped from the factory, with ethanol-compatible materials. Before introducing gasoline with ethanol into your fuel tank, ask your dealer if any components have been added or replaced that are not recommended by Boston Whaler, Mercury or may not be ethanol-compatible.

### Filling the Tank

It is best to maintain a full tank of fuel when the engine is not in use. This will reduce air flow in and out of the tank due to changes in temperature as well as limiting exposure of the ethanol in the fuel to humidity and condensation.

### ⚠ CAUTION


**The use of fuels containing ethanol higher than 10 percent (E-10) can damage your engine and/or fuel system and will void the warranty.**

**E85 FUELS COULD SERIOUSLY DAMAGE YOUR ENGINES AND MUST NEVER BE USED.**

## Section 3 • Systems & Components Overview & Operation

Example of Phase Separation

Fig. 3.6.1

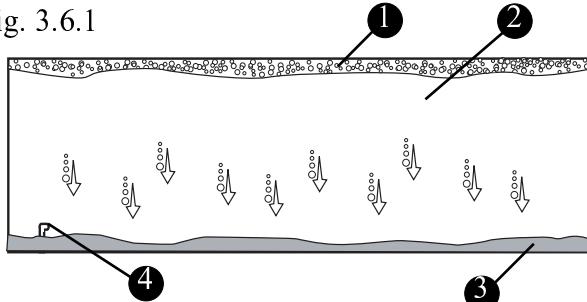

- 1 CONDENSATION
- 2 UPPER PHASE (WATER+FUEL+ETHANOL)
- 3 LOWER PHASE (WATER+ETHANOL)
- 4 FUEL INLET TO ENGINE

### Phase Separation

Humidity and condensation create water in your fuel tank which can adversely effect the ethanol blended fuel. A condition called phase separation can occur if water is drawn into the fuel beyond the saturation point. The presence of water in the fuel beyond the saturation level will cause most of the ethanol in the fuel to separate from the bulk fuel and drop to the bottom of the tank, significantly reducing the level of ethanol in the fuel mixture in the upper level (phase). If the lower level (phase), consisting of water and ethanol, is deep enough to reach the fuel inlet, it could be pumped directly to the engine(s) and cause significant problems. Engine problems can also result from the reduced ethanol/fuel mixture left in the upper phase of the tank.

### Additives

There is no practical additive known that can prevent or correct phase separation. The only solution is to keep water from accumulating in the tank.

If phase separation does occur, your only remedy is to drain the fuel, clean and dry the tank completely and refill with a fresh, dry load of fuel.

### Fuel Filters

Mercury already provides the appropriate level of filtration to protect the engine from debris. The addition of another *in-line* filter to the system may create a possible flow restriction that can starve the engine(s) of fuel. It is advisable to carry extra *on-*

*engine* filters in case filter plugging from debris in the fuel tank becomes a problem during boating.

Your Boston Whaler dealer will have recommendations regarding filters that meet Mercury's specifications.

### Fuel/water Separator

The fuel/water separator has been determined to be within Mercury specifications and will not restrict the flow of adequate fuel to the engine(s).

### Maintenance

Periodically inspect for the presence of water in the fuel tank. If any is found, all water must be removed and the tank completely dried before refilling the tank with any fuel containing ethanol.

### Storage

Long periods of storage and/or non-use, common to boats, create unique problems. When preparing to store a boat for extended periods, of two months or more, it is best to completely remove all fuel from the tank. If it is not possible to remove the fuel, maintaining a full tank of fuel with a fuel stabilizer added to provide fuel stability and corrosion protection is recommended.

- Add fuel stabilizer/treatment at manufacturers recommended dosage.
- Run engine(s) for 10 minutes.
- Shut OFF fuel valve. Allow engine to run until it stops.
- Top off fuel tank, leaving space for expansion. DO NOT fill to point of overflow.
- DO NOT cap the tank vent.

A partially full tank is not recommended because the void space above the fuel allows air movement that can bring in water through condensation as the air temperature moves up and down. This condensation could potentially become a problem.

REFERTO THE ENGINE MANUFACTURER'S MANUAL IN YOUROWNER'SMANUALPACKETFORCOMPLETEINSTRUCTIONS AND WARRANTY.

### Starting/Stopping the Engines



#### CAUTION

**NEVER start or operate your outboard (even momentarily) without water circulating through all the cooling water intake holes in the gearcase to prevent damage to the water pump (running dry) or overheating of the engine.**

#### Prior to Starting

- Operator should know boating safety, safe navigation, and boat operating procedures.
- Make sure that the lower unit of the engine is in the water.
- Make certain the gear shift/throttle control is in the neutral position. (The engine will not start if the control lever is in any other position than NEUTRAL)
- Be sure the ignition shut-down safety switch (See figure 1.16.1) is in the “RUN” position.

### Starting the Engines

The port and starboard master ignition key switches are located on the battery switch panel (Figure 3.8.1) behind an access door on the starboard gunnel opposite the helm seat. The switches must be turned on to activate the system.

**NOTE:** The engines cannot be started from this location.

#### NOTICE


**The gear shift/throttle control levers will not allow engine starting if the control levers are in any other position than NEUTRAL.**

- Turn the master key switches on (clockwise).
  - Be sure gear shift/ throttle control levers are in the NEUTRAL position.



#### Master Key Switches


Fig. 3.7.1

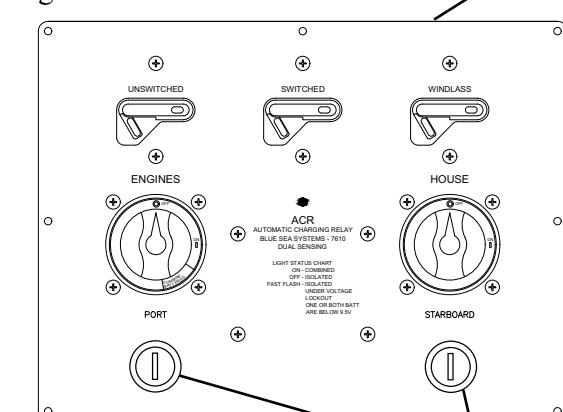


1 BATTERY SWITCH PANEL

2 MASTER KEY SWITCHES

- Press START/STOP button(s).

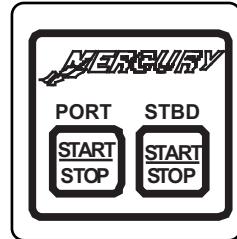


The neutral “N” lights located on the console controller will become illuminated once the engines are started and communicating with the remote controller.

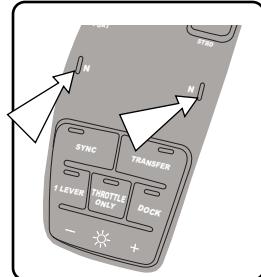

### Warming Up the Engines


The “THROTTLE ONLY” button on the face of the controller allows the operator to increase engine RPM for warm-up without shifting the engines into gear.

- Be sure that the gear shift/ throttle control levers are in the NEUTRAL position.

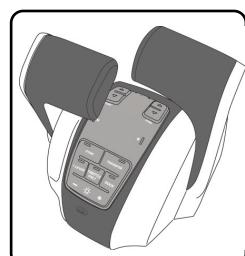



## Section 3 • Systems & Components Overview & Operation

- Press and hold the “THROTTLE ONLY” button while moving the control handle ahead to the forward position.
- Hold in the button until the horn sounds twice and the neutral lights start flashing. The flashing lights indicate that throttle only is engaged.
- Advance the control handles to increase engine RPM. Engine RPM is limited to prevent engine damage.
- To disengage, return the control handles back to the neutral position.

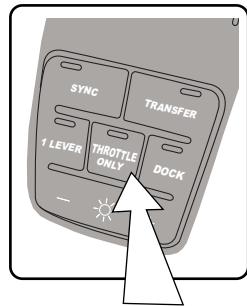

### Stopping the Engines

- Be sure that the gear shift/throttle controls are in the NEUTRAL position
- Press the start/stop button on the ignition pad for the appropriate engine.

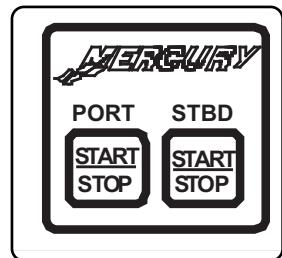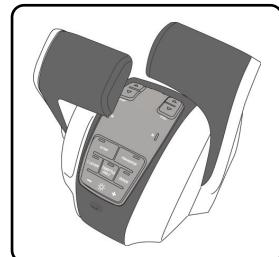

REFER TO THE ENGINE MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS.

The warm-up mode can be re-activated by turning the engines off and re-starting.

### Fresh Water System

#### NOTICE

- Be sure to fill the water tank from a source known to provide safe, pure drinking water.
- If you do not use the freshwater system for long periods of time or only use it seasonally it is recommended that you follow the disinfecting practice before using it.

Your boat has a 40 Gal. (151 L) fresh water tank located aft of the fuel tank.

The freshwater system includes: pump, plumbing, holding tank and connections for water service to the head (forward console), the prep station, the anchor locker and the transom shower.

#### Filling the Tank


The water tank can be filled through the water fill inlet located on the starboard gunnel (See fig. 2.8.1). Fill the tank only from a source known to provide safe, pure drinking water. Use only a plastic hose to fill the water tank. Using a rubber hose can give the water a disagreeable taste.

The hose should be dedicated to filling use only and should be stored in a clean, dry place. It is a good practice to cover the ends of the hose to ensure the inside stays clean.

Before you fill the freshwater system it is vital that it be properly disinfected. Ask your dealer if this has been done.

Fresh Water System

Fig. 3.9.1

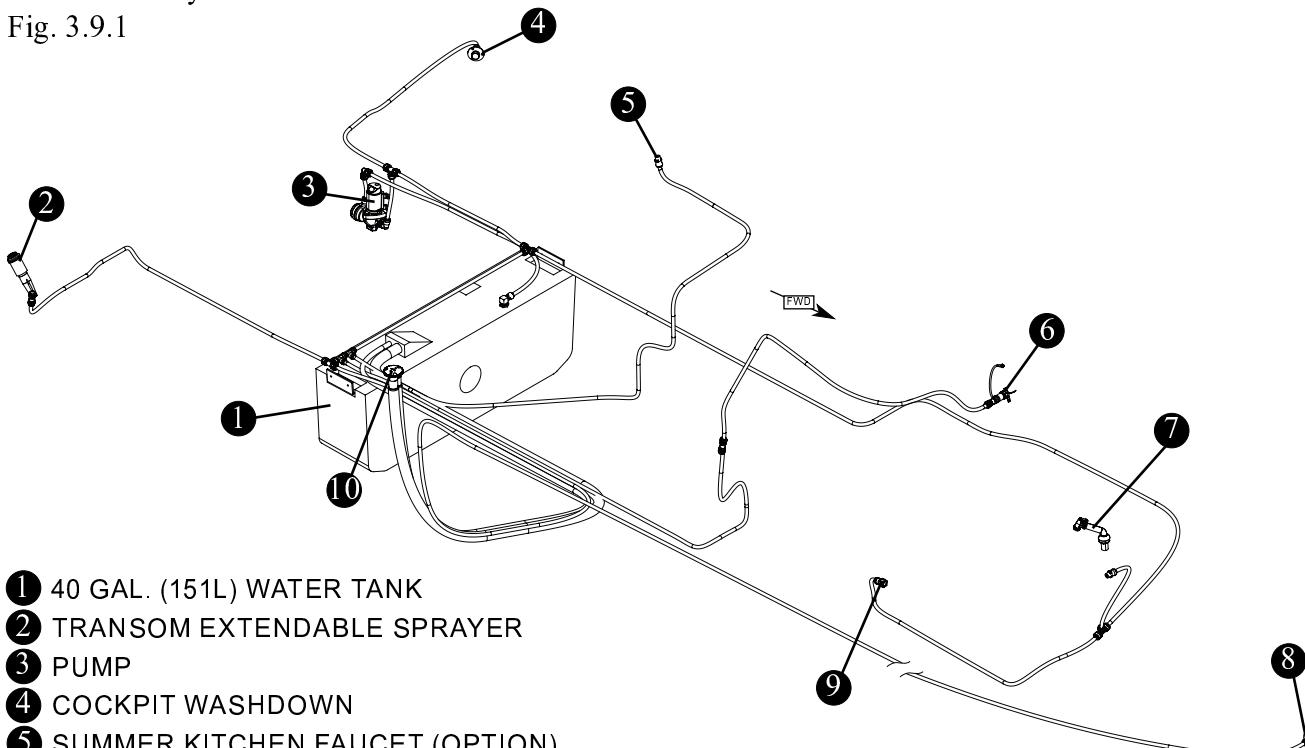

- ① 40 GAL. (151L) WATER TANK
- ② TRANSMON EXTENDABLE SPRAYER
- ③ PUMP
- ④ COCKPIT WASHDOWN
- ⑤ SUMMER KITCHEN FAUCET (OPTION)
- ⑥ TO WINDSHIELD WASHER
- ⑦ HEAD SINK/SHOWER
- ⑧ ANCHOR LOCKER WASHDOWN
- ⑨ VACU-FLUSH® TOILET
- ⑩ FRESH WATER FILL DECK PLATE

## Section 3 • Systems & Components Overview & Operation

The following procedure is recommended to disinfect the freshwater system:

1. Flush the entire system thoroughly by allowing potable water to flow through it.
2. Drain the system completely.
3. Fill the entire system with an approved disinfecting solution (check with your dealer for recommendations) and follow the method prescribed by the manufacturer.
4. After disinfecting, drain the entire system.
5. Flush the entire system thoroughly several more times with potable water.
6. Now the system is ready for use, fill with potable water.


This should be done annually or before using the system if it has been laid up for an extended amount of time.

### Freshwater Pump

The fresh water pump is located port wall of the bilge. To operate, depress the "FRESH WATER" switch located on the helm switch panel (See page 2.17). When activated, the freshwater pump draws water from the water tank and provides pressure to the transom shower, forward console (head) as well as the anchor locker washdown connection..

Fresh Water Pump

Fig. 3.10.1

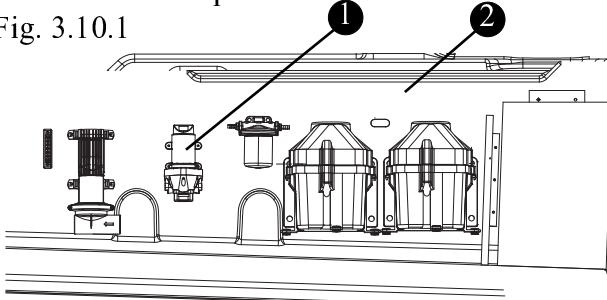

- ① FRESH WATER PUMP  
② PORT SIDE OF BILGE


### Transom Shower

The shower is supplied by the fresh water system and has a hose which extends approximately 6' (1.82M).

The shower unit is pressurized by the fresh water pumps and the spray head is activated by twisting the center of the unit.

Transom Shower Unit

Fig. 3.10.2

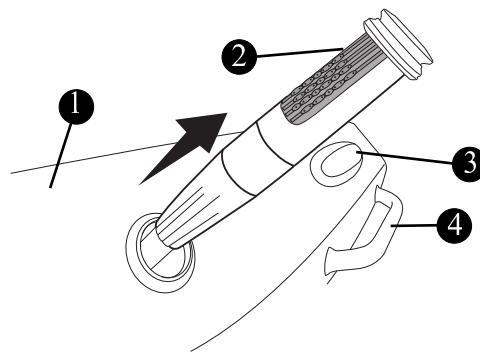

① TRANSOM

② SHOWER W/6' (1.82M) EXTENDABLE HOSE

③ TRANSOM CLEAT


④ TRANSOM GRAB RAIL

### Forward Console (Head) Faucet

The console faucet in the forward console is fitted with a 6' (1.82M) hose and is activated by depressing the lever on the rear of the unit. The fresh water pump must be on to operate the unit.

Console Faucet

Fig. 3.10.3

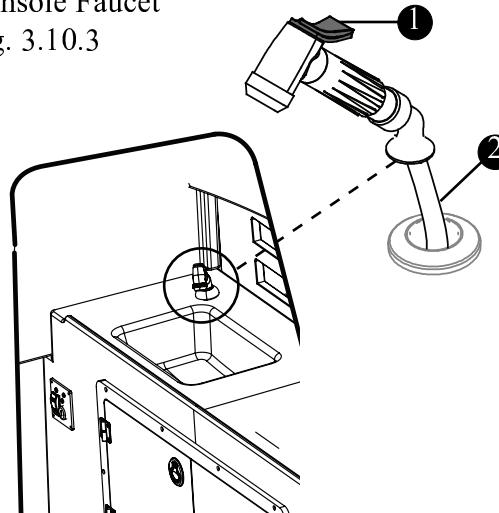

① PUSH BUTTON

② 6' (1.82M) EXTENDABLE HOSE

## Section 3 • Systems & Components Overview & Operation

### Maintenance

Very little maintenance is required for the freshwater system, other than annual disinfecting and winterizing. Periodically check the entire system to assure that the hose connections, tube fittings, electrical connections and mounting bolts are properly secured, and free of chafing.

### Winterizing The System

If the water system will not be used for an extended amount of time it is recommended that it be drained. Draining the freshwater system will require you to energize the freshwater pump switch on the instrument panel, press the button on the freshwater shower head and empty the freshwater tank. Next disconnect the hoses to and from the water pump to allow as much water as possible to drain out. De-energize the fresh water pump switch. Some service facilities may recommend filling the freshwater system with a non-toxic, non-freezing solution. This

procedure should be completed by an authorized service center.

### Raw Water System

The Raw water system includes a 3.5 GPM (13.25L) pump, a seacock with auxiliary pump, a 50 gallon (189 L) full fill livewell in the transom, and a raw water hose connection on the port aft cockpit.


The seacock must be set in the OPEN position for the raw water system to function (Figure 3.11.1).

The seacock and raw water pump can be accessed through the mechanical hatch in the cockpit.

### Operation

Make sure that the hull seacock is set in the open position and turn ON The “RAW WATER” switch on the starboard helm switch panel (See page 2-15) by pushing on the top of the switch. The raw water pump will be activated and the system will become functional.

Raw Water System  
Fig. 3.11.1

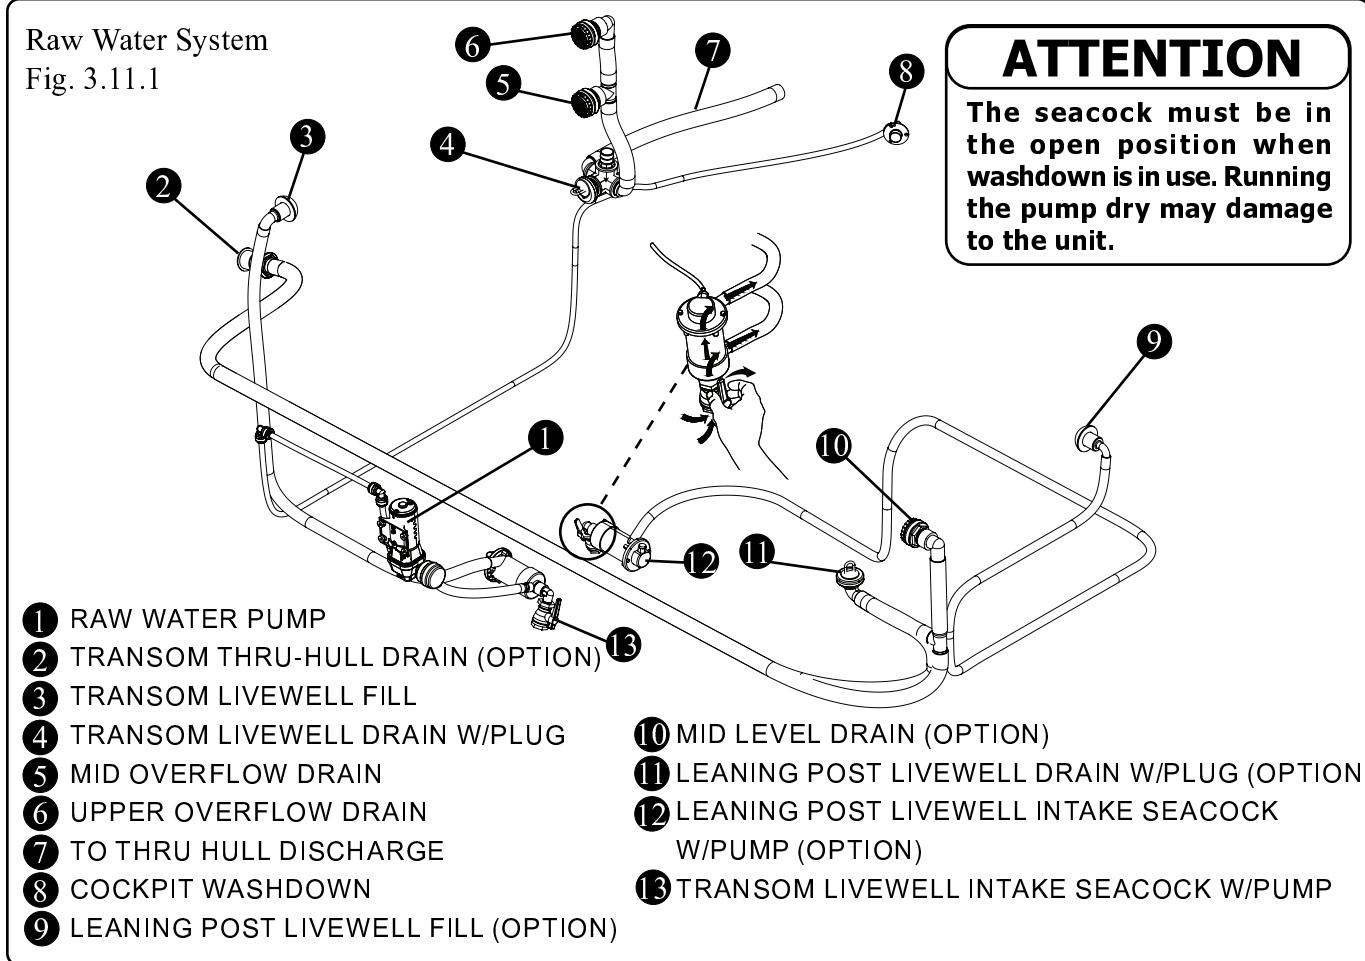

## Section 3 • Systems & Components Overview & Operation

### Transom Livewell

A 50 gal. (189 L) Full-Fill livewell is located centerline on the transom.

The livewell keeps baitfish alive by circulating fresh seawater through the tank.

The livewell has two drains to regulate the amount of water in the unit. You can regulate the water volume by inserting the second drain plug (supplied) into the mid overflow drain, thus raising the level of water to the upper limit. This "Full-Fill" design provides a stable environment to reduce fatigue on your baitfish resulting in a more active and longer lasting product.

The bottom drain is used to empty the livewell of water completely. By utilizing the drain plug (supplied) between the two overflow drains in the side of the livewell you can adjust the level of water in the unit. A drain tube with strainer connects to the livewell overflow drains and will direct overflow/excess water to the thru-hull drains.

#### "Full-Fill" Livewell Operation

### ATTENTION

**The seacock must be in the open position when livewell is in use. Running the pump dry may damage to the unit.**


Before operating the system make certain the hull seacock and flow control valve are in the open position. The hull seacock can be accessed through the aft cockpit deck hatch. The flow control valve is located at the raw water fill inlet. The valve lets you adjust the flow of water into the livewell tank by rotating the valve to "OPEN" or "CLOSE" (Figure 3.12.1).

- Make sure that the hull seacocks are in the open position (See fig. 3.11.1).
- Insert a drain plug (supplied) into the mid overflow drain (See fig. 3.2.1 ) and fill the livewell completely.

The upper overflow drain will allow the water to rise to just below the lid before starting to drain.

### Transom Livewell

Fig. 3.12.1

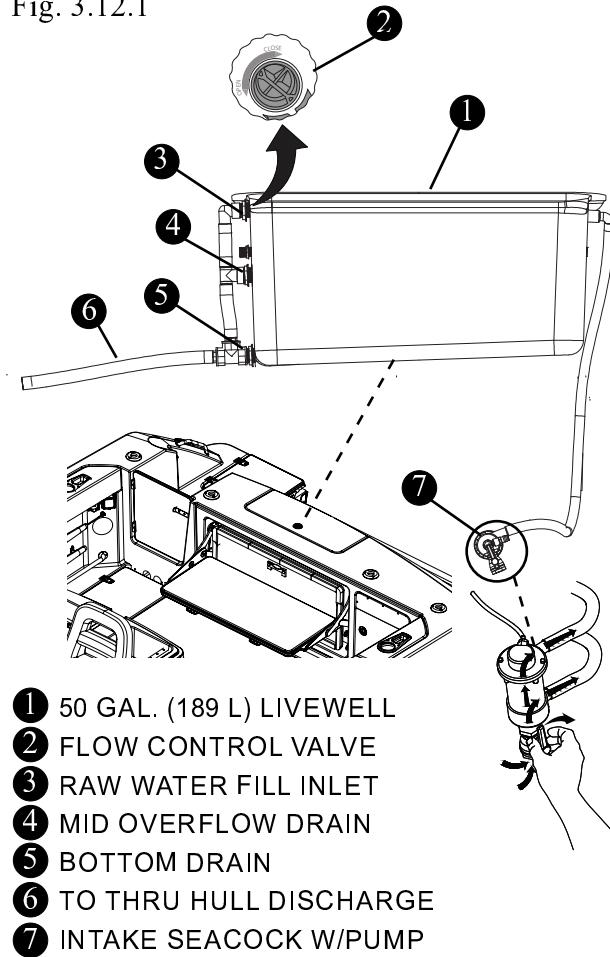

Maintaining this water level enhances the stability of the water in the tank. .

- Fill the livewell(s) by pressing the switches marked "FWD L/W" or "AFT L/W" on the helm switch panel (See page 2-17).

### Maintenance

Maintenance of the livewell system requires periodic inspection of the raw water intake strainer on the hull and all fittings and hoses for system integrity to prevent leaks.

Clean away debris and/or tighten hose connections as required. The system should be run at least every other month to keep the pumps impellers in good condition.

## Section 3 • Systems & Components Overview & Operation

### Leaning Post Livewell (Option)

If equipped the 40 gal. (151.4 L) livewell is located in the leaning post under the seat.

This “Full-Fill” design provides a stable environment to reduce fatigue on your baitfish resulting in a more active and longer lasting product.

The bottom drain is used to empty the livewell of water completely.


A drain tube with strainer connects to the livewell overflow drains and will direct overflow/excess water to the thru-hull drain.

#### ATTENTION

**The seacock must be in the open position when livewell is in use. Running the pump dry may damage to the unit.**

Leaning Post Livewell (Option)

Fig. 3.13.1

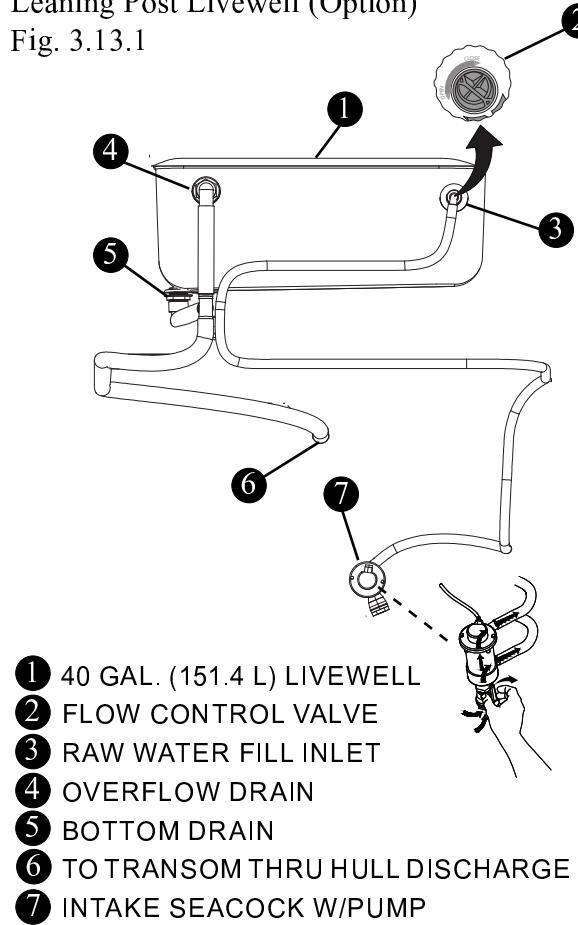

## Section 3 • Systems & Components Overview & Operation

### Head System

#### Environmental Considerations

The Environmental Protection Agency (EPA) standards state that in freshwater lakes, reservoirs, impoundments whose inlets or outlets are such as to prevent the ingress or egress by vessel traffic subject to this regulation, or in rivers not capable of navigation by interstate traffic subject to this regulation, marine sanitation certified by the United States Coast Guard (U.S.C.G.) installed on vessels shall be designed and operated to prevent the overboard discharge of sewage, treated or untreated or any other waste derived from sewage.

The EPA standards further state that this shall not be construed to prohibit the carriage of Coast Guard certified flow through treatment devices which have been secured so as to prevent such discharges. They also state that the waters where a Coast Guard certified marine sanitation device permitting discharge is allowed include: Coastal waters, Estuaries, The Great Lakes and Intercoastal waterways, Freshwater lakes and Impoundments accessible through locks and other flowing waters that are navigable interstate by vessels subject to this regulation. (40CFR 140.3)

#### ! CAUTION

The discharge seacock should always be in the closed position when the toilet is not in use. Failure to do so could result in flooding or property damage.

The 330 Outrage is equipped with a waste disposal system (head) located in the forward console. The waste containment system includes a VacuFlush® toilet, a 6.5 Gal. (24.6L) holding tank with vacuum pump, macerator & lockable discharge seacock and a thru-hull vent.


To lock the discharge seacock; rotate the handle until the hole in the handle is aligned with the hole in the locking plate and insert a padlock (not supplied).

#### NOTICE

This boat is equipped with a direct overboard discharge valve. Discharging of sewage directly overboard is for use where approved only. Damage to the system could occur if the discharge seacock is not open during operation.

Head System with Lockable Discharge Seacock

Fig. 3.14.1

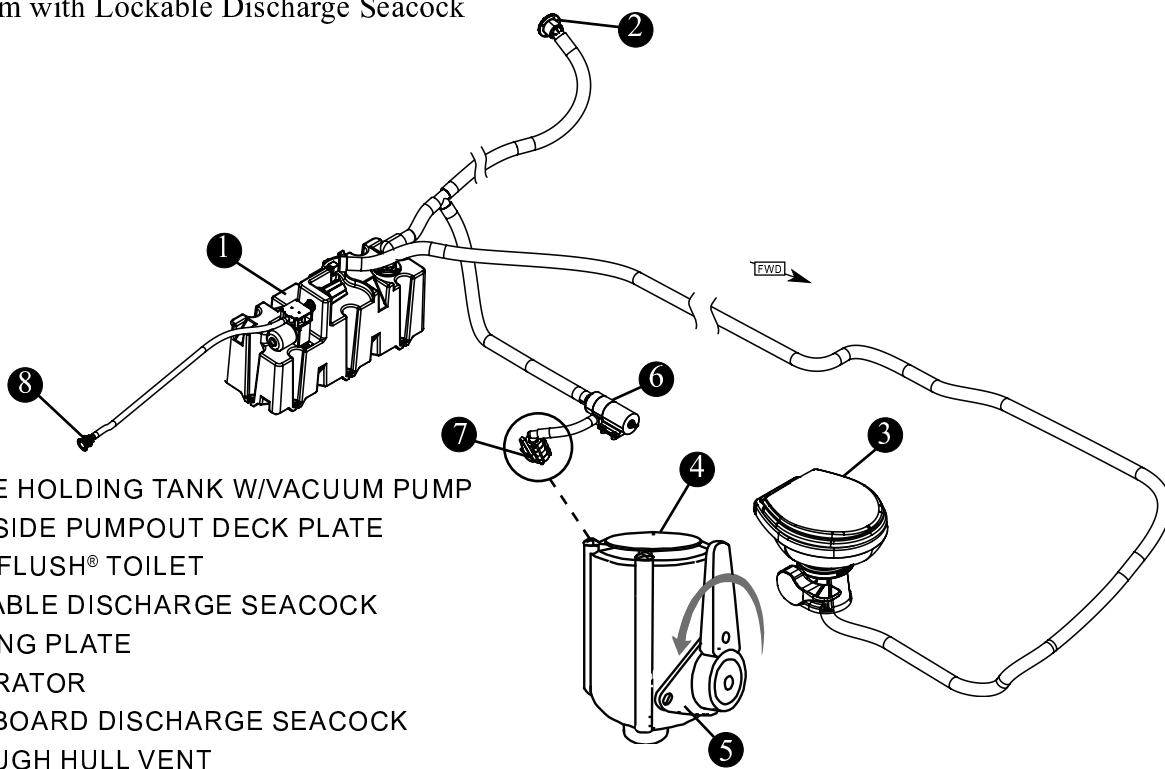


## Section 3 • Systems & Components Overview & Operation

### Macerator/Overboard Discharge

The macerator discharge pump draws solid and liquid waste from the holding tank and processes it prior to discharging it overboard through the discharge seacock located in the bilge (See fig. 3.14.1).

Waste Discharge Panel

Fig. 3.15.1

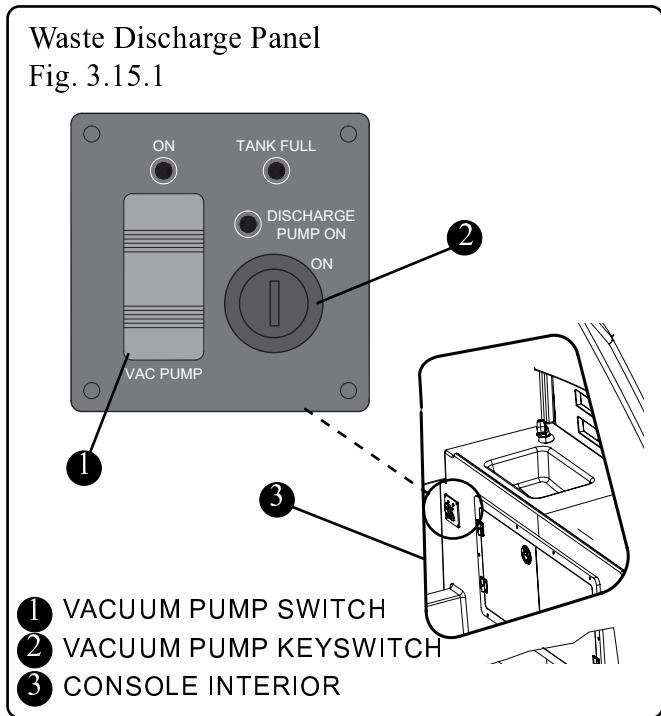

### Macerator Operation

The macerator control panel is located on the forward wall of the console interior. If the "FULL" light is on you must empty the holding tank before the system will function properly.

- Make sure the discharge seacock is in the open position.
- Insert the macerator key, which is included in your owners manual packet, into the panel.

#### NOTICE

**Severe state and federal penalties are levied for discharging raw sewage and solid waste in waters where it is not permitted.**

**Demonstrating that you have disabled the macerator by locking the system and/or removing the seacock handle may avoid a fine.**

**It is illegal for any vessel to dump plastic trash anywhere in the ocean or navigable waters of the United States.**

- De-energize the vacuum pump by depressing the push button/switch. The button should be extended.
- Depress the lever on the toilet to deplete the vacuum.
- Turn the key clockwise and hold it there.
- When you are satisfied that the tank has been emptied, return the key to the upright position.
- Energize the system by depressing the push button/switch. The button will remain depressed.
- The system is now ready for normal operation.

### Maintenance

After long periods of non-use, the macerator pump may not turn freely. Regular use of the system will reduce the chances of this occurring. If the system does require maintenance contact your nearest dealer.

Because your waste system is a low water use device, there is special paper which must be used to prevent clogs.

#### NOTICE

**NEVER use residential tissue paper in your marine waste system.**

### Dockside Discharge

#### NOTICE

**Dockside discharge is a preferred method of waste disposal.**

The Dock-side discharge deck plate is located on the starboard gunwale, amidship (See figure 2.7.1). Access is gained by use of a special key that is included in the owners manual packet.

The dockside facility will have a connection to fit your boat.

## Section 3 • Systems & Components Overview & Operation

**NOTE:** Prior to using either method of discharging sewage:

- De-energize the vacuum pump by depressing the push button/switch.
- Depress the lever on the toilet to deplete the vacuum.
- After completion of the discharge, energize the vacuum pump by returning the switch or button to its normal position.

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.


The 330 Outrage has two (2) deep well, insulated fish boxes. One (1) each located port and starboard in the cockpit. The boxes have gasketed lids and draw latches for a secure seal.

The fish boxes utilize an electrical pump system to discharge water overboard by way of thru-hull fittings port and starboard (Figure 2.7.1).

The cockpit discharge pumps are located in the bilge (See fig. 2.10.1) and can be accessed through the hatch in the aft cockpit deck.


The pumps are independently activated by switches on the starboard helm switch panel and are protected by breakers located on the main breaker panel located on the starboard gunnel opposite the helm( See fig. 4.6.1).

Check these breakers first and reset if a problem arises with the pumps failing to activate when the switches are depressed.

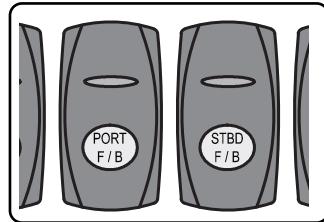

Fish Box w/Pumpout


Fig. 3.16.1

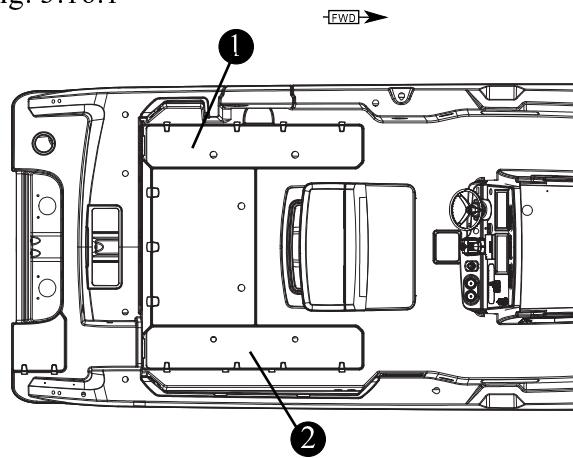

- 1 PORT FISHBOX  
2 STARBOARD FISHBOX

### Forward Fish Box w/Pump Out


The forward deep well, insulated fish box is located in the forward deck. The forward discharge pump can be accessed through the storage door on the head vanity. The pump is independently activated by a switch on the starboard helm switch panel and is protected by a breaker located on the main breaker panel located on the starboard gunnel opposite the helm( See fig. 4.6.1).

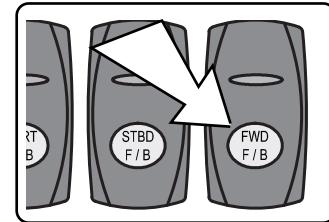

Check these breakers first and reset if a problem arises with the pumps failing to activate when the switches are depressed.

Fish Box w/Pumpout

Fig. 3.16.2

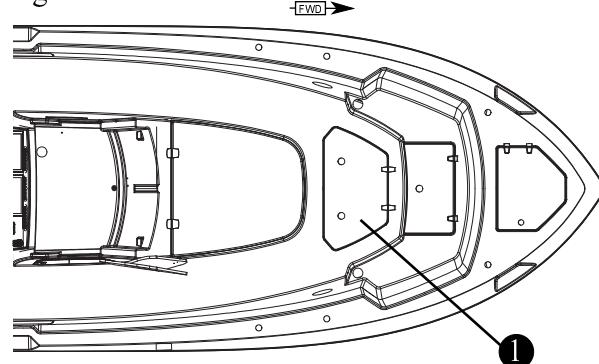

- 1 FORWARD FISHBOX

## Section 3 • Systems & Components Overview & Operation

### Seakeeper Gyroscopic Stabilizer (Option)

If equipped, your boat will have four (4) additional 12V batteries which can be accessed through a hatch in the bottom of the forward lounge. Fully charged batteries will provide power to the gyroscopic stabilizer for six (6) to seven (7) hours.

A dedicated battery charger is also included and is located in the leaning post. A remote display is located on the control console.

A dedicated Automatic Charging Relay (ACR) is located in the starboard side of the bilge compartment. When the engines are run at high RPM, the ACR will redirect excess charge from the house battery bank to the gyroscopic stabilizer battery bank to extend run time over seven (7) hours.


**Spool-up Time to Rated Speed - 50 minutes**

**Spool-up Time to Stabilization - 35 minutes**

**Full speed to zero RPM - approx 2 hours**

### Gyro Stabilizer (Option)


Fig. 3.17.1

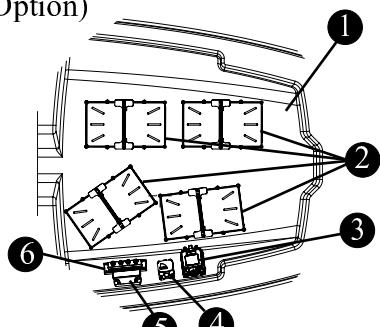

- 1 FORWARD BILGE
- 2 SEAKEEPER GYRO BATTERIES
- 3 AUTOMATIC CHARGING RELAY (ACR)
- 4 GYRO BREAKER
- 5 GYRO CHARGER FUSE
- 6 GYRO GROUND BUSS BAR

### Gyro Stabilizer Remote Display (Option)

Fig. 3.17.3

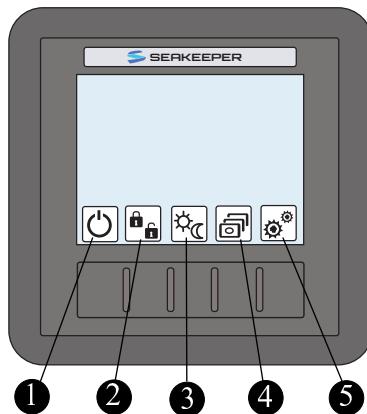

- 1 ON/OFF AND FAULT RESET
- 2 GYRO LOCK/UNLOCK
- 3 DISPLAY BRIGHTNESS (DAY/NIGHT)
- 4 SCREEN VIEWS (TOGGLE)
- 5 SETTING

### WARNING


**Gyro cover panels are provided to prevent personnel or equipment from contacting the gyro while it is in operation. These covers should not be stood on, or have anything placed on top. The covers should always be in place during operation. If it is ever necessary to touch the gyro while the flywheel is spinning, the gyro must be locked at the display to stop the gyro from precessing (tilting). Gyro maintenance should not be attempted unless the gyro is locked and the flywheel has stopped spinning.**

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Gyro Stabilizer (Option)

Fig. 3.17.2

- 1 SEAKEEPER GYRO STABILIZER
- 2 BATTERY CHARGER
- 3 WATER PUMP
- 4 WATER STRAINER
- 5 GYRO AUTOMATIC CHARGING RELAY (ACR)
- 6 INTAKE SEACOCK
- 7 TO THRU HULL OUTLET

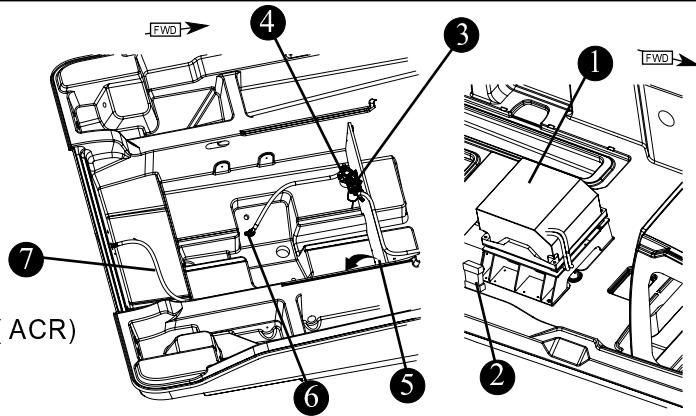

## Section 3 • Systems & Components Overview & Operation


### Radial Outriggers (Option)

If equipped, there are two (2) radial outriggers. One each located on the port and starboard side of the hardtop. The outriggers are adjustable to provide ease of operation and convenient ready-to-use storage.

#### Operation


##### Extending Outriggers:

Starting with the outboard section, extend each section out until the locking button snaps into place.

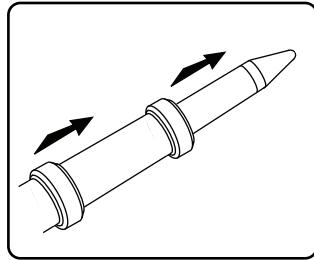

Radial Outriggers (Option)

Fig. 3.18.1

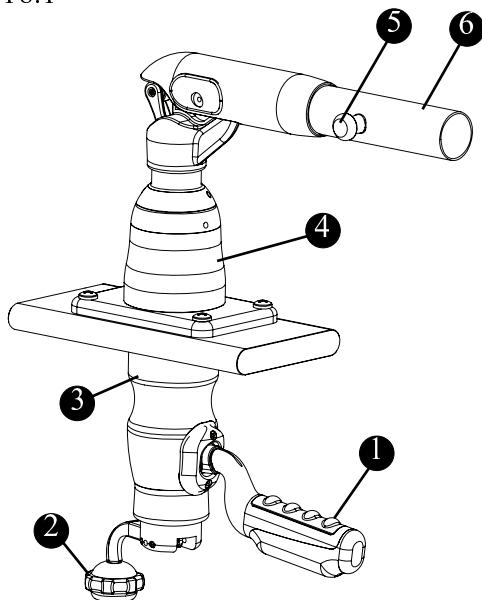


- 1 ROTATION ADJUSTMENT HANDLES
- 2 POWER CRANK HANDLE
- 3 LOWER UNIT
- 4 UPPER UNIT
- 5 SHAFT LOCK
- 6 EXTENDABLE SHAFT

##### To position the outriggers:


###### Raising or lowering:

Extend the power crank handle out and lock into place. To raise, turn handle clockwise. To lower, turn handle counterclockwise

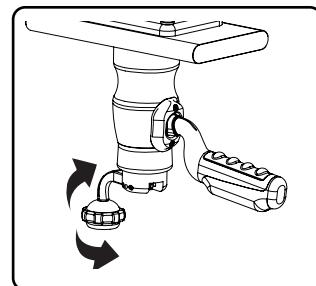


###### Rotating Outriggers:

Pull down on the lower unit handle and rotate to the desired position. When released the handle will hold the outrigger shaft into position.

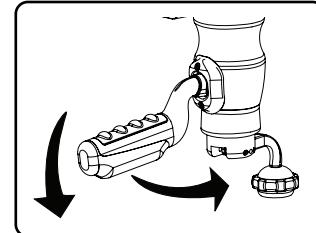

##### Retrieving Outriggers:

Starting with the inboard most section, Push in the locking button on each succeeding section and insert sections into the shaft until all sections are completely seated in the stowed position.

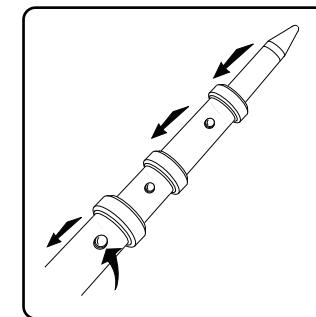

### Maintenance

When at port, extend the outriggers and clean with a mild, non-abrasive soap and fresh water, wipe with a dry cloth and allow to air dry. When dry, collapse the outriggers to the stowed position. Periodically lightly lubricate the cam and the shaft of the cam knob.


## Section 3 • Systems & Components Overview & Operation

### Entertainment System

The entertainment system on your boat consists of a Fusion® AM/FM stereo with “UNI-Dock” iPod/iPhone dock audio, four (4) waterproof speakers, remote control pad and USB input. The stereo is located on the interior aft wall of the console. The remote is located on the control station.


Stereo Remote

Fig. 3.19.1

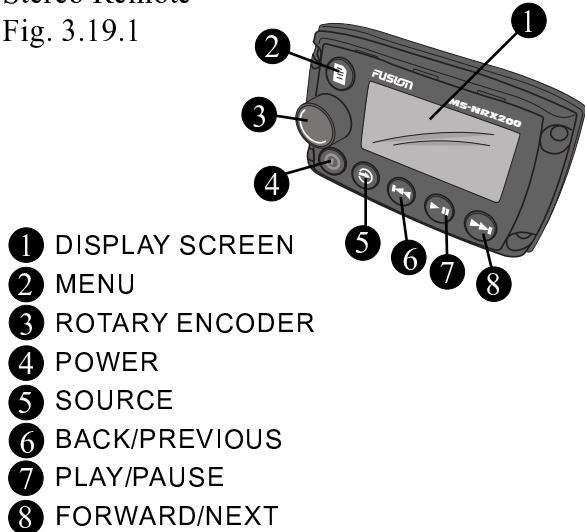

Stereo

Fig. 3.19.2

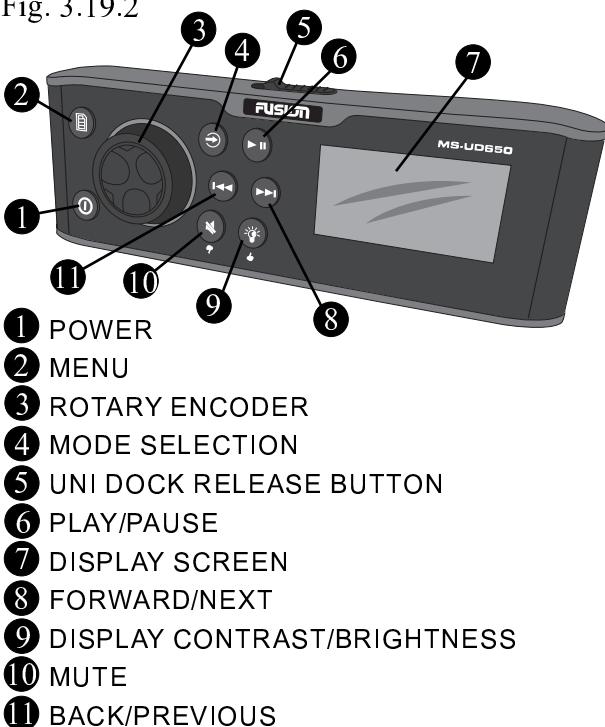

The revolutionary UNI-Dock supports the widest array of smart phones, media players and USB devices on the market.


UNI-Dock allows users to enjoy on-the-water entertainment from an extensive range of Apple and supported MTP (Media Transfer Protocol) enabled Android and Windows smartphones

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS, INFORMATION AND WARRANTY.

### Lighting

#### Cockpit Lighting


The courtesy lights placed around the cockpit, forward and aft, are powered by the “CTSY LTS” switch on the helm switch panel (See fig. 2.17.1). The lights are protected by the “CTSY/INT LIGHTS” breaker on the main breaker panel located on the starboard gunnel opposite of the helm (See fig. 4.6.1).

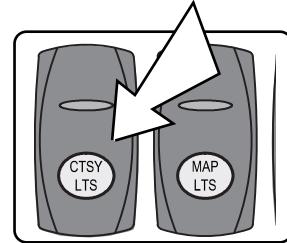

#### Hardtop Lighting

##### Map Light

The dual lamp map light (red & white) is located directly above the console. The map light is powered by the “MAP LTS” switch on the helm switch panel (See fig. 2.17.1) and is protected by the “CTSY/INT LIGHTS” breaker on the main breaker panel located on the starboard gunnel opposite of the helm (See fig. 4.6.1).

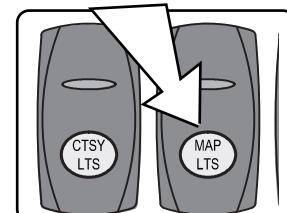

The switch on the helm switch panel is a three position switch which allows for red or white lighting selection.


##### Flood Lights

The hardtop flood lights are operated by the “FLD LTS” switch on the helm switch panel (See fig. 3.19.1) The lights are protected by the “FLOOD LIGHTS” breaker on the main breaker panel located on the starboard gunnel opposite of the helm (See fig. 4.6.1).

## Section 3 • Systems & Components Overview & Operation


### Flood Light Operation

Fig. 3.20.1

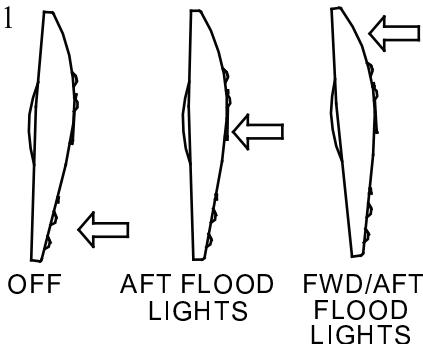

### Underwater Lights (Option)


If equipped, the three (3) blue underwater lights are located on the transom just below the surface of the water. When lit the lights illuminate the water in a translucent blue glow which enhances the after dark experience of being on the water and in addition may on occasion attract a myriad of marine life.

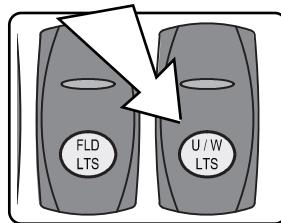

The underwater lights are powered by the "U/W LTS" switch on the helm switch panel (See fig. 2.17.1). The lights are protected by the "U/W LIGHTS" breaker on the main breaker panel located on the starboard gunnel opposite of the helm (See fig. 4.18.1).

### Underwater Lights (Option)

Fig. 3.20.2

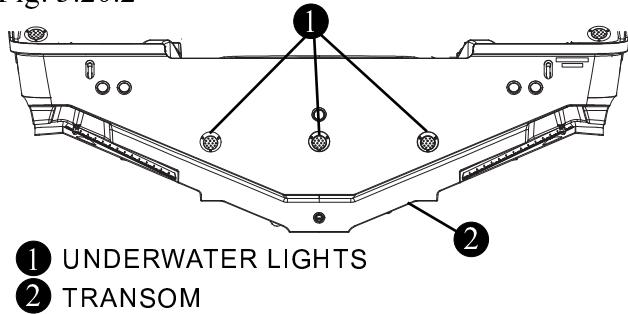

### CAUTION

Underwater lights are not to be used when navigational lights are in use as this may interfere with the effectiveness of the navigational lights.

### Retractable Swim Ladder


The retractable swim ladder is located under a cover on the aft starboard deck of your boat (Figure 3.18.1). The ladder can be accessed by lifting the cover or pulling the ladder out without lifting the cover.

To deploy the swim ladder:

- Pull Ladder from under cover.
- Rotate the ladder unit downward
- Extend the ladder rungs.

### Retractable Swim Ladder

Fig. 3.20.3

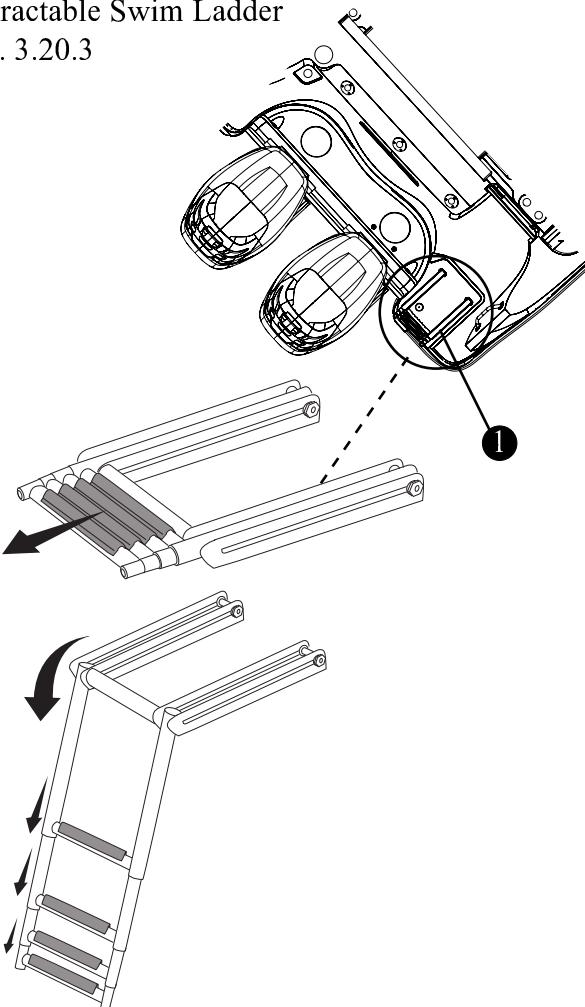

① SWIM LADDER\*

\*Cover removed for clarity.

## Section 3 • Systems & Components Overview & Operation


### Dive Door

The innovative design of your boat includes a portside door for ease of transition to and from the water or dock. The door opens wide and features a swivel grab handle to assist persons entering or exiting the water. To use the grab handle, lift up and swivel into place.

The stainless steel deck bracket accommodates a removable ladder which is stowed in base of the aft bench seat when not in use.

Dive/Boarding Door

Fig. 3.21.1

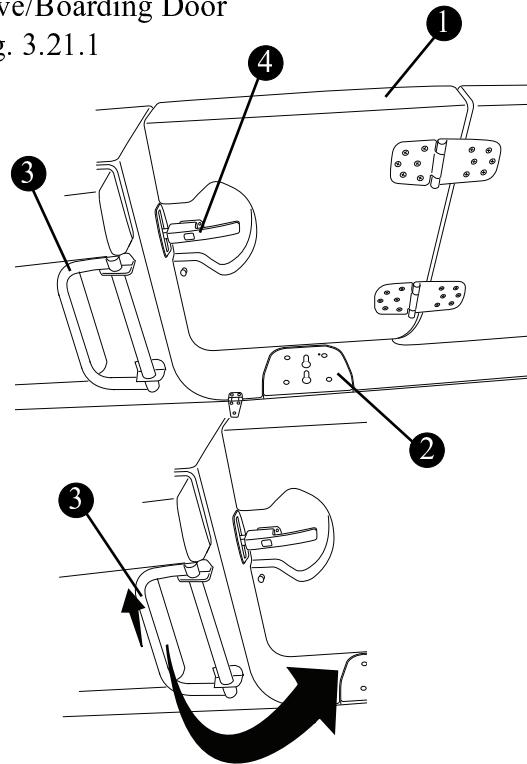

- ① PORTSIDE FIBERGLASS DIVE DOOR
- ② STAINLESS STEEL LADDER BRACKET
- ③ SWIVEL GRAB HANDLE
- ④ STAINLESS STEEL LATCH

### ! DANGER

Ensure that door is closed and securely latched when boat is underway.

### Dive Ladder

### ! DANGER

The dive ladder should NEVER be deployed when boat is in motion or the engines are running.


To avoid risk of injury or death, shut off engines when using the dive door to enter or exit the water.

The installation of the dive ladder is quick and easy>

- Remove the ladder from its stowed position on the aft wall of the console interior (See fig. 3.21.2)
- Rotate the brace at the top of the ladder so that it is perpendicular to the shaft.

Dive Ladder Installation

Fig. 3.21.2

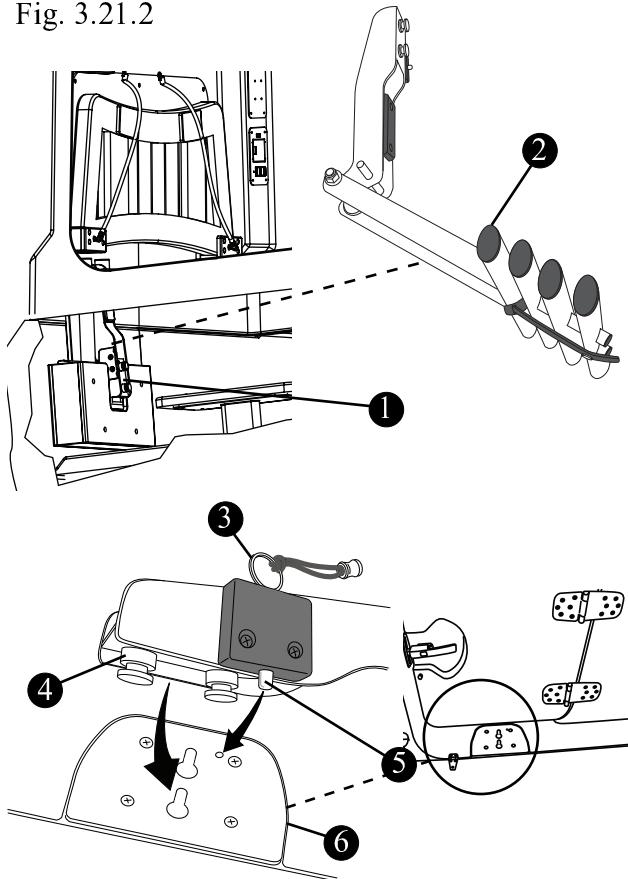

- ① DIVE LADDER (STOWED)
- ② DIVE LADDER
- ③ LOCKING PIN RELEASE RING
- ④ DIVE LADDER BRACE
- ⑤ LOCKING PIN
- ⑥ DECK LADDER BRACKET

## Section 3 • Systems & Components Overview & Operation

- Insert the two pegs on the brace into the deck bracket.
- Secure the ladder into place by pushing the brace outboard until it seats firmly into the bracket and the locking pin has snapped into place.





### Spotlight (Option)

If equipped, the optional spotlight is mounted forward on the hardtop.

The 2-speed spotlight with Directional Flexibility is controlled by a remote toggle located at the control station.

### To Operate

- Depress the ON/OFF button and using the toggle direct the spotlight to the position desired.
- To adjust the speed of the spotlight rotation depress either the TURTLE (slow) button or the RABBIT (rapid) button.

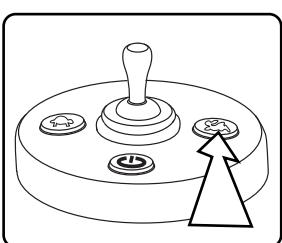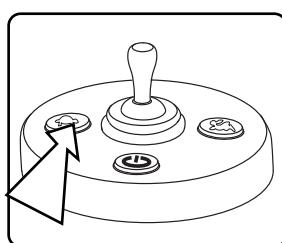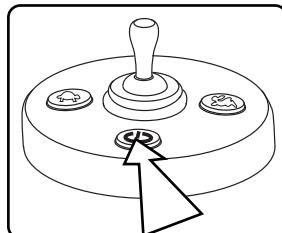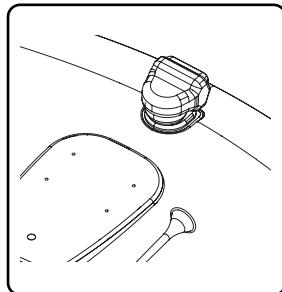

### Summer Kitchen (Option)

If you have chosen the optional summer kitchen (See fig. 2.13.1) your boat will be equipped with a Kenyon® Electric grill. A refrigerator/freezer is available as an option.

### Electric Grill (Option)

#### ! WARNING

Please read and understand the safety precautions found in the Kenyon® Custom Electric Grill owner's manual.

The Kenyon® Custom All Seasons Electric Grill provides a safe method of grilling without the hazard of open flames associated with propane gas or charcoal grills.

### Dedicated Batteries with Inverter

The summer kitchen option includes three (3) additional 12 volt batteries (See fig. 4.3.1) and an inverter, dedicated to the operation of the electric grill. When underway the grill is powered by the dedicated batteries through the inverter (See fig. 4.8.1) which provides the necessary power to operate the grill. Fully charged batteries will provide power to the grill for one (1) hour on high heat and one and a half hours (1.5) on medium heat.

When at dock, operating under shore power, the inverter automatically switches to recharge the dedicated batteries.

### Maintenance

A concealed electric element eliminates grease flare-ups and a reusable grease pan located under the heating element collects all the fat and juices associated with grilling. **The grease pan must be emptied after each use.**

### To remove the grease pan (Fig. 3.23.1):


- Remove the grate.
- Lift the heating element.
- Remove the grease pan.

### NOTICE

To prevent the contents of the grease pan from smoking, place 1 cup of water in the grease pan before cooking.

Electric Grill (Option)

Fig. 3.23.1

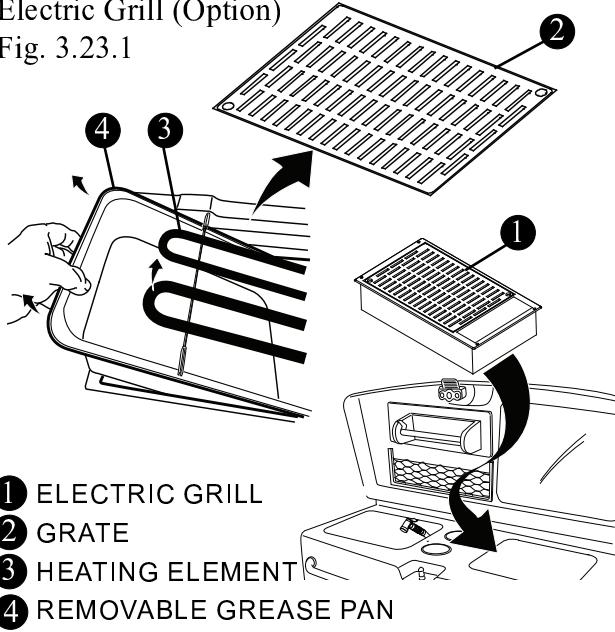

When replacing the pan, assure that it is completely contained within the grill and that the side of the pan does not extend outside of the grill sides.

#### Automatic Shut-Off

There is an automatic shut-off switch located at the back of the grill cover. When the cover is closed the shut-off switch is engaged and power to the grill will be turned off. Do not under any circumstances override the automatic shut-off switch.



### CAUTION


**The electric grill will become dangerously hot.**

**Depending on the level of heat used for cooking, the grill will automatically shut off 60-90 minutes after ignition. However, it is good practice to close the lid when not in use. This action will engage the automatic shut-off switch and cut power to the grill.**

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

Slide Out Refrigerator/Freezer (Option)

Fig. 3.23.2

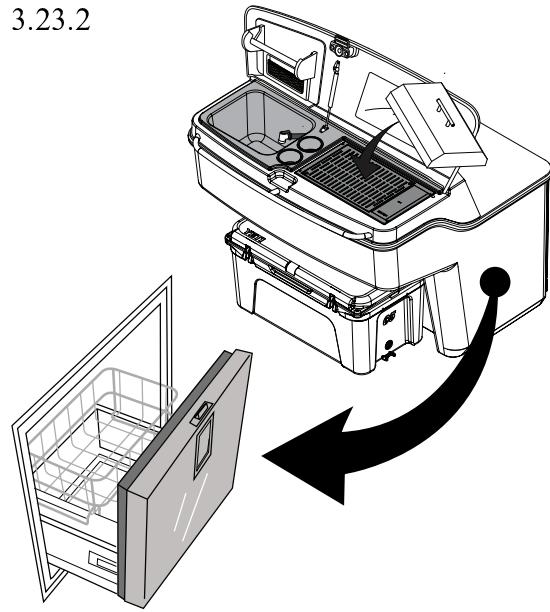

### Refrigerator/Freezer (Option)

The summer kitchen option comes equipped with a 12V/120V refrigerator/freezer combination located on the starboard side of the helm seating.

The AC/DC refrigerator/freezer is located on the front of the prep station.

The refrigerator is powered by shore power, if connected or generator (option). The "REFRIG" breaker on the 120V AC breaker panel located in the console interior (see fig. 4.9.1) must be ON for the refrigerator/freezer to function.

If not connected to shore power or optional generator, the refrigerator/freezer is powered by the house batteries (see fig. 4.6.1).

### NOTICE


**To avoid draining the batteries, the refrigerator and/or battery switch must be turned OFF.**

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

## Section 3 • Systems & Components Overview & Operation

### Bow Table (Option)

The optional bow table is gas actuated. It can be raised and lowered by loosening the clamp on the support post. Fully raised, the table can be used for entertaining in the bow.

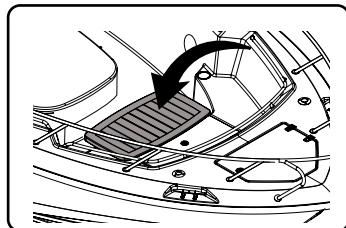

When completely lowered the table becomes a stable surface for the optional cushion which expands the lounge surface of the bow.

#### ! CAUTION

**Lower table while running.**

#### ATTENTION

**Cover table with the included cover when not in use. Refer to teak care instructions in Chapter 5.**

### Dynamic Running Surface™

#### ATTENTION

**Visibility from the helm station may be limited, use of trim tabs may be necessary to maintain adequate visibility in some running conditions. Avoid serious injury or death from collisions. maintain a lookout as required by USCG Navigation Rules.**


Your vessel may be equipped with electrically powered trim tabs (Fig. 3.24.1). If installed, the trim tabs are located on the bottom of the hull at the transom and are used to assist in leveling your vessel caused by uneven weight distribution or strong cross winds. The use of trim tabs may also increase your operator visibility, particularly during initial acceleration.

An untrimmed boat will:

- Reduce fuel economy
- Increase wear on your engine.

### Electrically Powered Trim Tabs


Fig. 3.24.1

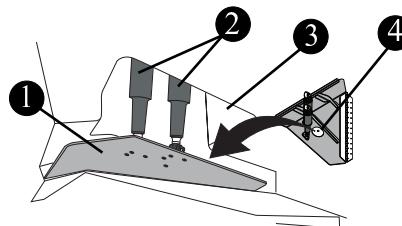

- 1 DYNAMIC RUNNING SURFACE™
- 2 ACTUATORS
- 3 TRANSOM
- 4 ZINC ANODE

### Operation

The trim tabs are controlled by rocker switches located at the helm console. Short momentary bursts of the rockers will achieve proper attitude of the hull. The trim tab switch is marked "bow up" and "bow down".

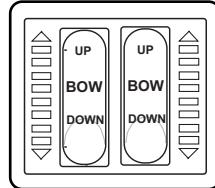

Using the trim tabs can:

- Level the boat; fore and aft, port and starboard.
- Reduce resistance in the steering system.
- Increase speed
- Reduce strain on the engines
- Provide a smoother, more stable ride


### Maintenance

The trim tabs are sealed, waterproof and maintenance free. General cleaning is recommended, and marine growth should be removed when the boat is out of the water. Also inspect the sacrificial anodes regularly and replace as necessary, refer to chapter 5 for additional information.

**REFER TO OWNER'S PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY INFORMATION.**

### Active Trim (Option)

If equipped, the Active trim panel is located on the forward hardtop above the console.

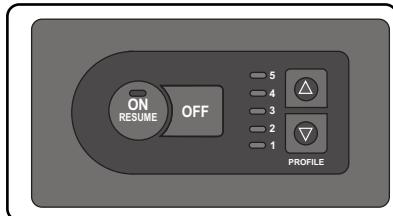

Active Trim provides the benefit of perfect trimming without constantly monitoring and adjusting trim with changes to boat speed or when going into turns.

Active Trim controls the trim in accordance with boat speed and engine rpm. This avoids potential problems such as engines trimming up (instead of down) if the propeller breaks loose in a hard turn. It also avoids issues with the engine trimming up too early or too late when the boat is getting on plane.

Active Trim has five selectable trim profiles that accommodate nearly any boat application. These profiles allow operators to compensate for changes in boat load, operator preference and weather conditions, while maintaining full auto operation.

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Shore Power

The 120V/30A shore power system provides dockside power to operate all of your boat's electrical system and charge your batteries.

Use the supplied 50 ft. power cord to connect your boat to a dockside power source. The boatside receptacle is located under the aft starboard gunwale. The main breaker panel for the shore power system is located on the aft wall portside in the forward console.

### Shore Power Hookup

Before making shore power connections make sure your boat is properly moored.

- Connect the female connector to the boat receptacle first.
- Next connect the male connector to the dockside panel.

### ! CAUTION

#### To minimize shock hazard:


- Be certain that the shore power main switch is turned OFF before connecting the power cord cordset.
- Connect the cordset to the boat inlet first, then to the shore inlet.
- NEVER alter the cordset connectors.

- Check the breaker panel. DO NOT continue if the "REVERSE POLARITY" light is on. Remove cordset and report the situation to the dockmaster.
- If the reverse polarity light is not on, switch the "SHORE POWER MAIN" on.

In addition to supplying alternative power to your boat, shore power hookup gives you the ability to charge your batteries without running the engines.

Shore Power Receptacle

Fig. 3.25.1

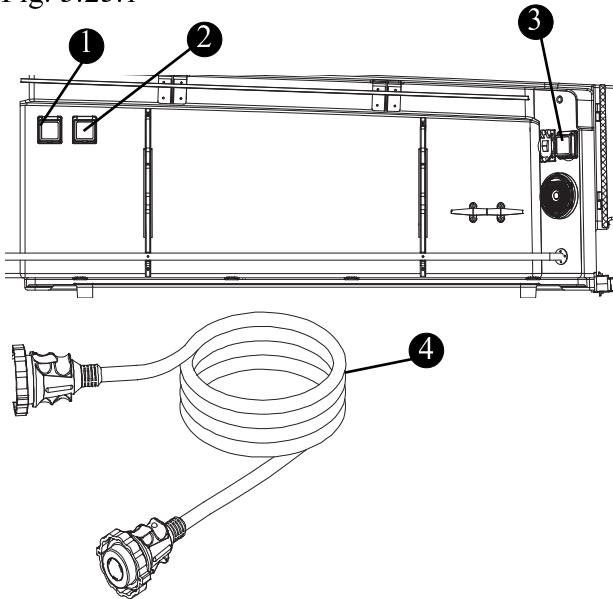

1 SHORE POWER INTERMEDIATE

2 BREAKER

ELCI (EQUIPMENT LEAKAGE CIRCUIT  
INTERRUPTER)


3 SHORE POWER RECEPTACLE

4 120V/30A SHORE POWER CORDSET

## Section 3 • Systems & Components Overview & Operation

Shore Power Main Breaker panel

Fig. 3.26.1

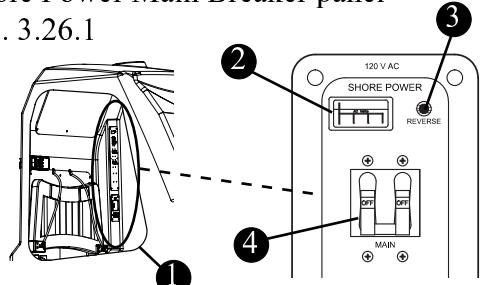

- 1 CONSOLE INTERIOR
- 2 AC VOLTMETER
- 3 REVERSE POLARITY INDICATOR
- 4 SHORE POWER MAIN BREAKER

The system is automatic and little or no maintenance is required. The battery charger can be accessed through the hatch in the lower aft of the forward console.

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### ELCI (Equipment Leakage Circuit Interruptor)

The shore power system on your boat includes an ELCI (Equipment Leakage Circuit Interrupter) located on a panel on the port aft wall of the console interior (See figure 3.26.1).

The ELCI is designed to protect people from line-to-ground shock hazards which may occur from defective, misused or neglected electrical equipment. The ELCI will not prevent line-to-ground electric shock, but does limit the time of exposure to a period considered safe for normal healthy persons. If an imbalance of current is sensed, the ELCI will trip when the ground fault exceeds 0.030 amps. This tripping action will occur within a fraction of a second to prevent serious injury.

### ! DANGER

**The receptacle will not protect against line-to-line or line-to-neutral faults, short circuits or overloads.**

### Galvanic Isolator

Your boat is equipped with a galvanic isolator, which blocks low voltage DC on the shore power ground wire.

### TESTING & TROUBLESHOOTING TEST BEFORE EACH USE

**NORMAL OPERATING STATE** - Sensing device GREEN LED is ON and circuit breaker is at ON position.

**Step 1** - Press TEST button. GREEN LED should go OUT and RED LED should come ON and circuit breaker should trigger to OFF position.

**Step 2** - If sensing device LED or breaker does not trip or change state DO NOT USE. Consult an electrician for assistance.

**Step 3** - Press RESET button. The RED LED should turn OFF and the GREEN LED should turn ON.

**Step 4** - Manually reset (switch) circuit breaker to ON position to restore circuit power.

### WARNING

IF ABOVE TESTS FAIL, **DO NOT USE**.

CONSULT A QUALIFIED ELECTRICIAN FOR REPAIR OR REPLACEMENT.

The galvanic isolator prevents dockside electrolytic voltages from damaging the metal parts of your boat which come in contact with the water. Additionally, the galvanic isolator will safely conduct high currents (above 1.5 volts) to ground in the event of a short circuit or power leakage on your boat.

### Maintenance

The galvanic isolator on your boat is highly reliable. It should, however, be tested once per season, and re-tested after a condition that may have influenced it, such as a lightning strike in the vicinity, or on-board electrical short that either caused a circuit breaker or fuse to blow.

### ! CAUTION

**Under normal conditions the zincs on your boat should last at least one year, much longer if no problems occur. If abnormal deterioration of the zincs occur a problem exists and should be corrected immediately.**

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

## Section 3 • Systems & Components Overview & Operation

### Anchor Windlass

#### ⚠ DANGER

**Use the windlass switch on the helm whenever possible. Use care when operating the anchor windlass with the hand-held remote.**

The anchor windlass is located in the bow locker. The windlass gives you a mechanical means of raising and lowering the anchor.

The anchor windlass is controlled by a power switch and a control switch located on the helm switch panel (See figure 2.17.1). The “WNDLS” switch (See fig. 3.27.2) controls power to the windlass. The control switch is a momentary type switch which means that there must be constant pressure applied to the switch to operate the anchor windlass.


The anchor windlass is controlled by a power switch and a control switch located on the helm switch panel (See figure 2.17.1). The “WNDLS” switch (See fig. 3.27.2) controls power to the windlass. The control switch is a momentary type switch which means that there must be constant pressure applied to the switch to operate the anchor windlass.

A hand-held remote located in the anchor locker can be used for raising and lowering the anchor at the bow. When not in use, the remote can be stored in a box located on the starboard side of the anchor locker. The power source for the remote is located on the aft bulkhead of the anchor locker.

There is also a handle that can be used to raise and lower the anchor manually in case the power to the anchor windlass is lost.

#### Windlass Switch Panel

Fig. 3.27.2

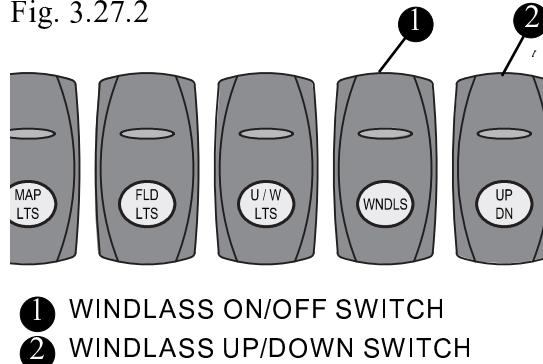

A safety lanyard secures the anchor when stowed and the boat is underway.

### Operation

**LOWERING-** Pushing the top part of the switch down will power the anchor windlass DOWN. Make certain that the safety lanyard is detached from the chain and is clear of any moving parts of the anchor windlass.



**RAISING-** Pushing the lower part of the switch will power the anchor windlass UP. Once the anchor and rode is secure in the UP position, the safety lanyard can be re-attached to the rode.

**EMERGENCY OPERATION-** The emergency handle can be used in case the power to the anchor windlass is lost. The top of the anchor windlass has a socket receiver that mates up with the handle socket.

#### Windlass

Fig. 3.27.1

- 1 WINDLASS
- 2 ANCHOR LANYARD
- 3 CLEAT
- 4 RODE
- 5 EMERGENCY HANDLE
- 6 FRESH WATER CONNECTION
- 7 POWER CONNECTOR FOR REMOTE CONTROL
- 8 WINDLASS REMOTE CONTROL

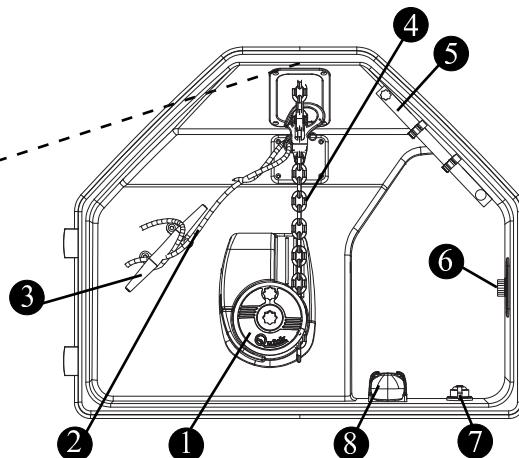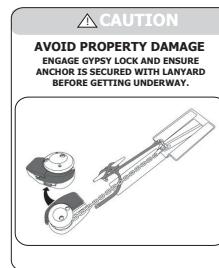


### Operating The Windlass With Remote

#### ⚠ DANGER

**Use the anchor windlass switch on the helm when possible. Use care when operating the anchor windlass with the hand-held remote.**

- To raise the anchor, press and hold the “UP” button of the remote.

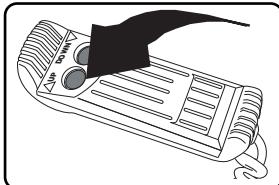


The anchor windlass can be operated from the bow with the use of the windlass remote which is stowed in the bow locker.

#### NOTICE


**Before operating the windlass be sure that the safety lanyard is removed from the anchor chain and is clear of the rode as it plays out or is retrieved.**

- To lower the anchor, press and hold the “DOWN” button on the remote.

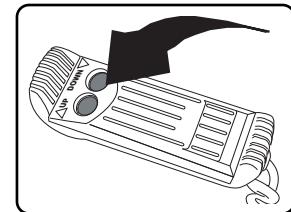

Anchor Windlass Remote

Fig. 3.28.1

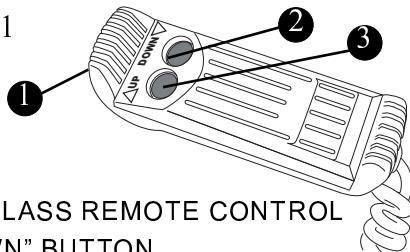


- 1 WINDLASS REMOTE CONTROL
- 2 “DOWN” BUTTON
- 3 “UP” BUTTON

REFER TO THE MANUFACTURER’S MANUAL IN YOUR OWNER’S MANUAL PACKET FOR COMPLETE INSTRUCTIONS.


#### ⚠ WARNING

**Keep hands, feet, hair and loose clothing clear of moving parts. Entanglement may cause severe bodily injury (i.e. lose of fingers or toes).**

- Plug the power cable into the power receptacle on the aft wall of the anchor locker  
(Figure 3.24.1)

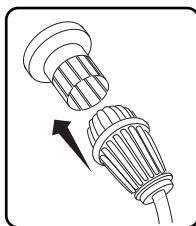

- Turn the forward portion of the plug clockwise to lock.

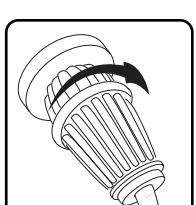

### Operating The Windlass Manually

In the event that there is a loss of power to the windlass the anchor can be raised and/or lowered manually by using the emergency handle located in the bow locker.

If there is a loss of power to the windlass, check the “WINDLASS” circuit breaker located on the Breaker Panel located on the starboard gunwale opposite the helm (See figure 4.7.1). If the breaker is tripped, reset the breaker by pushing the lever up. If the breaker continues to trip, have the anchor windlass system checked by a qualified marine electrician.

### Manual Operation


There are two star sockets on the top of the windlass used for manual deployment of the anchor. Inserting the emergency handle into the center socket and turning it counter-clockwise will loosen the anchor windlass chainwheel. The star socket located off-center is used for retrieving and lowering the anchor. Turning the handle counterclockwise will allow you to lower the anchor, while turning it clockwise will raise it.

## Section 3 • Systems & Components Overview & Operation

When operation is complete, insert the handle into the center star socket and tighten the windlass chainwheel by rotating the handle clockwise. Be sure to attach the anchor lanyard when the anchor is stowed in the bow pulpit.

### Windlass Manual/Emergency Operation


Fig. 3.29.1

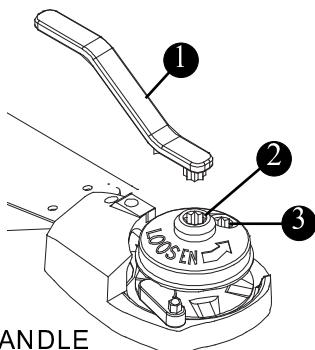

- 1 EMERGENCY HANDLE
- 2 LOOSEN WINDLASS
- 3 RAISE/LOWER ANCHOR

### Bow Thruster (Option)

Fig. 3.29.2

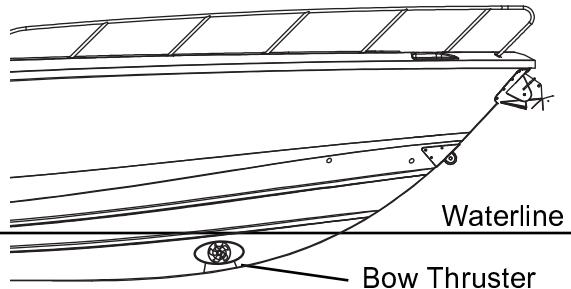

If equipped, the bow thruster joystick is located on the control station is used to operate the thruster and maneuver the bow of your boat.

### Bow Thruster (option)

#### WARNING

**Be sure you thoroughly understand the operation and safety requirements of the thruster before using.**

**The thruster should not be operated in close proximity to swimmers, as a powerful suction is created when in use.**

Your boat is equipped with a 3kW bow thruster. The electrically driven bow thruster gives the operator more maneuverability of the bow when docking or maneuvering the vessel in narrow channels or where space is at a premium.


Boston Whaler uses a patent pending design for installation of the bow thruster.

The bow thruster motor can be accessed by lifting the hatch in the floor of the forward deck.


The battery switch is located outboard, starboard of the battery bank and can be accessed by lifting the mechanical hatch in the deck of the cockpit.

### To Operate The Bow Thruster:


- Turn ON battery switch.

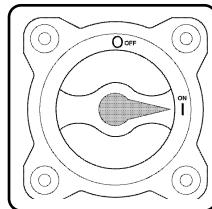

- Press the activation button for 1 second.

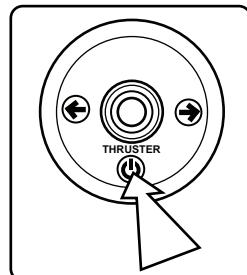

- Lift the joystick and move it in the direction you wish to move the bow.

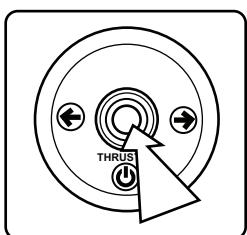


#### NOTICE

**REFER TO YOUR BOW THRUSTER OWNER'S MANUAL FOR EXACT BATTERY REQUIREMENTS.**

## Section 3 • Systems & Components Overview & Operation

### Bow Thruster Movement

Fig.3.30.1

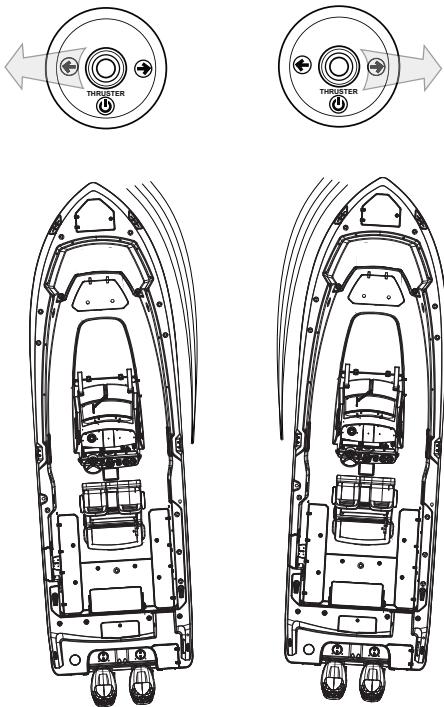

When the desired boat movement has been achieved return the joystick to the center position (spring return).

The bow thruster motor is equipped with an internal thermally activated breaker. The thermal breaker protects the motor from overheating. To avoid damage to the thruster, if the thermal breaker trips allow the unit to cool down before continuing operation.

### NOTICE

**If thruster is operated constantly for 3 minutes it will power down and panel will deactivate.**

**The system is designed to automatically power down after 20 minutes of no operation.**

**If thermal cut-out is activated all power to the controls is disabled. WAIT FOR UNIT TO COOL DOWN.**

### ! CAUTION

**DO NOT move the joystick port to starboard in quick succession as this could damage the motor.**

### DANGER

#### DO NOT OPERATE THRUSTER OUT OF WATER

**It is very dangerous to run the thruster out of the water, even for a few seconds. The motor will overspeed by 300%, causing damage to the unit and the propeller will cause serious damage or injury to whom or whatever comes in contact with it.**

**In addition, this action will void the warranty.**

REFER TO THE BOW THRUSTER MANUFACTURER'S MANUAL IN YOUR OWNER'S PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Anchoring

The 330 Outrage is equipped with a thru-hull anchor located in the anchor storage compartment at the bow of the boat.

Proper anchoring requires knowledge of RODE and SCOPE and understanding the relationship between rode, scope and anchor performance.

**The rode** is the line connecting the anchor to the boat. Nylon line is ideal because it is light, strong and stretches, it also can be stored wet and is easy to handle. Add a length of chain between the anchor and the nylon line to prevent abrasion of the line.

**The scope** is technically defined as the ratio of rode length to the vertical distance from the bow to the sea floor. Scope also depends on the type of anchor, tides, winds, sea conditions and type of sea floor the anchor is in. Since you want to know how much rode to use when anchoring, use this common formula:

**Rode length = (bow height + water depth) X Scope**

The minimum is 5:1 for calm conditions; normal is 7:1, and severe conditions may require a 10:1.

## Section 3 • Systems & Components Overview & Operation

### Example:

$$\text{Rode length} = (3 \text{ feet} + 10 \text{ feet}) \times 7^*$$

$$\text{Rode length} = 13 \text{ feet} \times 7^*$$

$$\text{Rode length} = 91 \text{ feet}$$

\* Scope may range from 5 to 10 or more. However, less than 5, the anchor will break out too easily.

### Considerations When Anchoring

- Wind and sea conditions can affect the boat.
- Because the boat is not moving through the water, there is no control.
- Be sure that the anchor will hold under all circumstances if you are leaving the boat.
- Understand the principles of rode and scope and their effect on anchor performance.

### ! WARNING

**SWAMPING HAZARD - Anchor from the bow if using one anchor. A small current can make a stern anchored boat unsteady. A heavy current can drag a stern anchored boat underwater.**

### NOTICE


**Before using the anchor be sure the anchor line is secured to the eye in the bottom of the anchor locker.**

### Lowering The Anchor

- Be sure there is adequate rode.
- Secure rode to both the anchor and the boat.
- Stop the boat completely before lowering the anchor.
- Keep feet clear of lines.

### Proper Anchoring

Fig. 3.31.1

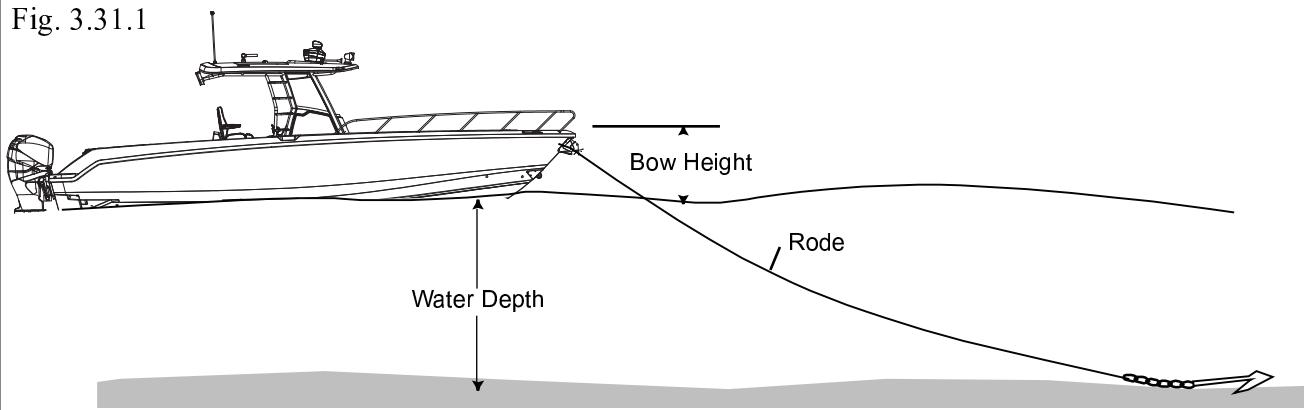

## Section 3 • Systems & Components Overview & Operation

- Turn on the anchor light when at anchor or drifting (not under power) at night or in low visibility.

NOTE: If using the windlass, refer to the windlass operator's manual for anchoring instructions

### Setting the Anchor

There is no best way to set an anchor. Experiment to see how it performs. One method is to turn the rode around a bitt or a cleat and slowly pay out as the boat backs from the anchor site. When the proper scope has been reached snub the rode quickly, causing the anchor to dig in to the sea bottom.

- Reverse the engine slowly to drive the anchor in and to prevent it from dragging.
- Secure the rode to the bitt or cleat.

### Weighing the Anchor

To weigh (or retrieve) the anchor, start the boat and run slowly up to the anchor, taking up the rode as you go. The anchor will usually break out when the rode becomes vertical. Coil lines to let them dry before stowing.



### CAUTION

**Be careful that the trailing lines do not foul in the propeller**

### Propeller


### NOTICE

- It is advised that you always carry a spare propeller, propeller hardware and propeller wrench on board. Should your propeller become damaged it can then be easily replaced.**
- Under no circumstance should you use a propeller which allows the engine to operate at a higher than recommended RPM.**

The engine on your 330 Outrage has been equipped with a propeller which our tests have shown to be best suited for general use under normal conditions and load. In some situations you may wish to change


#### Propeller Pitch & Diameter

Fig. 3.32.1

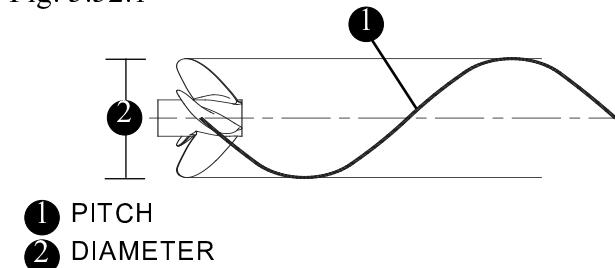

#### Propeller Assembly

Fig. 3.32.2

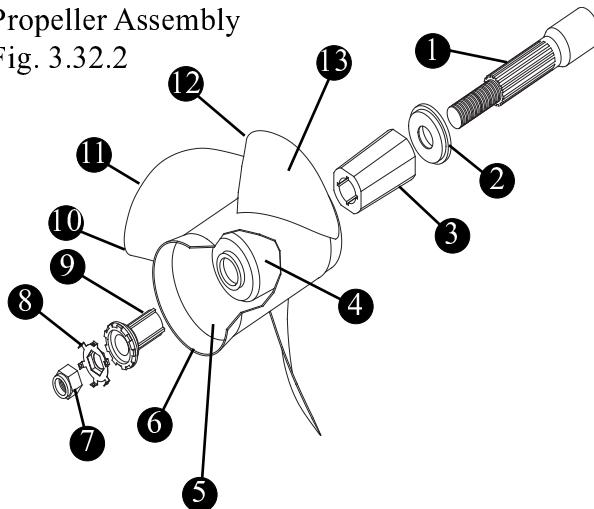

1 ENGINE SHAFT

2 FORWARD THRUST WASHER

3 DRIVE SLEEVE

4 INNER HUB

5 EXHAUST PASSAGE

6 DIFFUSER RING

7 PROP NUT

8 LOCK RING

9 DRIVE SLEEVE ADAPTER

10 BLADE TIP

11 LEADING EDGE

12 TRAILING EDGE

13 BLADE FACE

the propeller to give your boat slightly different performance characteristics.

In general, changing to a lower pitch propeller will increase acceleration and load pulling capability, with a slight decrease in top end speed. If you choose to change propellers, the type should be discussed with your Boston Whaler® dealer. All propellers

## Section 3 • Systems & Components Overview & Operation

are designed to provide maximum forward thrust, consequently, the reverse thrust of the propeller will not be as efficient.

Propellers have two basic characteristics, diameter and pitch.

Diameter is that distance measured across the propeller hub from the outer edge of the 360° that is made by the propeller's blade during a single rotation. Pitch is that distance in inches that a propeller will travel if rotated one revolution without any slippage.

### ⚠ DANGER

**Disconnect power by moving the battery switch to the "OFF" position prior to removing the propeller.**

### Bow Tow Eye (Optional)

### ⚠ WARNING

#### PERSONAL INJURY HAZARD

**Towing or being towed stresses the boat(s). hardware and lines. Failure of any part can seriously injure people or damage the boat(s).**

**DO NOT stand directly in line with the tow line. If it were to break, it would "snap Back" causing injury or damage to everything in its path.**


The optional bow tow eye which is located on the hull, extreme front of the boat, is reinforced with a stainless steel backing plate located in the anchor locker.

**In the event that it becomes necessary for you to have your boat towed, the U.S. Coast Guard or a private salvage company experienced in this type of operation are better equipped to perform the service.**

**Use another recreational boat only as a last resort.** Doing so may cause damage to one or both boats due to operator inexperience or other conditions such as weather and/or current.

Bow Tow Eye (Optional)

Fig. 3.33.1

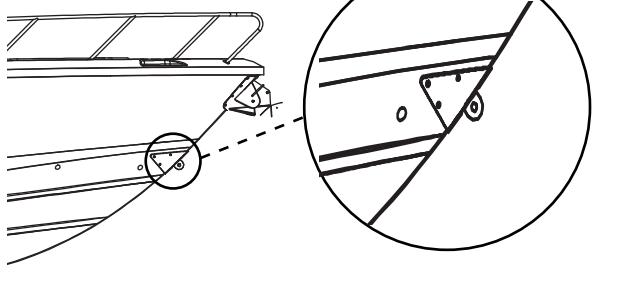

In addition, the pitch of most propellers on average recreational vessels is geared toward maximizing the speed of the vessel, not torque, thus making towing inefficient and stressful on the engine

Another recreational boat may assist by standing by, and possibly keeping the disabled boat's bow at a proper angle until help arrives.

#### If it becomes necessary to tow your boat:


If possible, create a bridle with a line around the hull or superstructure or use spring lines to secure the towed vessel to the towing vessel (See below).

Either of these methods will distribute the load over a wide area. Be sure to use fenders or other chafe protection at the pressure points.


Methods of Towing

Fig. 3.33.2

#### BRIDLE



#### SPRINGS

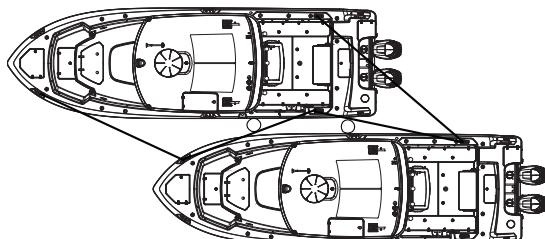

## Section 3 • Systems & Components Overview & Operation

---

If using the bow eye to tow is the only option:

- Use double-braided or braid-on-braid line. NEVER use three-stranded twisted nylon; it has too much elasticity, can break and “snap back” causing severe injury or damage.
- Attach the tow line to the bow tow eye only. DO NOT attach the tow line to a cleat or deck rail.
- Have towing vessel move slowly to prevent strain on a slack line.
- Keep someone at the helm of the towed vessel to steer.
- Keep lines clear of propellers on both boats.
- Keep hands and feet clear of the other boat.
- NEVER hold a towline after it is pulled taut.

## Section 4 • Electrical System

### Electrical System

The 330 Outrage is equipped with an electrical system powered by three marine, deep-cycle, lead-acid batteries. The batteries are charged by the engines when the engines are running or can be charged by shore power when the engines are turn off. A battery charger located on the forward starboard wall of the bilge (See fig. 2.10.1) facilitates the charging of the batteries when using shore power. See Section 3, page 3-22 for shore power operation.

The electrical system has dual battery selector switches which control the delivery of power to the following:

- Engine Ignition.
- Engine tilt trim system
- Helm switch panel & helm instrument panel
- Lighting/Navigation systems
- Livewell system
- Add-on accessories and electronics

### Batteries

#### ⚠ DANGER

**Batteries contain sulfuric acid which is dangerous and can cause serious injury. AVOID contact with skin, eyes and clothing. If contact occurs, immediately flush the affected area with large quantities of water and call for medical assistance.**

The following chart is provided for reference purposes only. **Use only AGM batteries with Verado engines.**

Application	Group	Volts	MCA*	RC 25	Qty.
USA (SAE)	31	12	800	135 min	3

\* Marine Cranking Amps

Application	Group	Volts	CCA*	Reserve	Qty.
Int'l (EN)	31	12	975	65Ah	3

\* Cold Cranking Amps

#### NOTICE

**REFER TO YOUR ENGINE OWNER'S MANUAL FOR EXACT BATTERY REQUIREMENTS.**

### Battery Trays

The battery trays, located in the lower aft area of the bilge house and secure the batteries. The batteries should always be enclosed in the battery trays provided with your boat and secured in place by the retaining lids. The trays will ensure that while underway the batteries will not move around, thus causing damage to components fitted in the same area.


The batteries can be removed by loosening the wing nuts and removing the retaining lid on the battery tray.

#### NOTICE

**Always store the batteries in the battery trays. Tighten the knobs on the top of the trays to keep the batteries secure.**

### Battery Location Charts

Fig.4.1.1

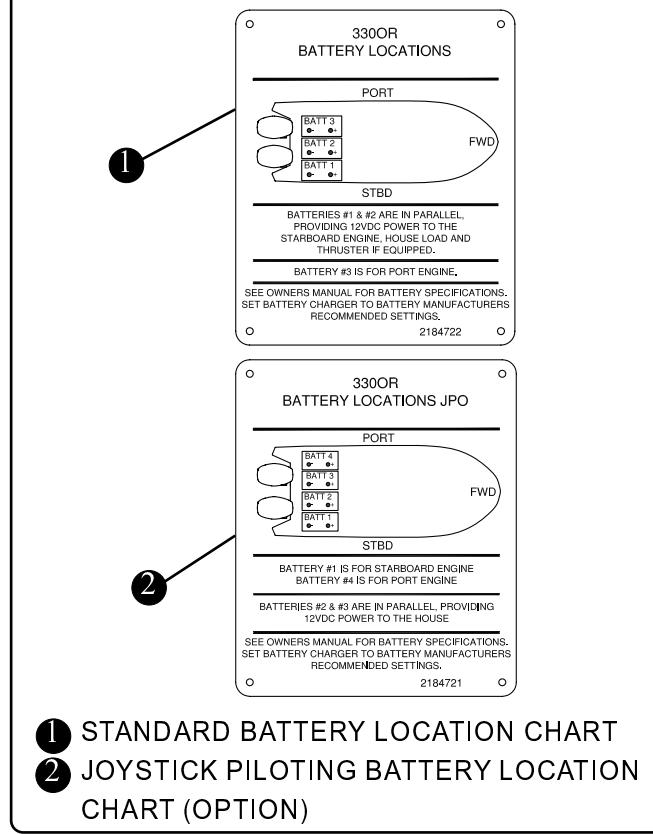


#### NOTICE

**Ensure that your batteries meet Mercury's AGM & CCA requirements**

## Section 4 • Electrical System

### Batteries

Fig.4.2.1

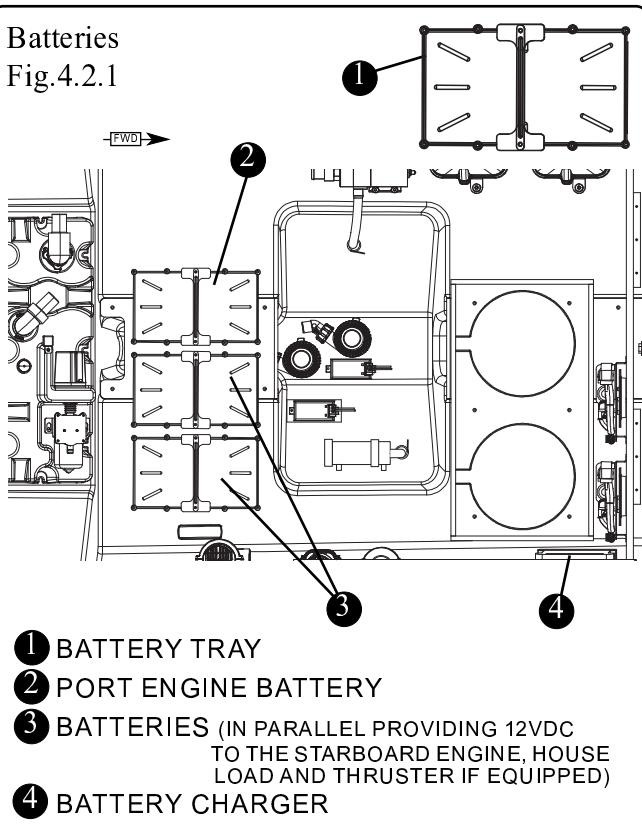

Before use, check each battery and the charging system for loose connections or wiring. Normal maintenance should include:


- Coat the terminals with dielectric grease
- Keep the batteries dry
- If not using a sealed battery, check & maintain the water level. USE DISTILLED WATER ONLY.
- Remove the batteries from the boat during cold weather or long term storage.

When a battery discharges, the active material on both positive and negative plates converts to lead sulfate, causing the plates to become more alike in an electrical charge. The electricity conducting battery acid becomes weaker and the voltage drops. As the battery remains discharged, the process continues until recharging the battery becomes impossible.

If the battery does become run down be sure to recharge it as soon as possible. Overcharging the battery can be just as detrimental to its life as running it down too far.

### Batteries - Joystick Piloting (Option)

Fig.4.2.2 

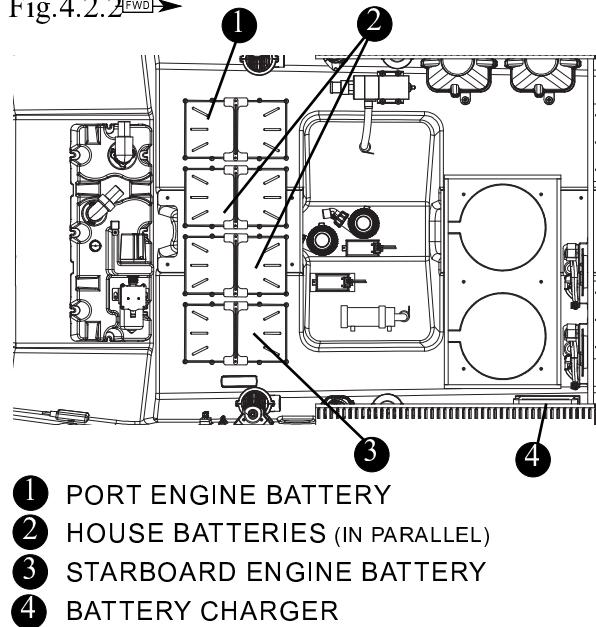

#### **Battery charger**

The battery charger, (See figure 4.2.1) automatically increases current output when there is a drop in battery voltage. When the batteries are charged, the units maintain a small current flow to keep the batteries fully charged and ready for service without overcharging.

#### **Overload Protection**

If an electrical short or overload occurs in the electrical system the charger will reduce its output voltage to avoid internal damage. When an electrical short occurs, the red LED on the front panel of the unit will be illuminated. The overload or short must be removed in order for the charger to resume charging characteristics.

#### **Charge Rate**

The battery charger has selectable profiles that affect the charge rate. The charge rate profile is pre-set at the factory to AGM to match the battery type installed in your vessel. Matching the charge rate to the battery type extends battery life and maximizes battery performance.


#### **Maintenance**

The charger is fully automatic and requires no maintenance. However, the battery terminals should be cleaned periodically with baking soda and all connections tightened to provide trouble free operation.

## Section 4 • Electrical System

### Batteries (Option)


Fig. 4.3.1

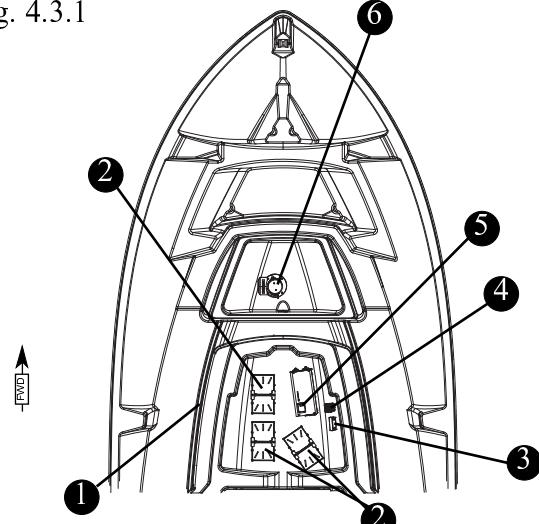

- 1 FORWARD LOUNGE
- 2 ELECTRIC GRILL BATTERIES (OPTION)
- 3 FUSE (OPTION)
- 4 BATTERY SWITCH (OPTION)
- 5 INVERTER (OPTION)
- 6 BOW THRUSTER (OPTION)

### Battery Selector Switches

Fig. 4.3.2

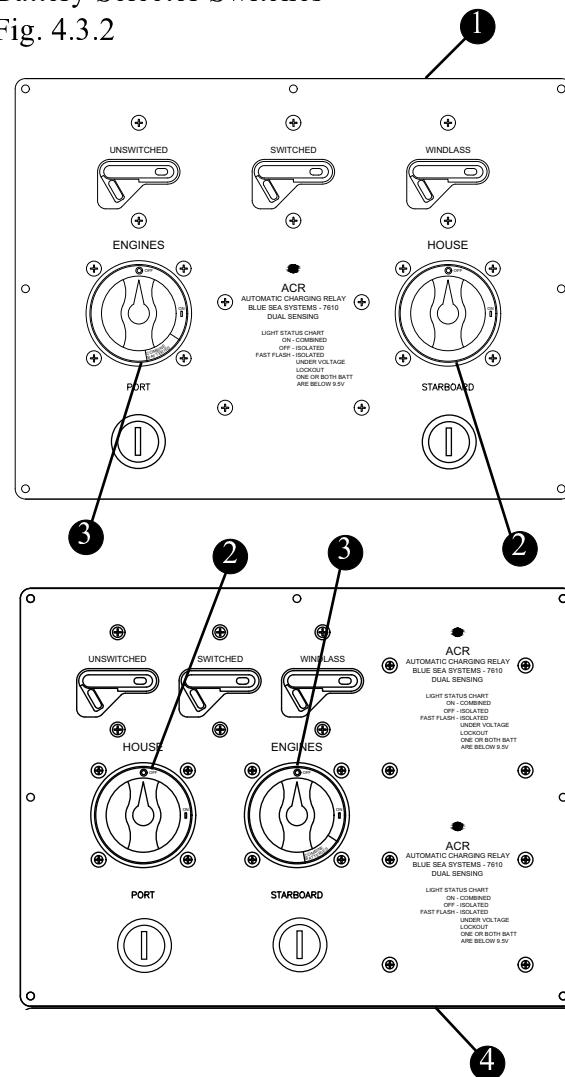

- 1 BATTERY SWITCH PANEL
- 2 HOUSE BATTERY SELECTOR SWITCH
- 3 ENGINES BATTERIES SELECTOR SWITCH
- 4 BATTERY SWITCH PANEL W/JOYSTICK PILOTING (OPTION)

### Summer Kitchen Batteries (Option)

If equipped with the summer kitchen option your boat will have an three (3) additional batteries which can be accessed through a hatch in the bottom of the forward lounge.

A 1500 watt inverter is also included and is located in the same space as the battery.

### Bow Thruster Battery (Option)

If equipped, the bow thruster derives its power from the house battery in the bilge (See fig.4.2.2)

### Battery Selector Switches

Your boat uses two (2) battery selector switches, to control delivery of DC power from the batteries. The battery switches are located on the battery switch panel located on the starboard gunnel opposite the helm seat.




### CAUTION

You must stop the engines before moving the battery switches to the "OFF" position.


The "ENGINES" battery switch has three (3) settings, OFF, ON and COMBINED.

- “OFF” - you will have no power to the engines.

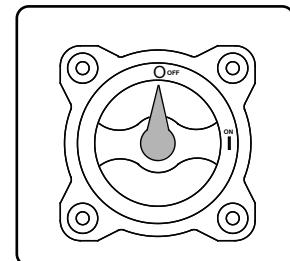


## Section 4 • Electrical System

- “ON” - you will have power to the engines.

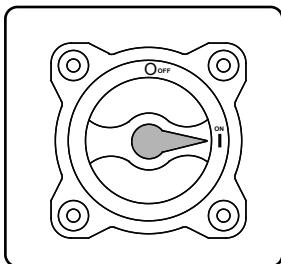


### • “COMBINE BATTERIES”

you will have power from all batteries at the same time. This parallels the batteries to assist you in starting the engines.

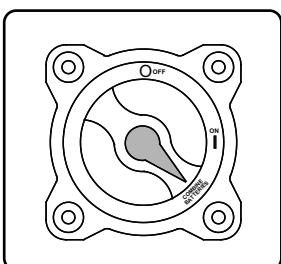


The “HOUSE” battery switch has two (2) settings, OFF and ON.

- “OFF” - you will have no power.

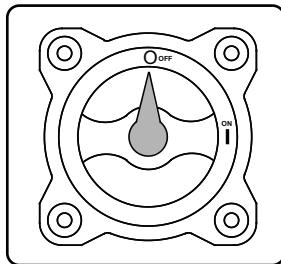

- “ON” - you will have power to all essential boat systems.

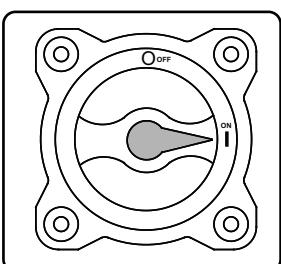

In the event a battery discharges completely, you will still be able to start the engines by turning the engines switch to the “COMBINE BATTERIES” position. This accesses the charged battery for engine start. After the engine starts, return the battery switch to the “ON” position until all batteries are charged.



### CAUTION

**Do not leave the battery switches in “COMBINE BATTERIES” position as this can discharge all batteries leaving no emergency start capability.**

### NOTICE

The Bilge pumps, stereo memory, and clean power for the DTS system still draw power from the starboard/house batteries even if the switch is set to “OFF”.


### ! CAUTION

- **NEVER use an open flame in the battery storage area.**
- **Avoid striking sparks near the battery.**
- **A battery will explode if a flame or spark ignites the free hydrogen given off during charging.**
- **ALWAYS disconnect the battery before doing any work or maintenance on the electrical system.**
- **NEVER turn off the battery switches or disconnect the battery cables while the engines are running.**

### Fuse Blocks

Your boat is equipped with two (2) fuse blocks.

One is located behind the console and can be accessed through a panel on the aft wall of the head.

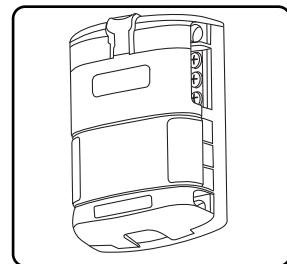

The other is located on the forward bulkhead of the head and can be accessed through a panel on the back wall of the head storage (See fig. 2.14.1).

In the event you need to replace a fuse, use only the same amperage as the original. It is recommended that you carry spare fuses.

### ! WARNING

**Use of higher amperage fuses or breakers is a fire hazard.**

**Use fuses and breakers having the same amperage rating as the original or as specified.**


## Section 4 • Electrical System

If a fuse is replaced with one of lower amperage, it will not be sufficient to carry the electrical load of the equipment it is connected to and will cause nuisance fuse failure or breaker tripping.

If a fuse is replaced with one of higher amperage, it will not provide adequate protection against an electrical malfunction and will create a fire hazard.

### 12 Volt Accessory Receptacles

The 330 Outrage is equipped a 12 volt receptacle located in the glove box on the console (See fig. 2.9.1). The receptacle is made of corrosion resistant marine grade materials and has a moisture proof cap. There is a 15 amp breaker button (See figure 4.5.1), located below the battery switch panel located on the starboard gunnel opposite the helm seat, which protects the receptacles.

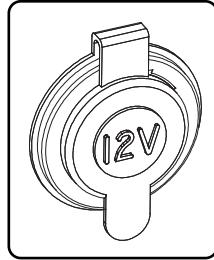

### NOTICE

**DO NOT insert a cigarette lighter into the 12V receptacles. Damage to the unit and system may occur.**

Be sure to use accessories that do not exceed the rated capacity of the circuit, (15 amps). Doing so will cause the breaker to trip.

### Automatic Charging Relays (ACR)

The battery banks on your boat are automatically connected in parallel through the use of an ACR (Automatic Charging Relay) located on the battery switch panel (Fig. 4.5.1) when a sufficient charging source is present.


If equipped with the joystick option, a second ACR is located on the battery switch panel.

The battery banks are automatically separated when the charging source falls below a certain voltage level for a predetermined amount of time.

The use of ACRs eliminates the need for the operator to monitor battery voltage and decide whether or not it is ok to parallel the battery banks. It also eliminates

### Automatic Charging Relay (ACR)

Fig. 4.5.1

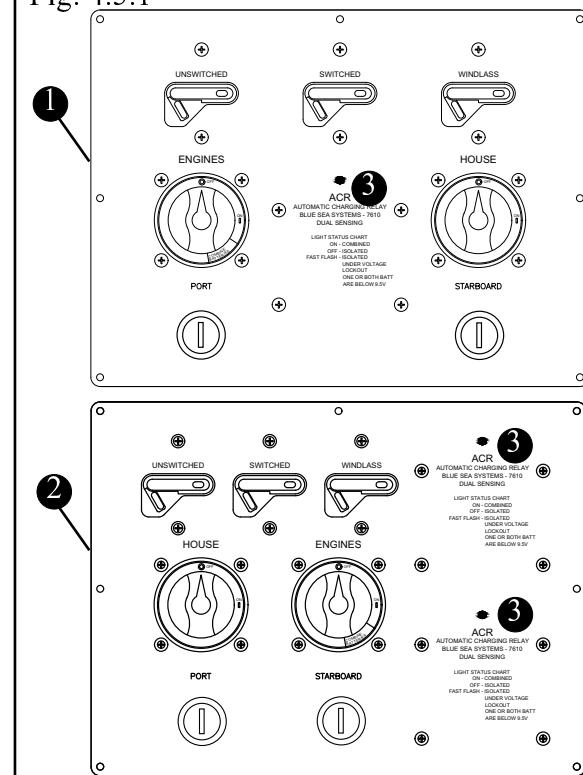

① BATTERY SWITCH PANEL-STD

② JOYSTICK OPTION

③ AUTOMATIC CHARGING RELAY (ACR)

the chance of a dead battery bank if a paralleling switch were left in the "Combined" position without a sufficient charging source present.

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS, WARRANTY AND SAFETY INFORMATION.

### DC Breaker Panel

The Main DC breaker panel and component breaker panel (See fig. 4.6.1) is located behind an access door on the starboard gunnel opposite the helm seat.

In the event of a loss of power, determine and correct the problem before resetting the breaker at this panel. Should a circuit breaker trip repeatedly, have a qualified electrician correct the cause of the trip.

### CAUTION


**Never reset a breaker without first determining and correcting the cause of the trip. Should a circuit repeatedly trip, have a qualified electrician determine and correct the cause.**

## Section 4 • Electrical System

### Main DC Breaker Panel

120V DC Breaker Panel

Fig. 4.6.1

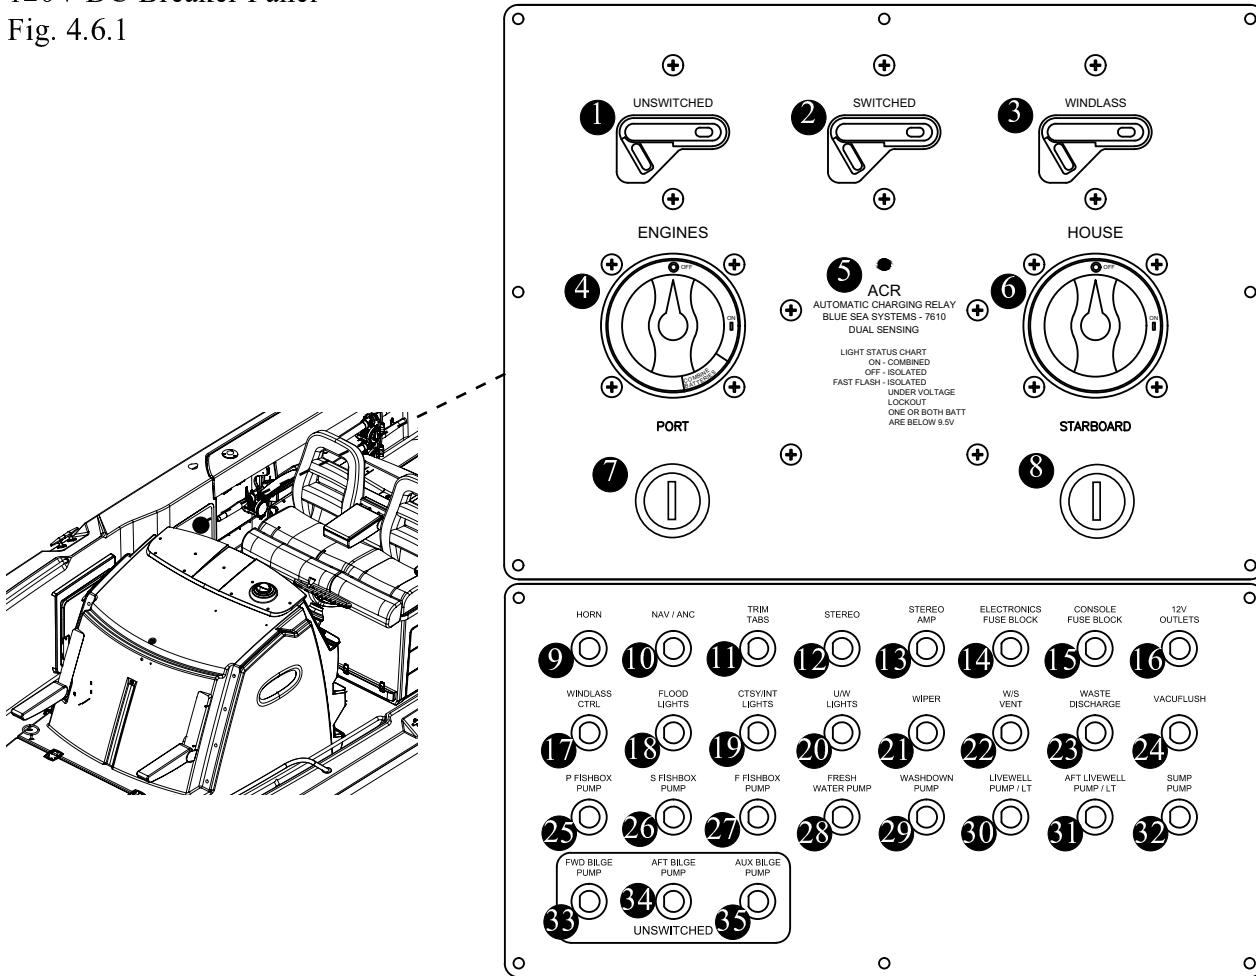


1	UNSWITCHED MAIN .....	50 AMPS	19	CTSY/INT LIGHTS.....	10 AMPS
2	SWITCHED MAIN .....	100 AMPS	20	U/W LIGHTS.....	10 AMPS
3	WINDLASS.....	80 AMPS	21	WIPER .....	10 AMPS
4	ENGINES BATTERY SWITCH		22	W/S VENT .....	10 AMPS
5	AUTOMATIC CHARGING RELAY (ACR)		23	WASTE DISCHARGE.....	20 AMPS
6	HOUSE BATTERY SWITCH		24	VACUFLUSH .....	5 AMPS
7	PORT MASTER IGNITION		25	PORT FISHBOX PUMP.....	10 AMPS
8	STBD MASTER IGNITION		26	STBD FISHBOX PUMP .....	10 AMPS
9	HORN .....	10 AMPS	27	FWD FISHBOX PUMP .....	10 AMPS
10	NAV/ANCH .....	10 AMPS	28	FRESH WATER PUMP .....	10 AMPS
11	TRIM TABS.....	20 AMPS	29	WASHDOWN PUMP .....	15 AMPS
12	STEREO .....	15 AMPS	30	LIVEWELL PUMP/LT .....	6 AMPS
13	STEREO AMP .....	60 AMPS	31	AFT LIVEWELL PUMP/LT .....	6 AMPS
14	ELECTRONICS FUSE BLOCK.....	40 AMPS	32	SUMP PUMP .....	3 AMPS
15	CONSOLE FUSE BLOCK .....	40 AMPS	33	FWD BILGE PUMP[P] .....	5 AMPS
16	12V OUTLETS.....	15 AMPS	34	AFT BILGE PUMP .....	12 AMPS
17	WINDLASS CONTROL .....	10 AMPS	35	AUX BILGE PUMP .....	12 AMPS
18	FLOOD LIGHTS.....	10 AMPS			

## Section 4 • Electrical System

### Main DC Breaker Panel (Option)

120V DC Breaker Panel - Joystick Piloting (Option)

Fig. 4.7.1

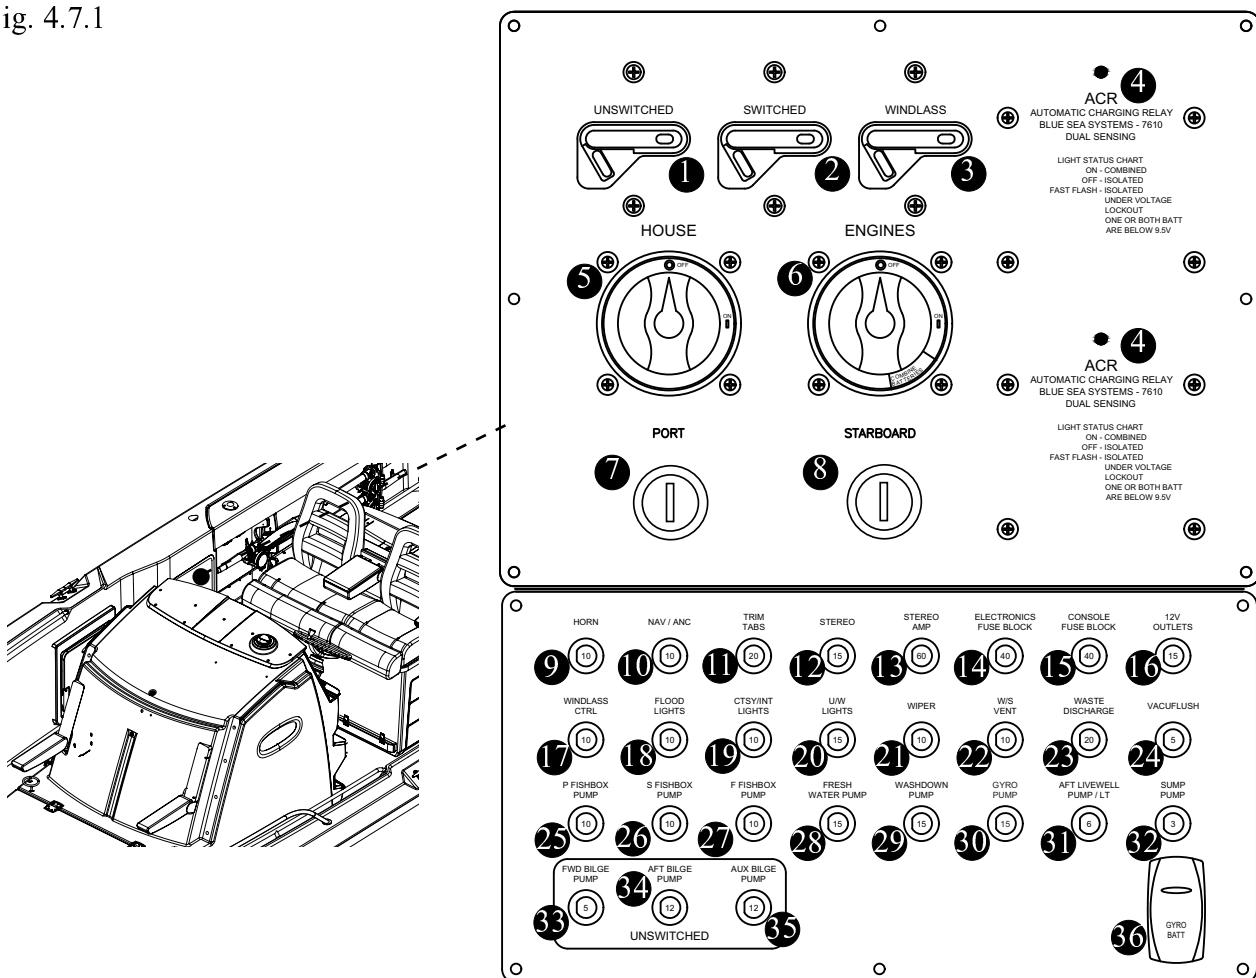

- 1** UNSWITCHED MAIN ..... 30 AMPS
- 2** SWITCHED MAIN ..... 100 AMPS
- 3** WINDLASS ..... 100 AMPS
- 4** AUTOMATIC CHARGING RELAY (ACR)
- 5** HOUSE BATTERY SWITCH
- 6** ENGINE BATTERY SWITCH
- 7** PORT MASTER IGNITION
- 8** STBD MASTER IGNITION
- 9** HORN ..... 10 AMPS
- 10** NAV/ANCH ..... 10 AMPS
- 11** TRIM TABS ..... 20 AMPS
- 12** STEREO ..... 15 AMPS
- 13** STEREO AMP ..... 60 AMPS
- 14** ELECTRONICS FUSE BLOCK ..... 40 AMPS
- 15** CONSOLE FUSE BLOCK ..... 40 AMPS
- 16** 12V OUTLETS ..... 15 AMPS
- 17** WINDLASS CONTROL ..... 10 AMPS
- 18** FLOOD LIGHTS ..... 10 AMPS


- 19** CTSY/INT LIGHTS ..... 10 AMPS
- 20** U/W LIGHTS ..... 10 AMPS
- 21** WIPER ..... 10 AMPS
- 22** W/S VENT ..... 10 AMPS
- 23** WASTE DISCHARGE ..... 20 AMPS
- 24** VACUFLUSH ..... 5 AMPS
- 25** PORT FISHBOX PUMP ..... 10 AMPS
- 26** STBD FISHBOX PUMP ..... 10 AMPS
- 27** FWD FISHBOX PUMP ..... 10 AMPS
- 28** FRESH WATER PUMP ..... 10 AMPS
- 29** WASHDOWN PUMP ..... 15 AMPS
- 30** LIVEWELL PUMP/LT ..... 6 AMPS
- 31** AFT LIVEWELL PUMP/LT ..... 6 AMPS
- 32** SUMP PUMP ..... 3 AMPS
- 33** FWD BILGE PUMP ..... 5 AMPS
- 34** AFT BILGE PUMP ..... 12 AMPS
- 35** AUX BILGE PUMP ..... 12 AMPS
- 36** REMOTE BATTERY SWITCH (GYRO OPTION)

## Section 4 • Electrical System

### AC Breaker Panel

AC 120V Panel

Fig. 4.8.1

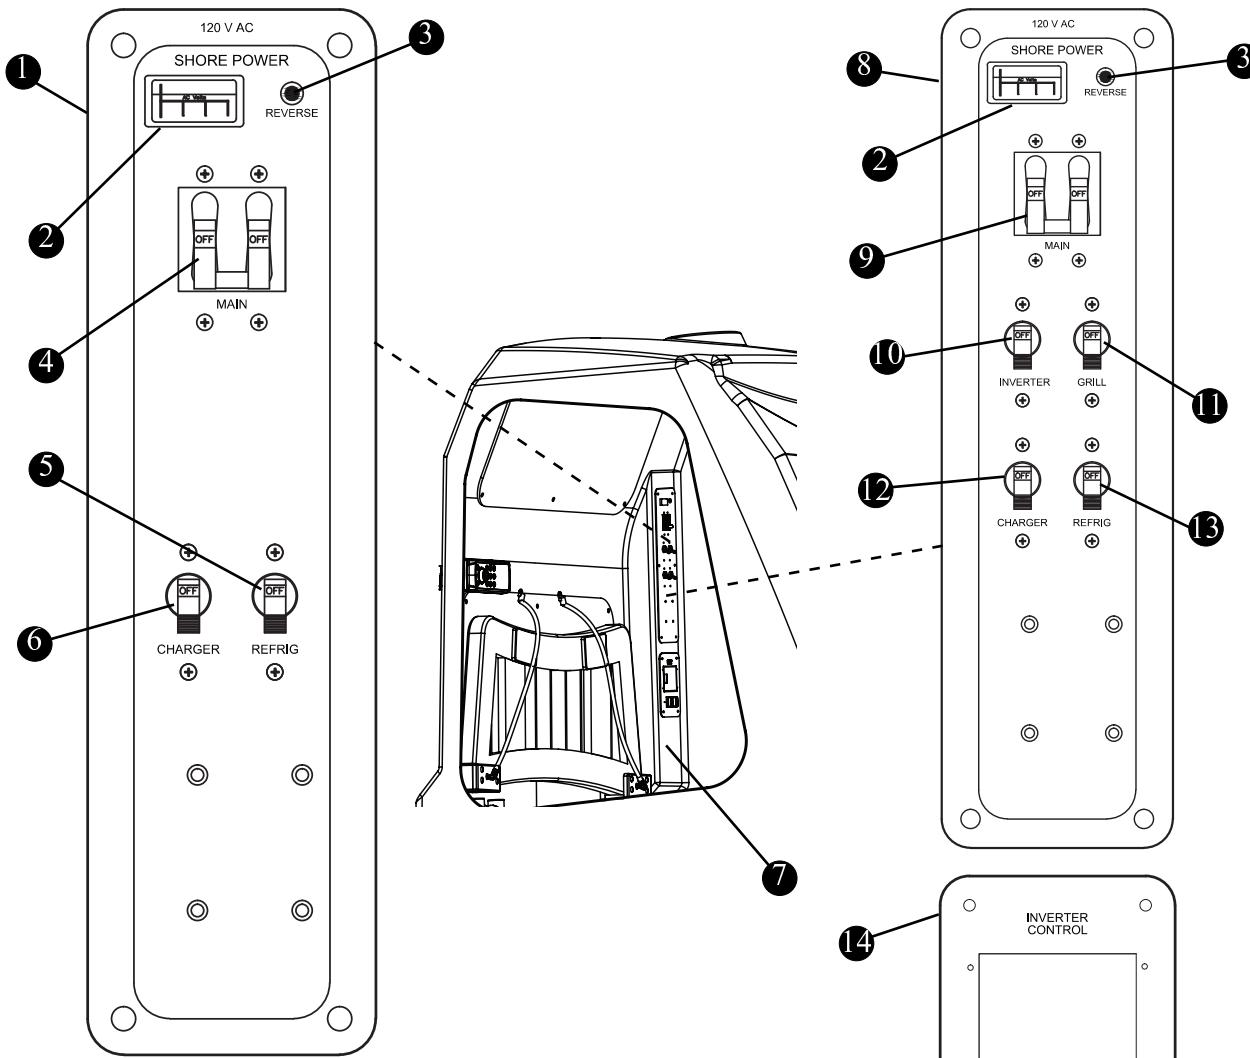


- 1 120V AC BREAKER PANEL
- 2 AC VOLTmeter
- 3 REVERSE POLARITY INDICATOR
- 4 SHORE POWER MAIN BREAKER ..... 60 AMPS
- 5 COCKPIT REFRIGERATOR BREAKER ..... 15 AMPS
- 6 BATTERY CHARGER BREAKER ..... 15 AMPS
- 7 AFT PORT WALL OF CONSOLE INTERIOR
- 8 120V AC BREAKER PANEL (SUMMER KITCHEN OPTION)
- 9 SHORE POWER MAIN BREAKER (OPTION) ..... 60 AMPS
- 10 INVERTER BREAKER (OPTION) ..... 15 AMPS
- 11 ELECTRIC GRILL BREAKER (OPTION) ..... 15 AMPS
- 12 BATTERY CHARGER BREAKER ..... 15 AMPS
- 13 COCKPIT REFRIGERATOR BREAKER ..... 16 AMPS
- 14 INVERTER CONTROL PANEL (OPTION)
- 15 INVERTER ON/OFF SWITCH

## Section 4 • Electrical System

### AC Breaker Panel (Gyro Option)

AC 120V Panel (Gyro Option)

Fig. 4.9.1

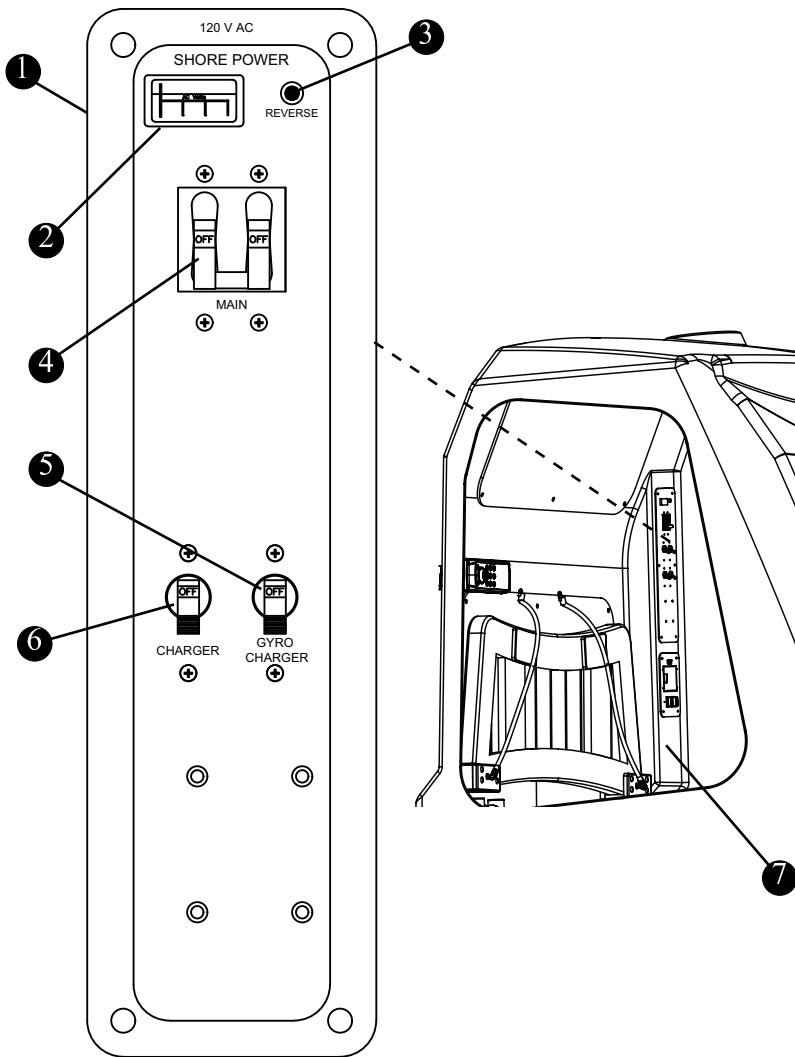


- 1 120V AC BREAKER PANEL (GYRO OPTION)
- 2 AC VOLTMETER
- 3 REVERSE POLARITY INDICATOR
- 4 SHORE POWER MAIN BREAKER ..... 60 AMPS
- 5 GYRO CHARGER ..... 15 AMPS
- 6 BATTERY CHARGER BREAKER ..... 15 AMPS
- 7 AFT PORT WALL OF CONSOLE INTERIOR

## Section 4 • Electrical System

### AC Breaker Panel (Option)

AC 220V Panel (Option)

Fig. 4.10.1

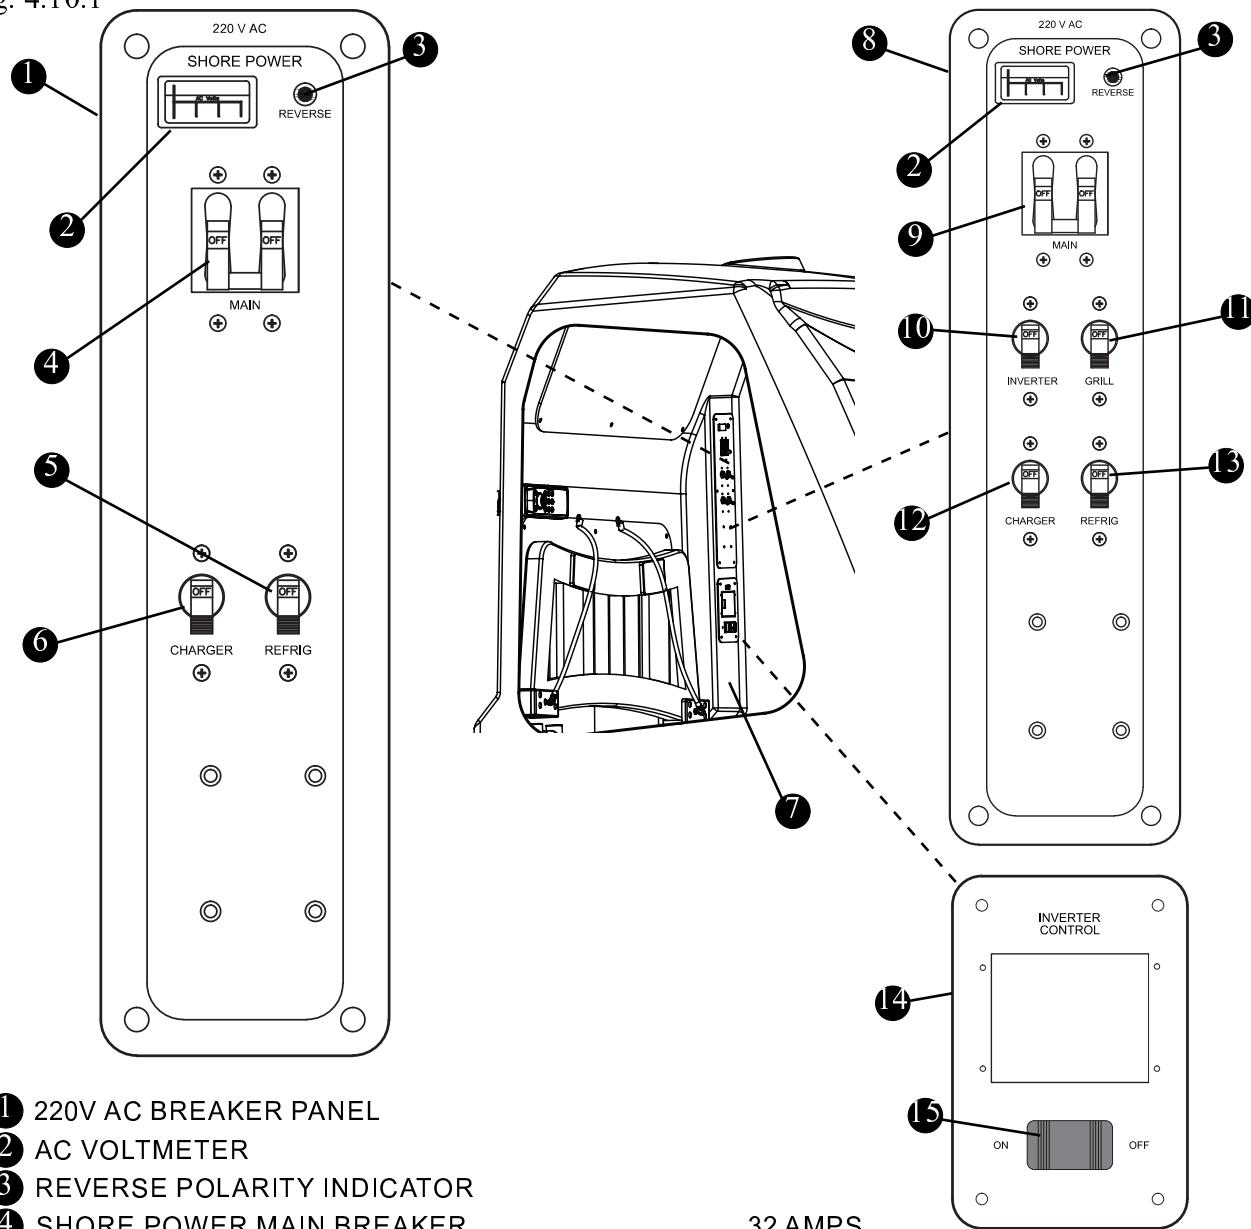


- 1 220V AC BREAKER PANEL
- 2 AC VOLTMETER
- 3 REVERSE POLARITY INDICATOR
- 4 SHORE POWER MAIN BREAKER ..... 32 AMPS
- 5 COCKPIT REFRIGERATOR BREAKER ..... 10 AMPS
- 6 BATTERY CHARGER BREAKER ..... 10 AMPS
- 7 AFT PORT WALL OF CONSOLE INTERIOR
- 8 220V AC BREAKER PANEL (SUMMER KITCHEN OPTION)
- 9 SHORE POWER MAIN BREAKER (OPTION) ..... 32 AMPS
- 10 INVERTER BREAKER (OPTION) ..... 10 AMPS
- 11 ELECTRIC GRILL BREAKER (OPTION) ..... 10 AMPS
- 12 BATTERY CHARGER BREAKER ..... 10 AMPS
- 13 COCKPIT REFRIGERATOR BREAKER ..... 10 AMPS
- 14 INVERTER CONTROL PANEL (OPTION)
- 15 INVERTER ON/OFF SWITCH

## Section 4 • Electrical System

### AC Breaker Panel (Gyro Option)

AC 220V Panel (Gyro Option)

Fig. 4.11.1

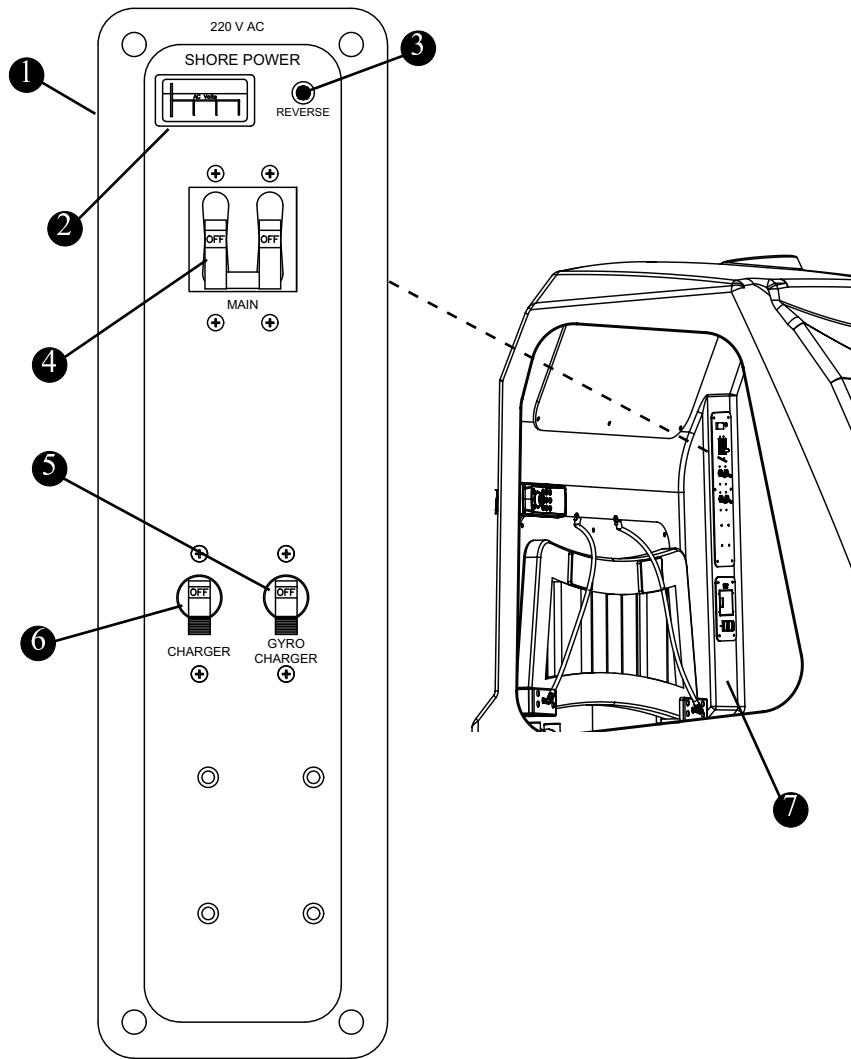

- 1 220V AC BREAKER PANEL (GYRO OPTION)
- 2 AC VOLTMETER
- 3 REVERSE POLARITY INDICATOR
- 4 SHORE POWER MAIN BREAKER ..... 32 AMPS
- 5 GYRO CHARGER ..... 10 AMPS
- 6 BATTERY CHARGER BREAKER ..... 10 AMPS
- 7 AFT PORT WALL OF CONSOLE INTERIOR

## Section 4 • Electrical System

### NAUTIC-ON™ Remote Connectivity (Option)\*

- 24/7 access to your boat's information using the NAUTIC-ON™ app.
- Monitor house and engine battery state and bilge pump activity.
- Review live engine data and diagnostics.
- Track location with smart breadcrumbing and geofence.
- View weather conditions at the boat.

\* A limited subscription is included and thereafter the service is subscription based.

### NOTICE


Follow the manufacturer's recommendations for long term storage of your battery(s).

REFER TO THE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKET FOR COMPLETE INSTRUCTIONS AND WARRANTY.

### Transducer Location

Transducer Location

Fig. 4.12.1

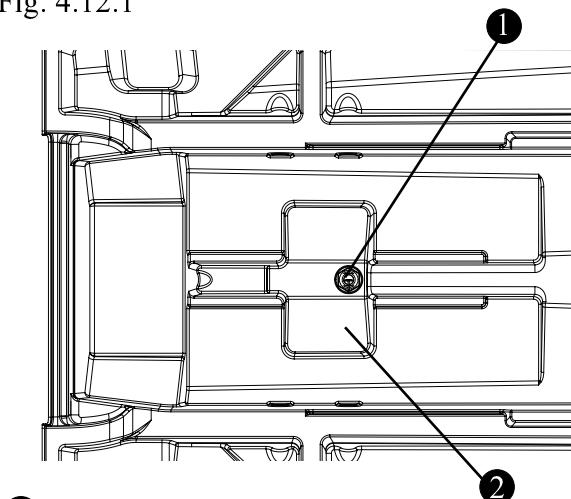

① TRANSDUCER

② BILGE

### Rigging


Your boat has a large open space between the fuel tank and the floor to run additional electronic wiring. There is a rigging tube along the starboard stringer with a pull cord bundled at each end.

Tie another piece of nylon cord to the current accessory wiring being run and use that for later runs.

There is also a cord located in the port frame of the hardtop which terminates in the console at one end and the hardtop electronics box at the other.

#### Rigging Tube/Pull

Fig. 4.12.2

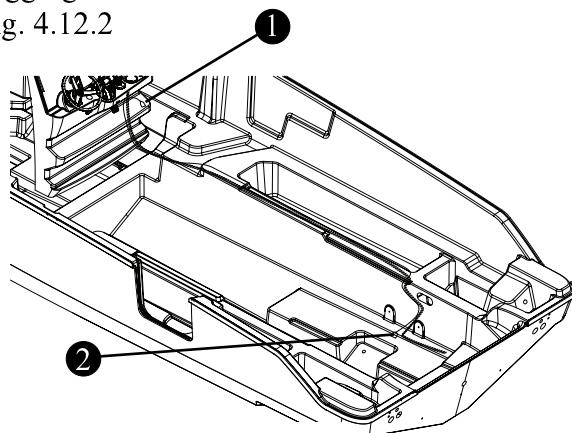


① FORWARD PULL CORD

② AFT PULL CORD

#### Hardtop Rigging

Fig. 4.12.3

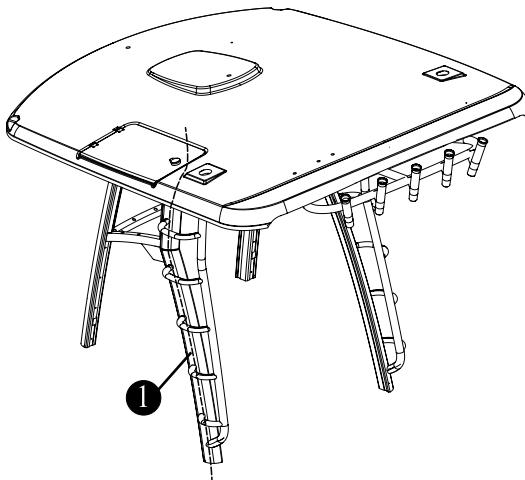

① HARDTOP PULL CORD

## Section 4 • Electrical System

### Electrical Schematics & Harnesses

The following pages contain drawings pertaining to the electrical system in your boat. These schematics and diagrams were generated by electrical engineers in the Boston Whaler® Engineering Department and are for reference and to be used by service technicians.

Boston Whaler® does not recommend that you attempt to work on the electrical system yourself. Instead, we suggest that you take your boat to an authorized Boston Whaler® dealer for electrical service.

Boston Whaler® reserves the right to change or update the electrical system on any model at any time without notice to the customer and is not obligated to make any updates to units built prior to the change.

### Wiring Identification Chart

Boston Whaler® adheres to electrical wiring requirements which meet all the ABYC-11 standards. The following chart outlines the gauge, color and function of the wiring used.


### Wire Color Chart for DC and Special Circuit

COLOR	FUNCTION	COLOR	FUNCTION
GRN	GROUNDING MAIN/TOWER & ALUMINUM FUEL TANKS	BRN/ORN	SUMP PUMP
GRN	GROUNDING	BRN/RED	BILGE PUMP (UNSWITCHED)
ORN	STARBOARD 30 AMP RECEPTACLE	BRN/VIO	FORWARD FISHBOX PUMP
RED	MAIN FEEDS/PORT 30 AMP RECEPTACLE	BRN/WHT	MACERATOR
BRN/BLK	STARBOARD FISHBOX PUMP	BRN/YEL	LIVEWELL PUMP
BRN/VIO	FORWARD FISHBOX PUMP	GRY	RUNNING LIGHTS
BRN/YEL	LIVEWELL PUMP (HIGH CURRENT)	GRY/BLK	ACC 1
BRN/BLU	PORT FISHBOX PUMP	GRY/BLU	ACC 2
BLK	GROUND	GRY/GRN	ACC 3
RED	+12V MAIN	GRY/RED	AFT MAST/ACC 4
BLK	GROUND	GRY/WHT	ALL ROUND/FWD MAST LIGHT
BLK/YEL	STOP CIRCUIT	GRN	GROUNDING
BLK/WHT	GEN SHUTDOWN	ORN	REFRIGERATOR or CENTER WIPER
BLU	COMPASS	ORN/BLU	HORN
BLU/BLK	DOME LIGHT	ORN/BRN	STARBOARD WIPER PARK
BLU/GRN	SPREADER LIGHT	ORN/GRN	STARBOARD WIPER
BLU/ORN	LIVEWELL LIGHT	ORN/RED	PORT WIPER
BLU/RED	COURTESY LIGHTS	ORN/VIO	VACUUM PUMP
BLU/VIO	CABIN LIGHTS	ORN/WHT	CENTER WIPER
BRN	BILGE PUMP (SWITCHED)	PINK	FUEL SENDER
BRN/BLK	STARBOARD FISHBOX PUMP	RED	12V RECEPTACLE
BRN/BLU	PORT FISHBOX PUMP	VIO	IGNITION
BRN/GRY	RAW WATER	WHT	CO MONITOR/ELECTRIC TRIM TAB (SWITCHED)
BRN/GRN	FRESH WATER	YLW	BLOWER/STEREO MEMORY
		YLW/RED	START

## Section 4 • Electrical System

DC Power-Sheet 1


Fig. 4.14.1

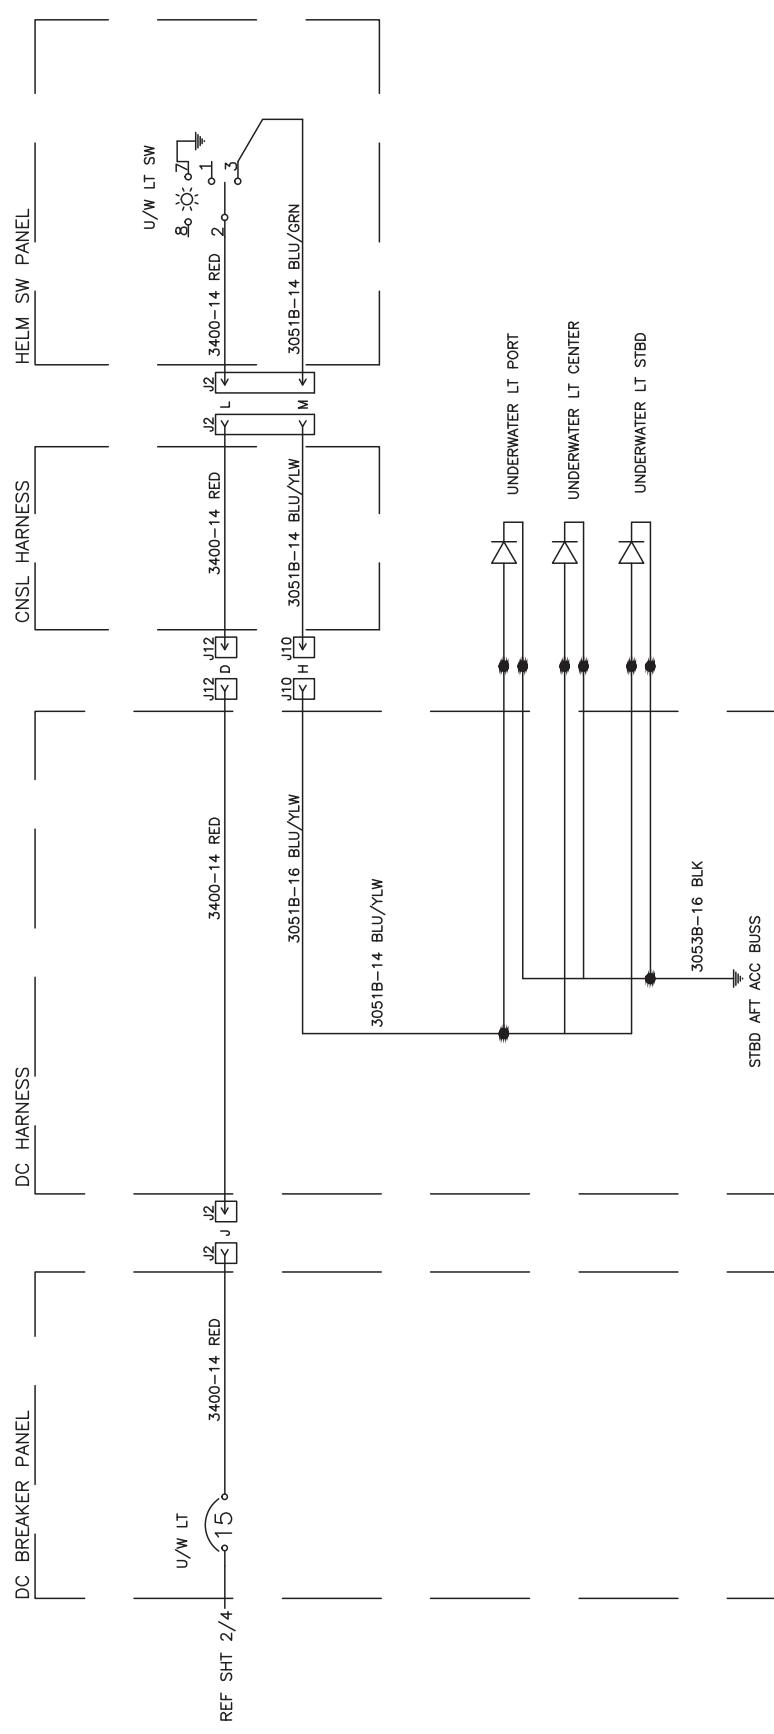

## Section 4 • Electrical System

DC Power-Sheet 2


Fig. 4.15.1

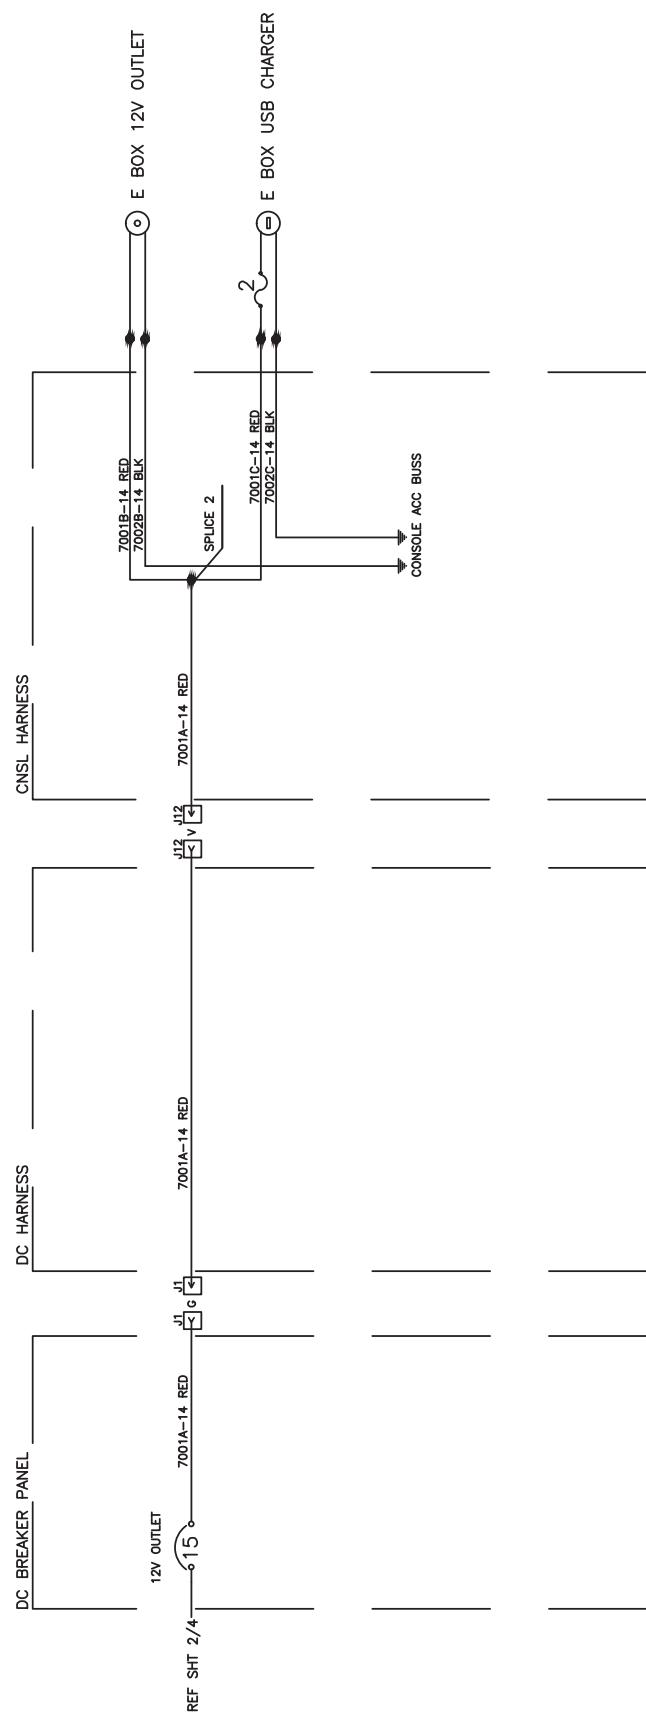

## Section 4 • Electrical System

DC Power-Sheet 3


Fig. 4.16.1

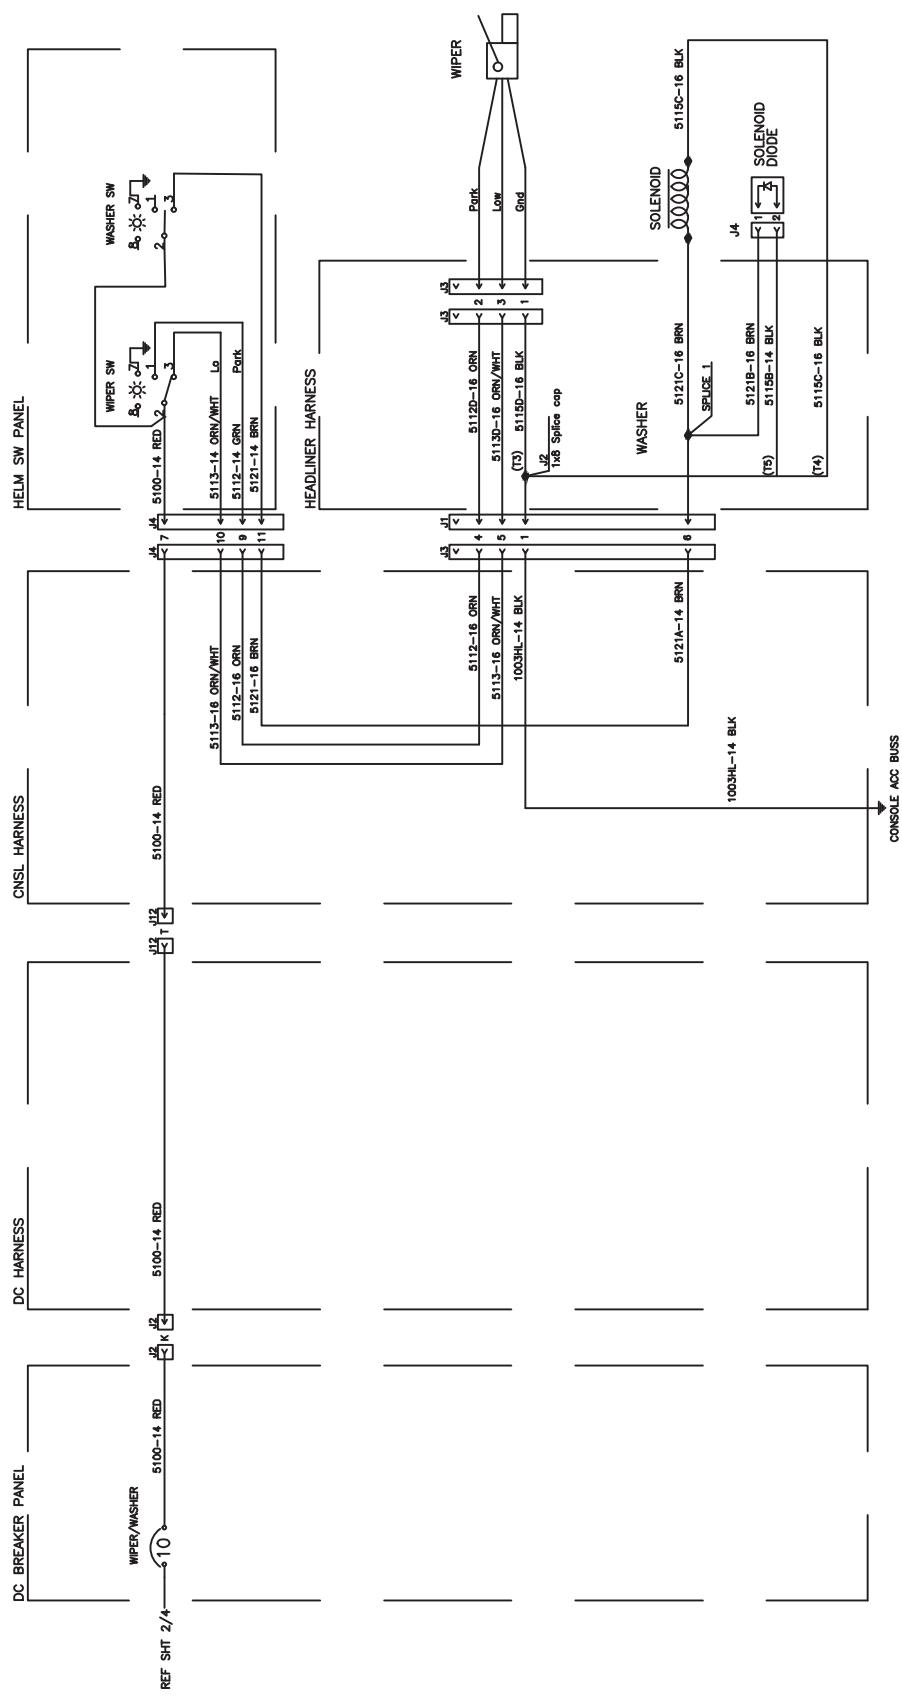

## Section 4 • Electrical System

DC Power-Sheet 4


Fig. 4.17.1

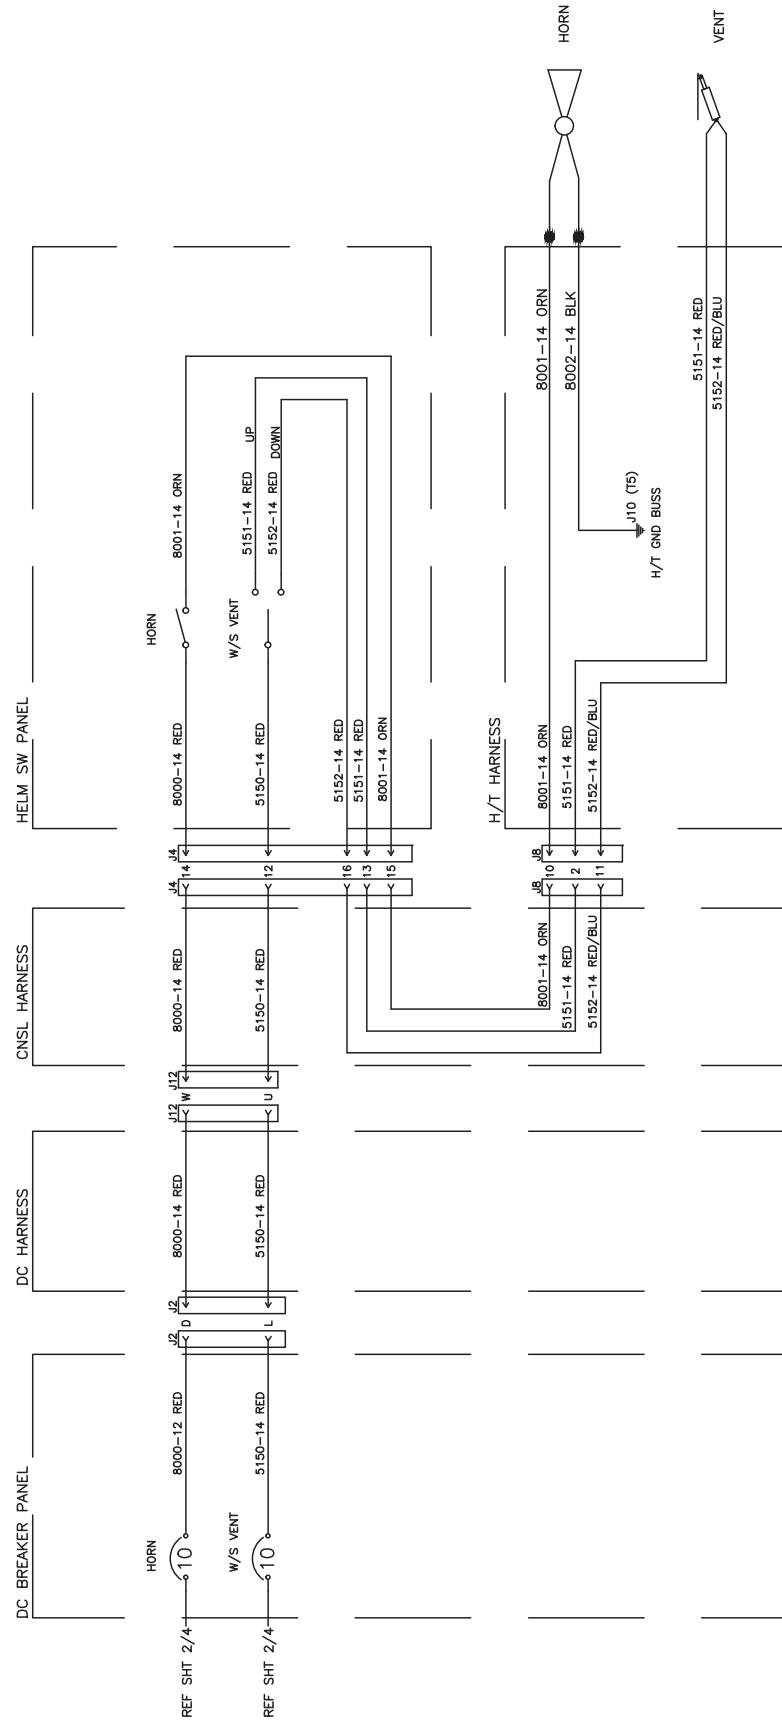

## Section 4 • Electrical System

DC Power-Sheet 4


Fig. 4.18.1

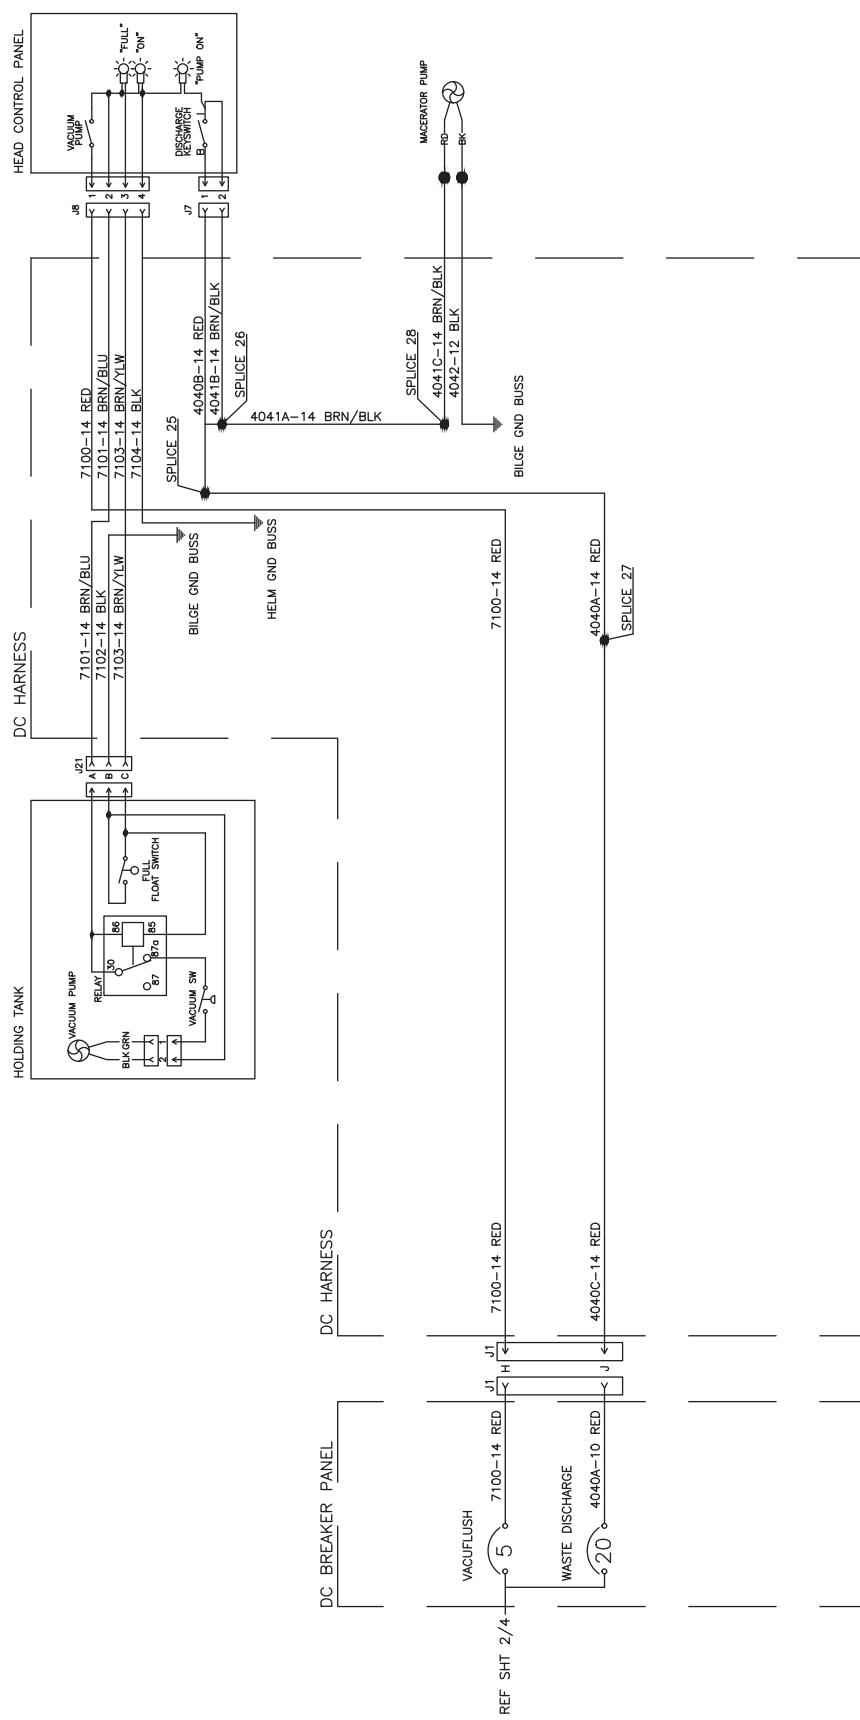

## Section 4 • Electrical System

DC Power w/Inverter  
Fig. 4.19.1


INVERTER DC 12V  
120V/60Hz (DOMESTIC)

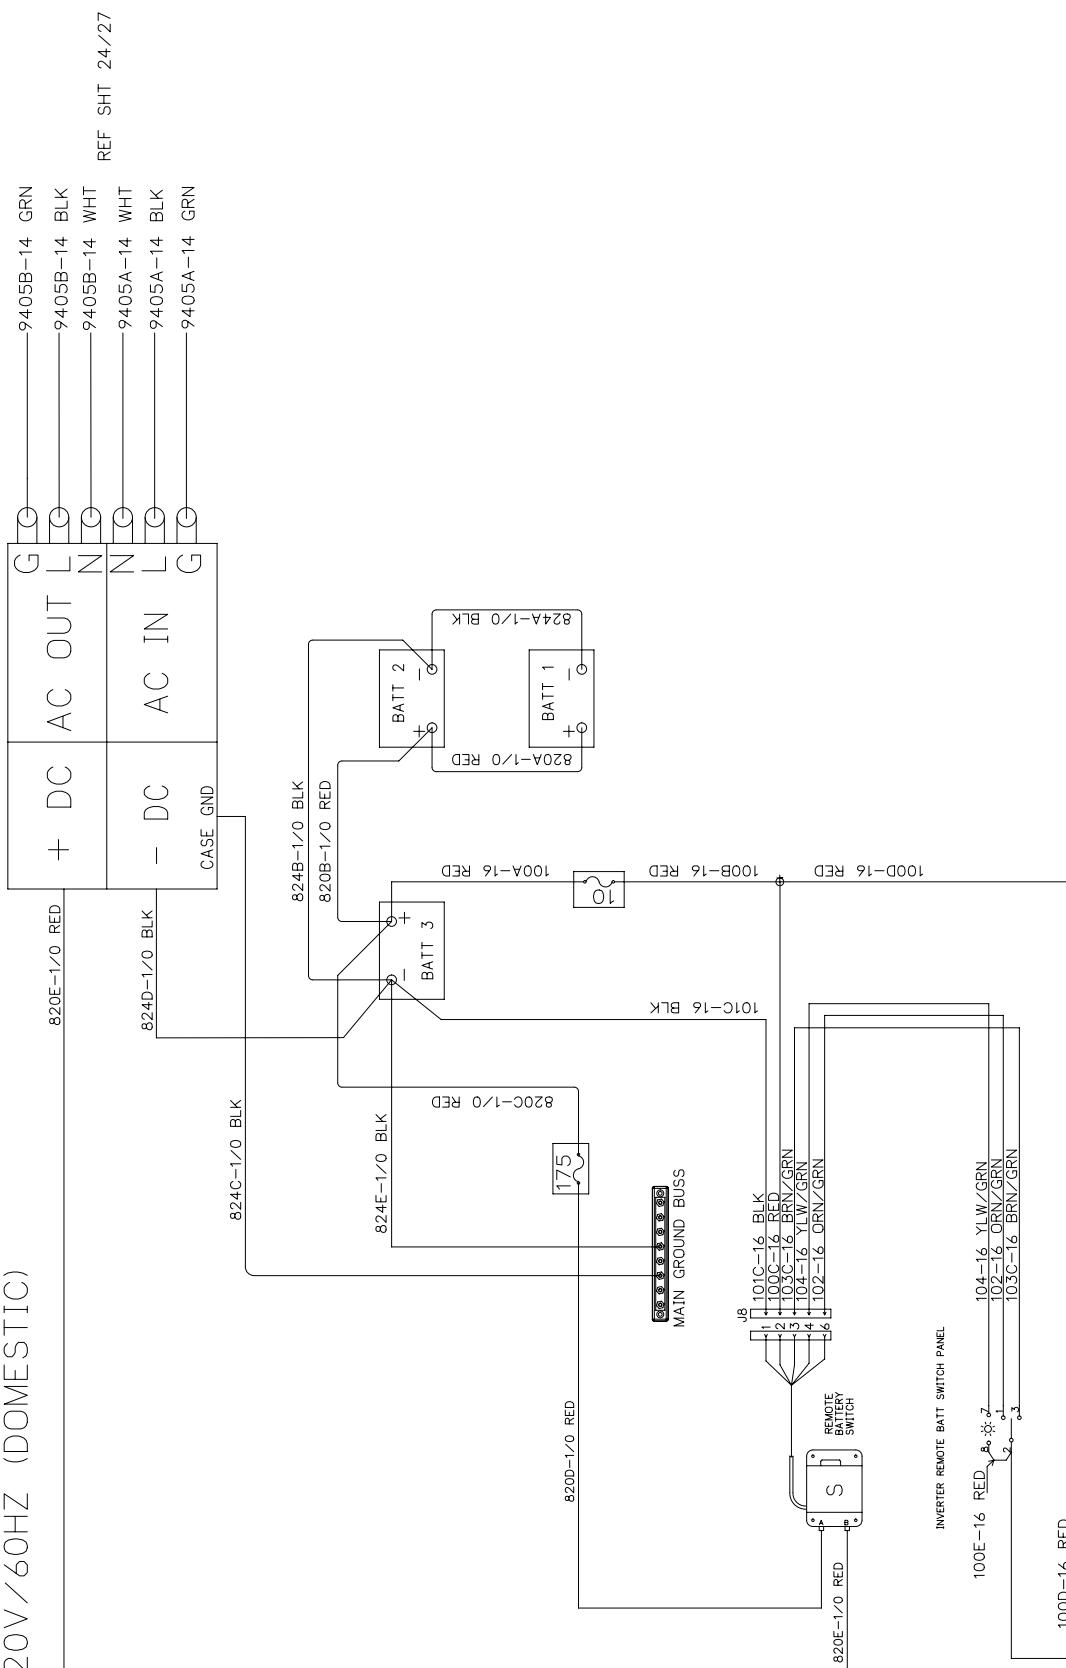

## Section 4 • Electrical System

DC Power 230V/50HZ w/Inverter


Fig. 4.20.1

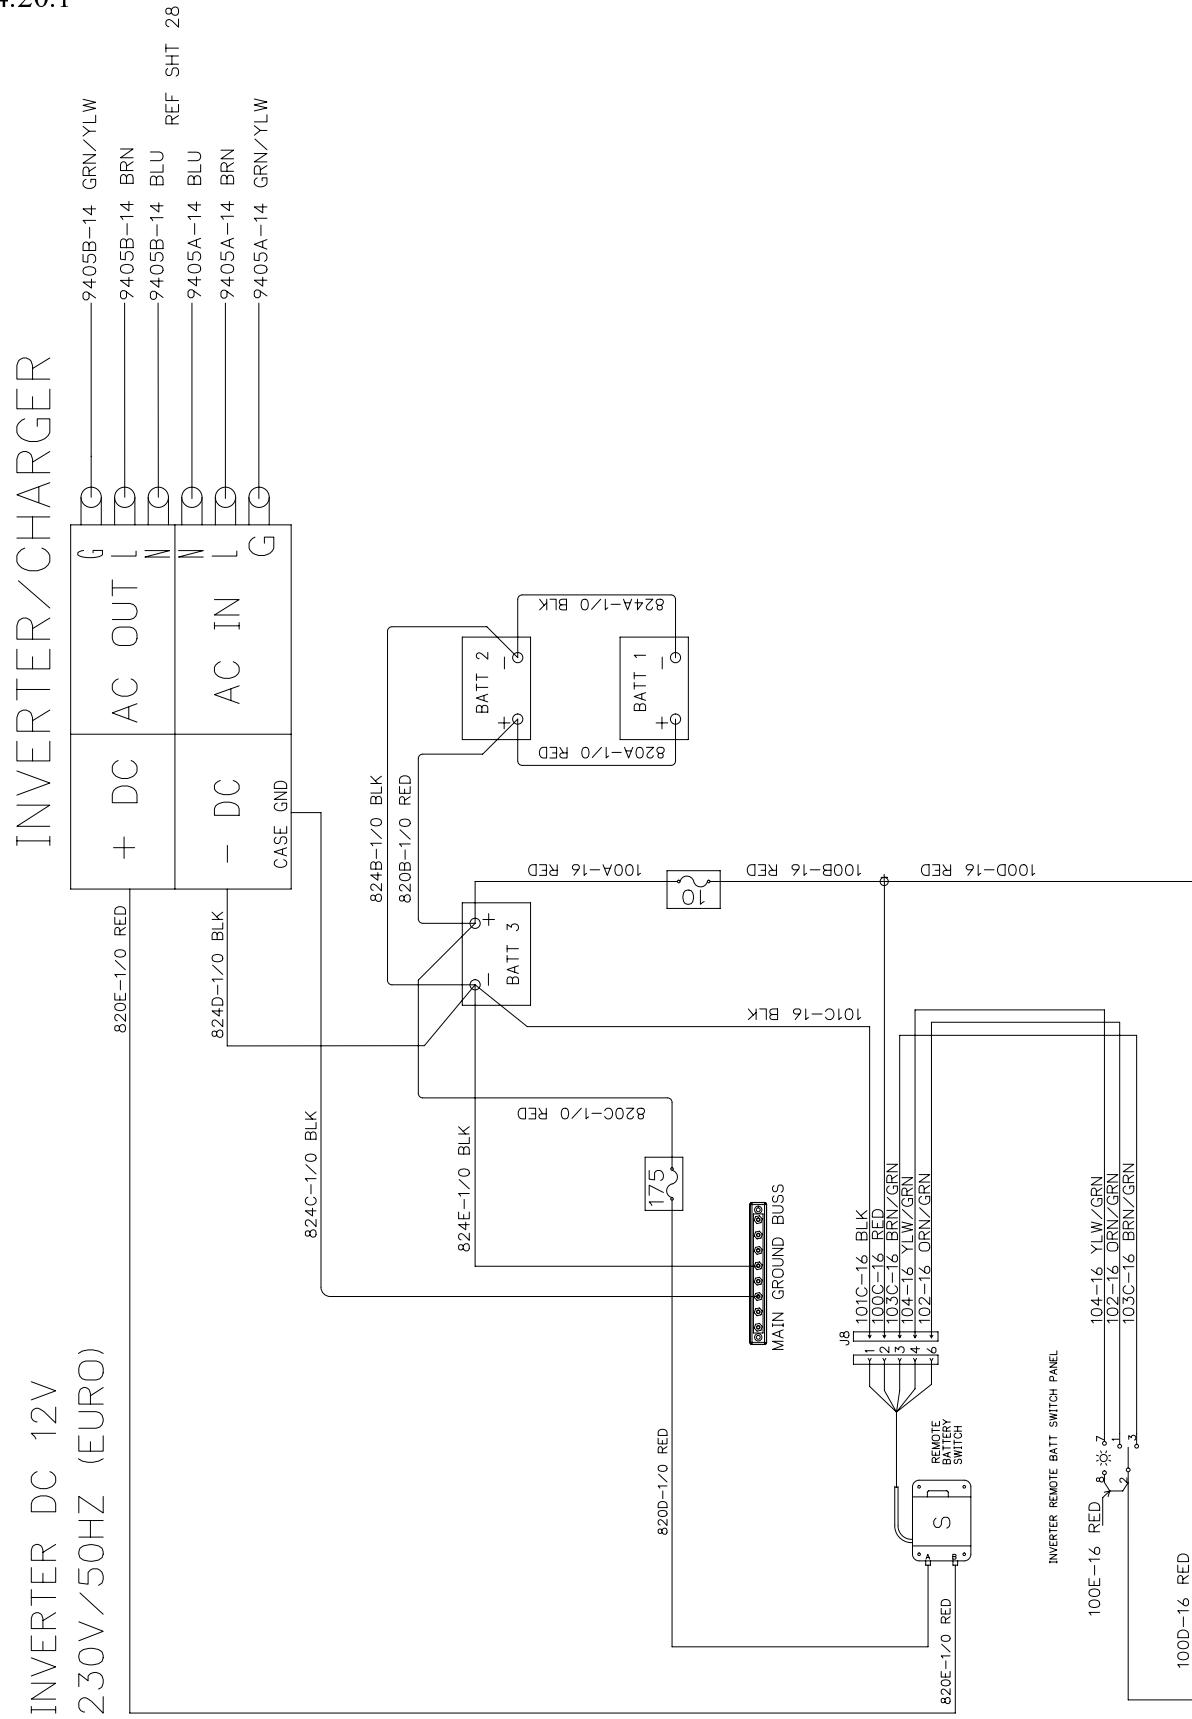

## **Section 4 • Electrical System**

## DC Gyro Stabilizer w/120V AC Charger


Fig. 4.21.1

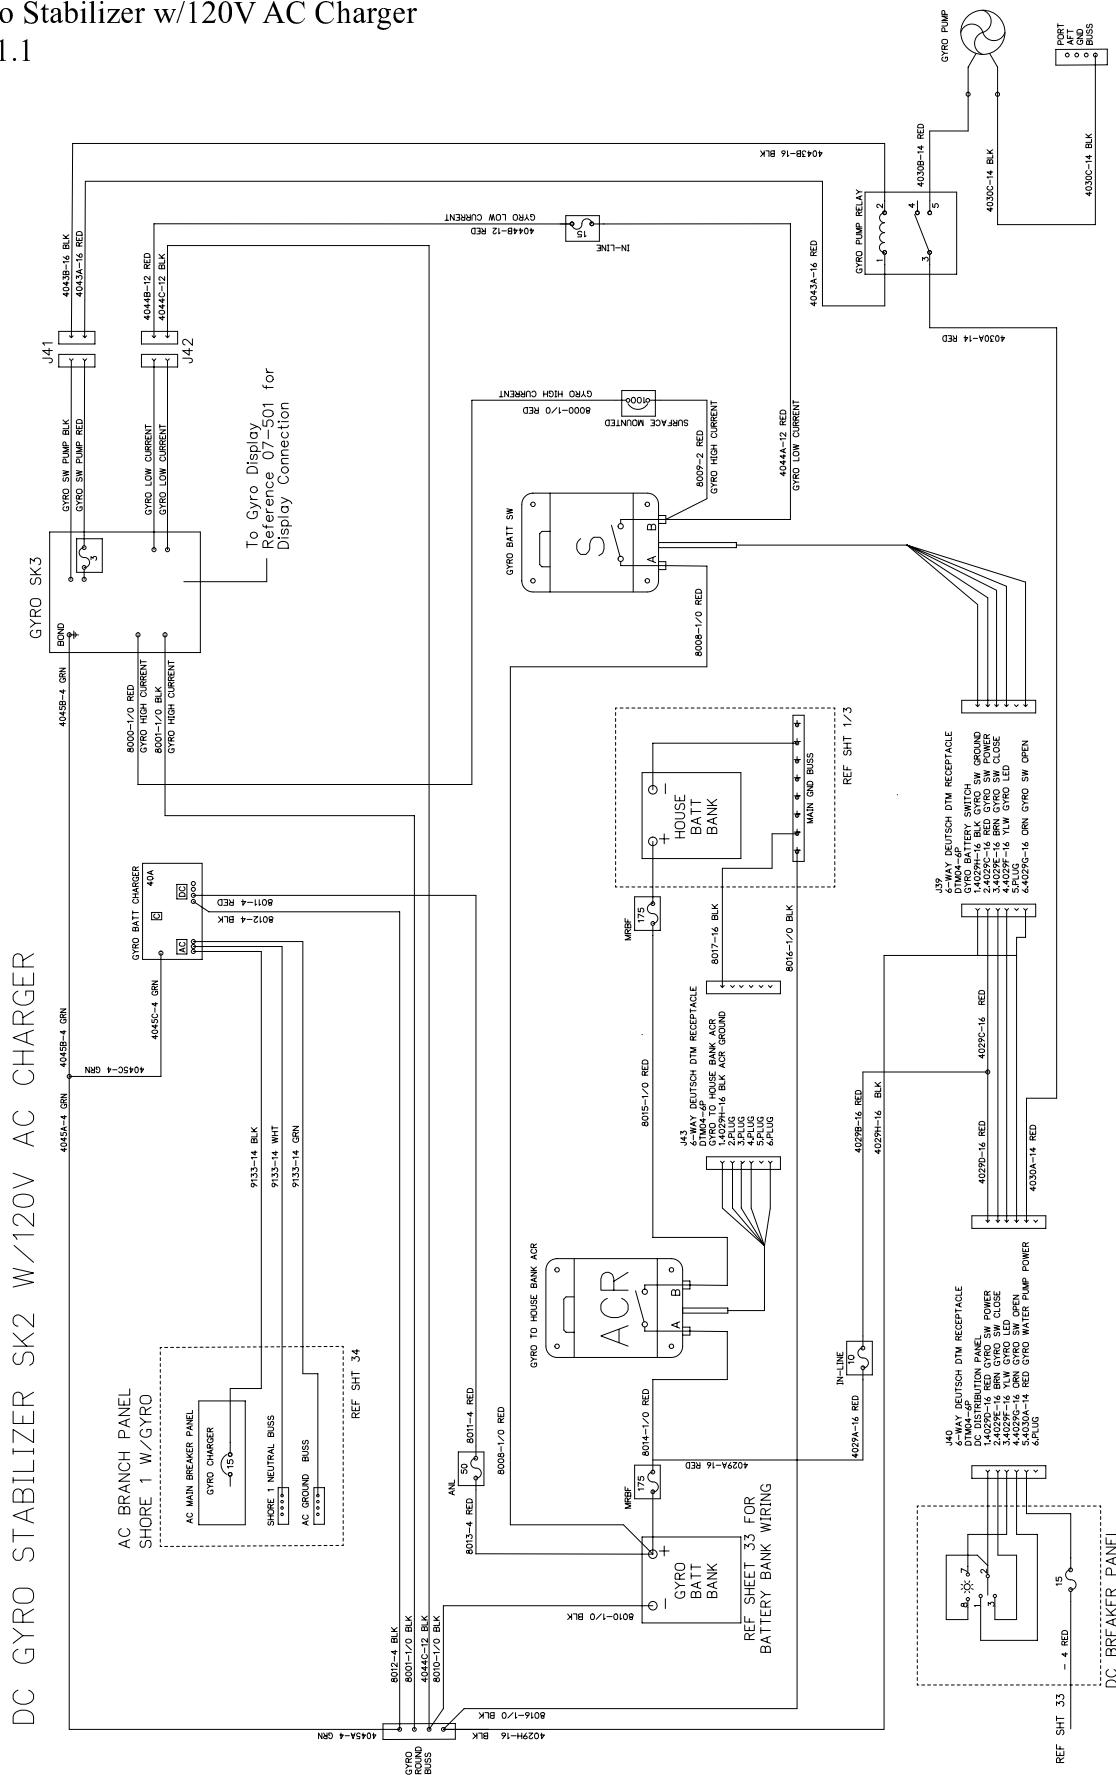

## **Section 4 • Electrical System**

## DC Gyro Stabilizer w/220V AC Charger

Fig. 4.22.1

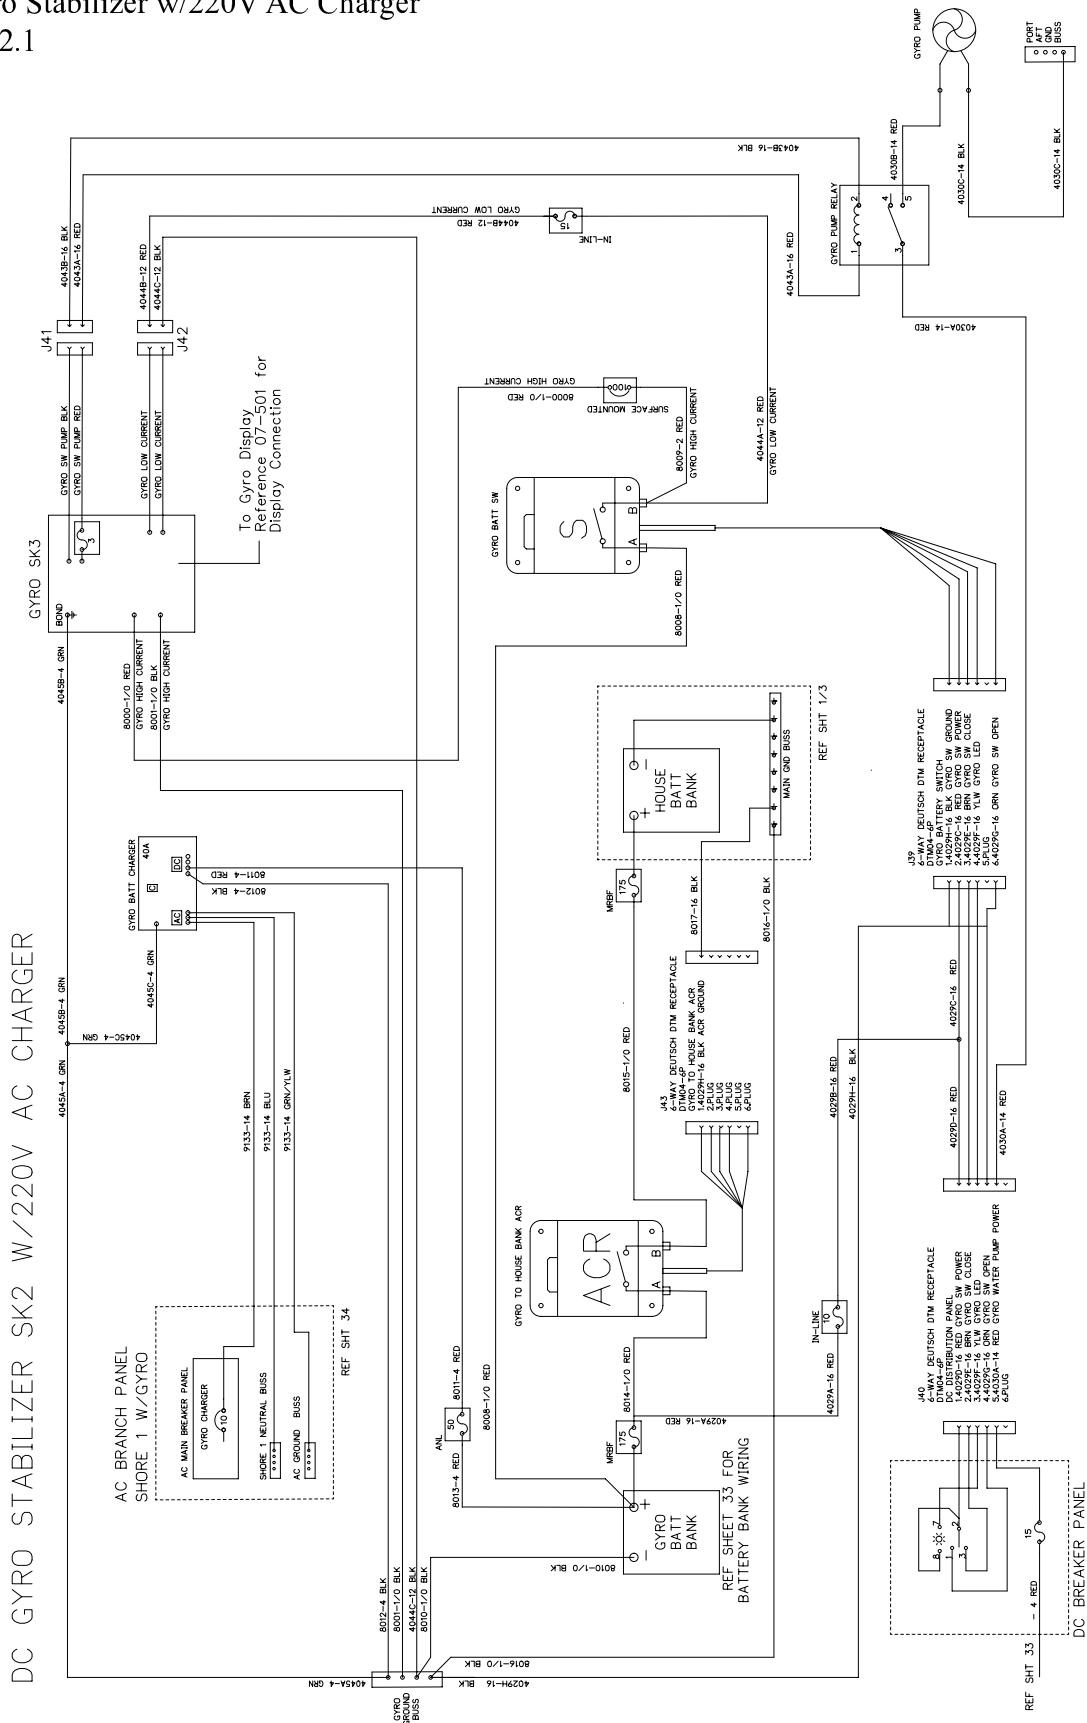

## Section 4 • Electrical System

DC Breaker Panel w/Gyro


Fig. 4.23.1

DC BREAKER PANEL W/GYRO

REF SHT 2/4 — 4 RED

REF SHT 1/3 — 1101C-4 RED


REF SHT 2/4 — -10 RED

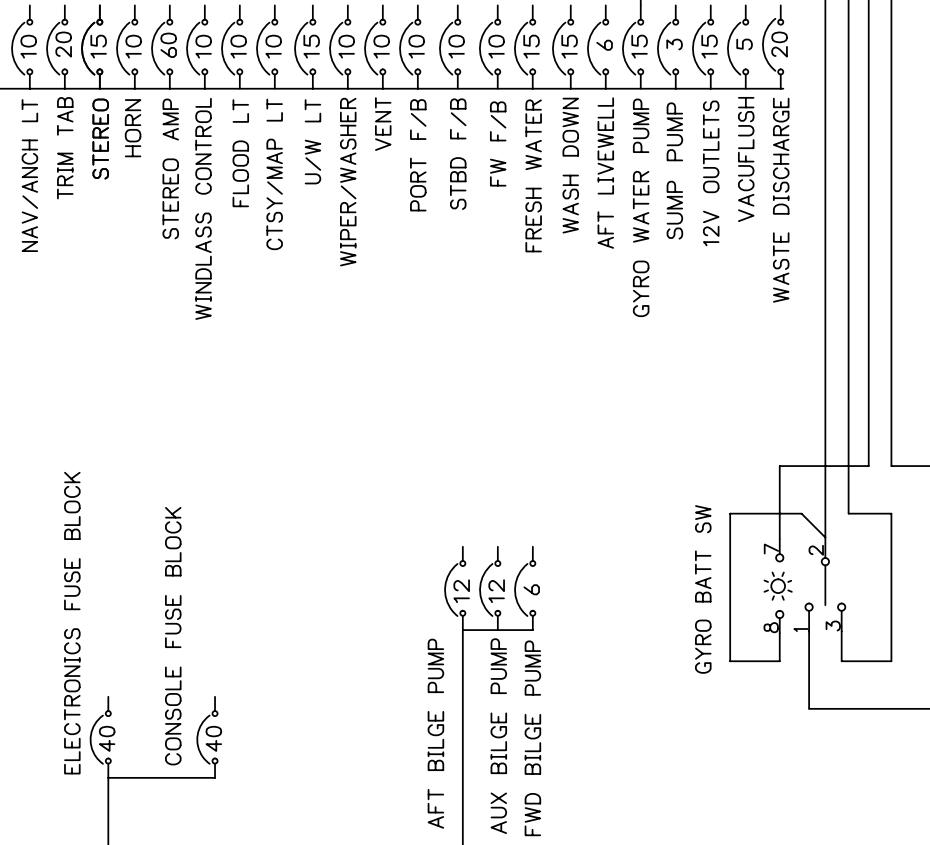

## Section 4 • Electrical System

AC Gyro Power -120V/60HZ


Fig. 4.24.1

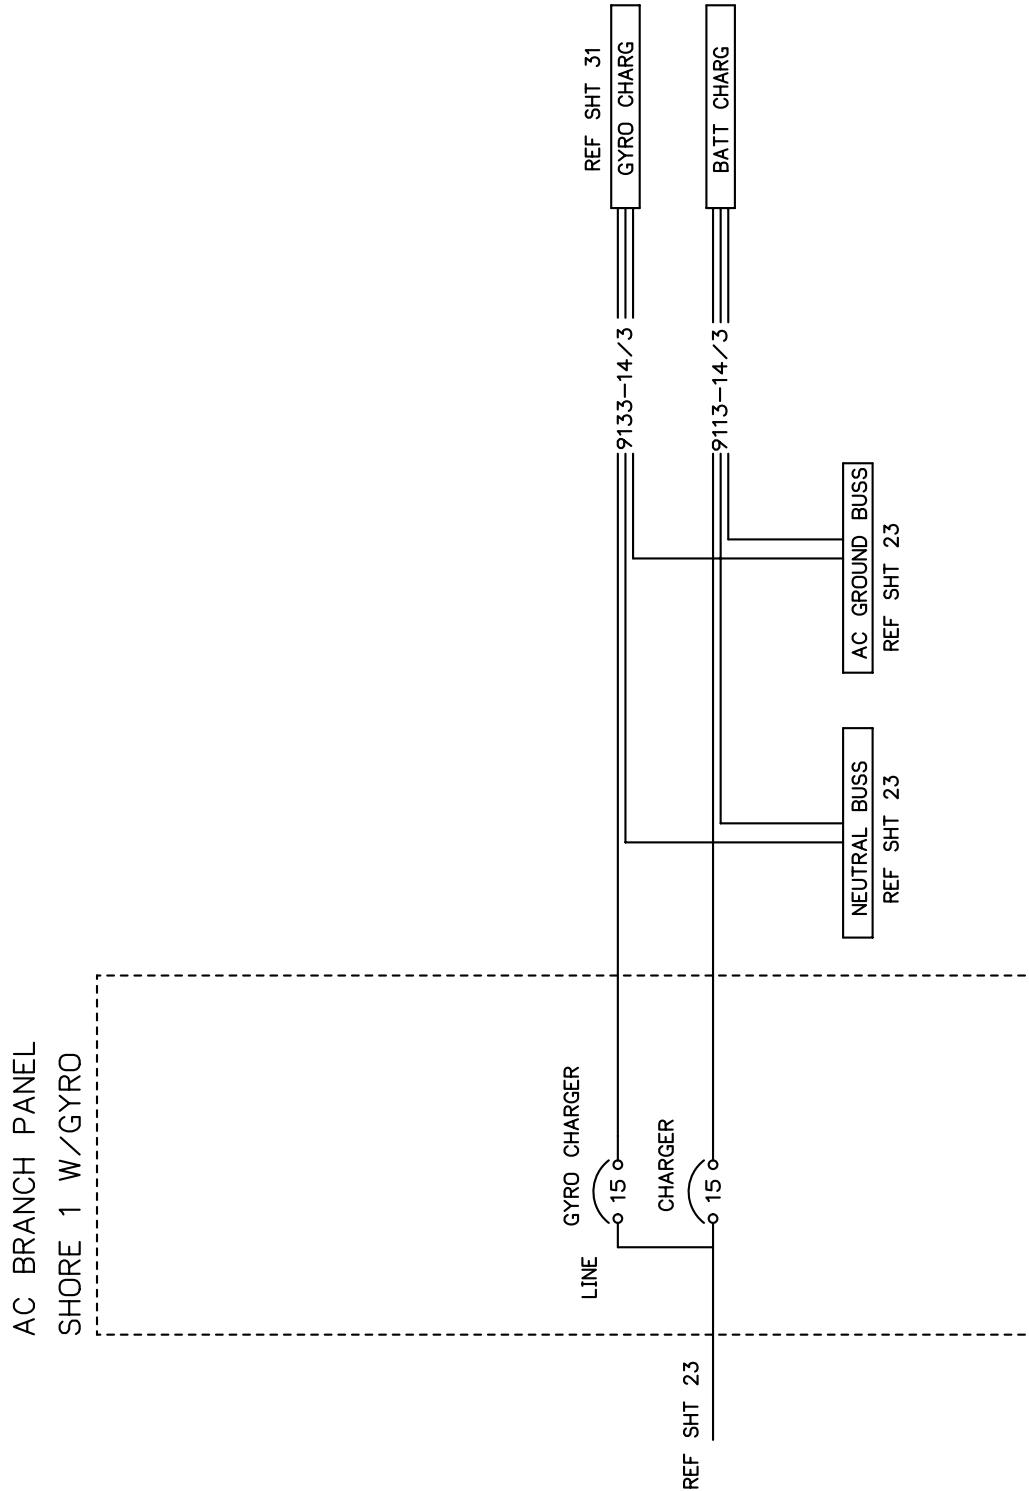

## Section 4 • Electrical System

AC Gyro Power -230V/50HZ


Fig. 4.25.1

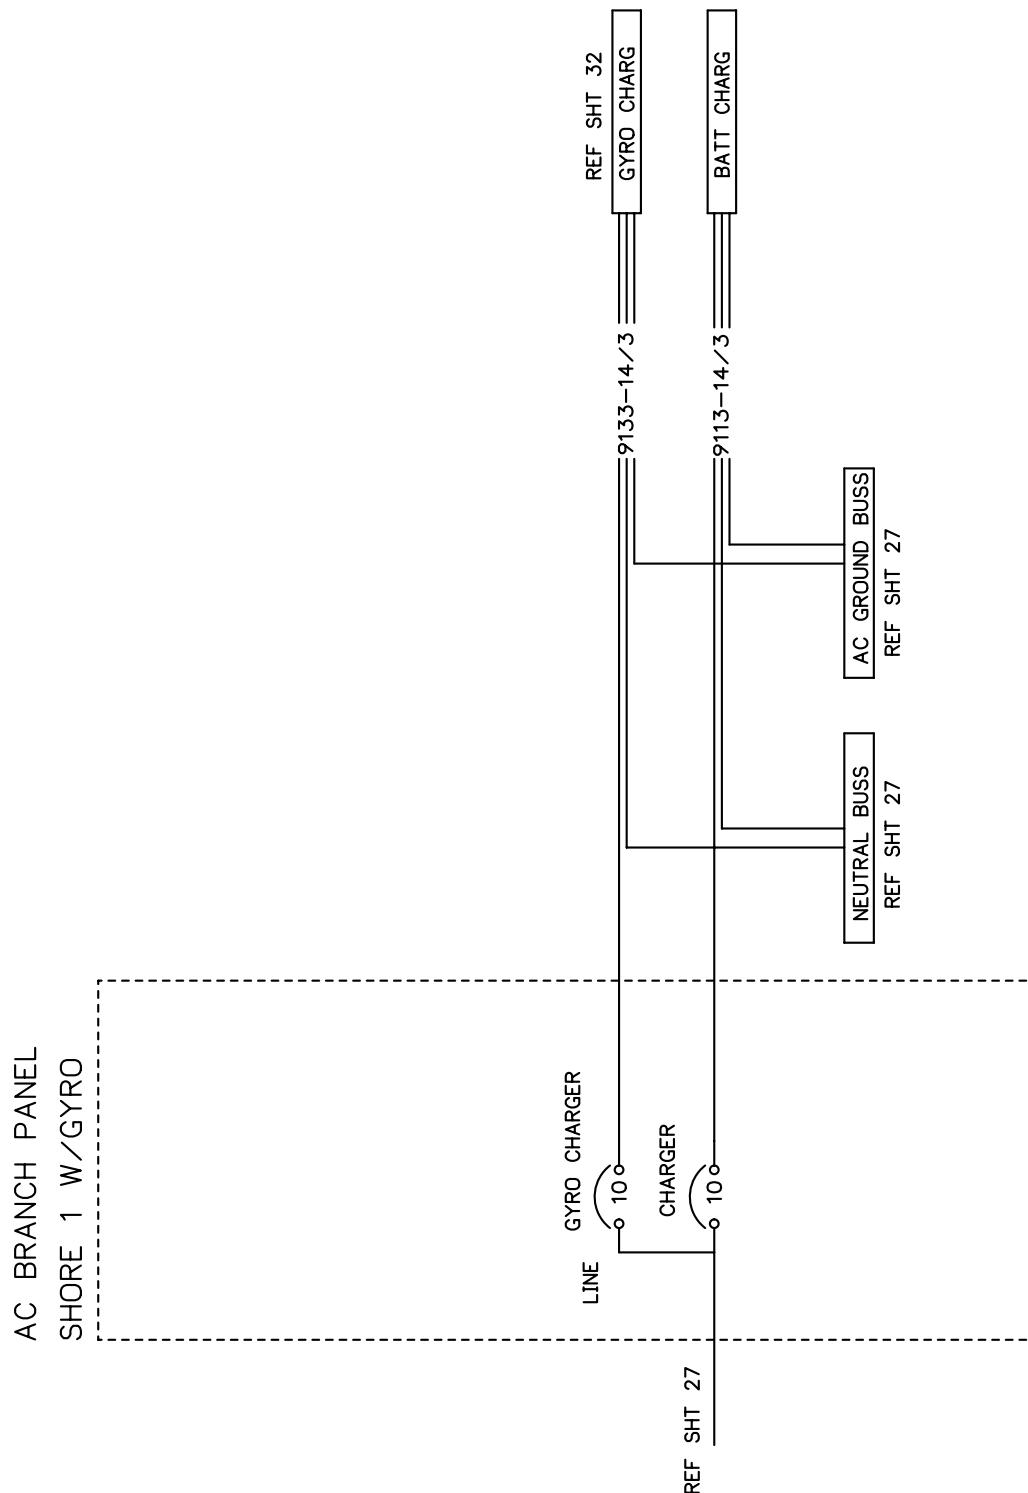

## Section 4 • Electrical System

Gyro battery Bank Positive Terminal Connection


Fig. 4.26.1

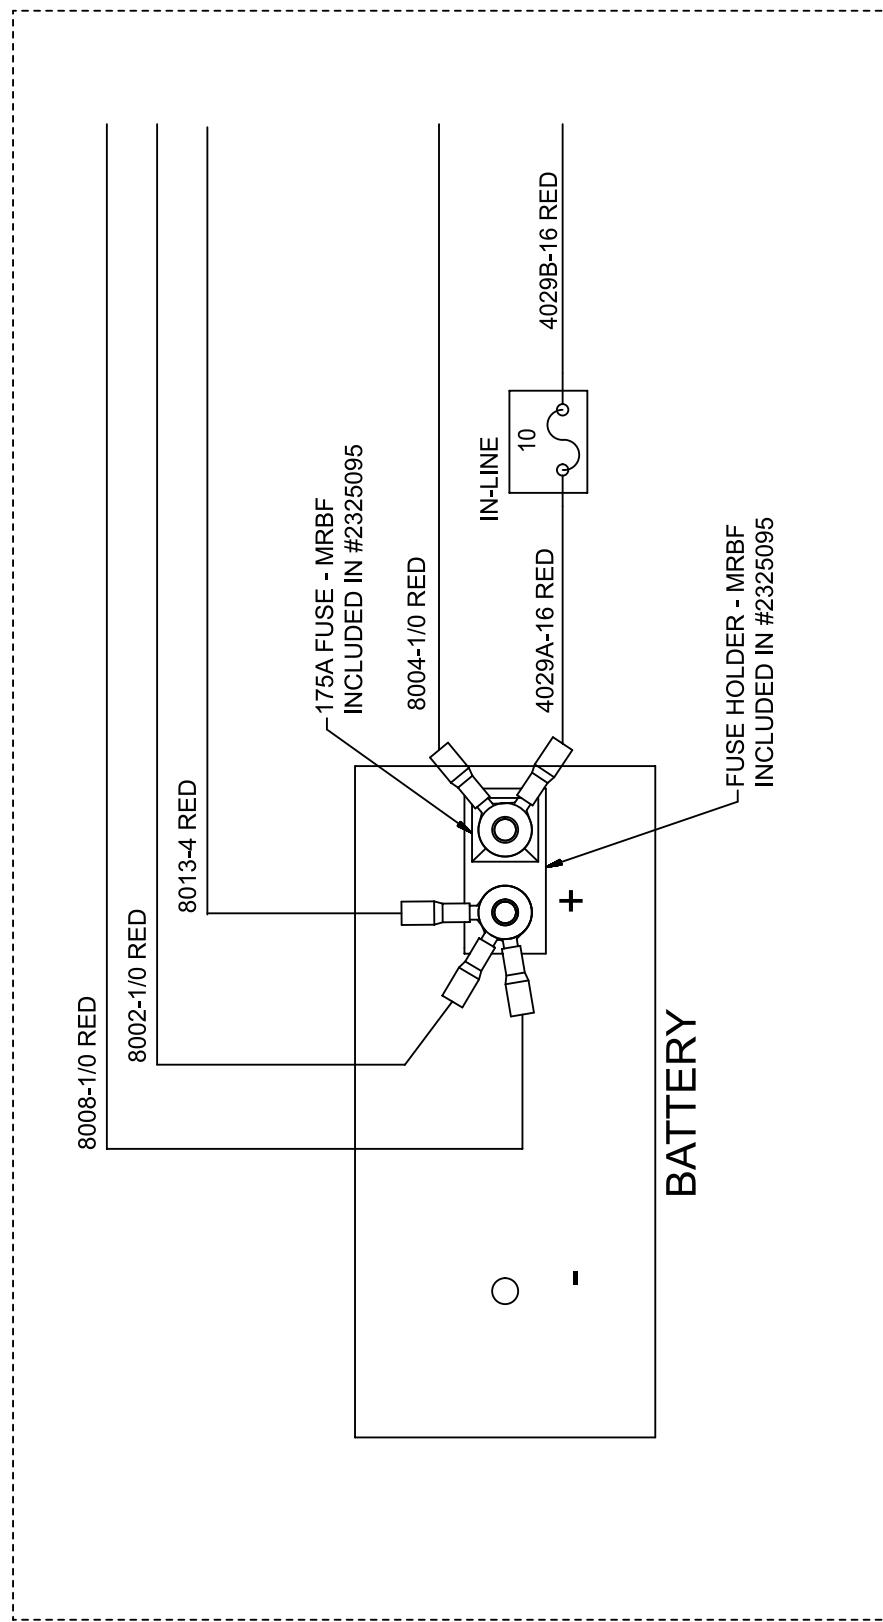

## Section 4 • Electrical System

Gyro Battery Bank - Standard Steering Boat


Fig. 4.27.1

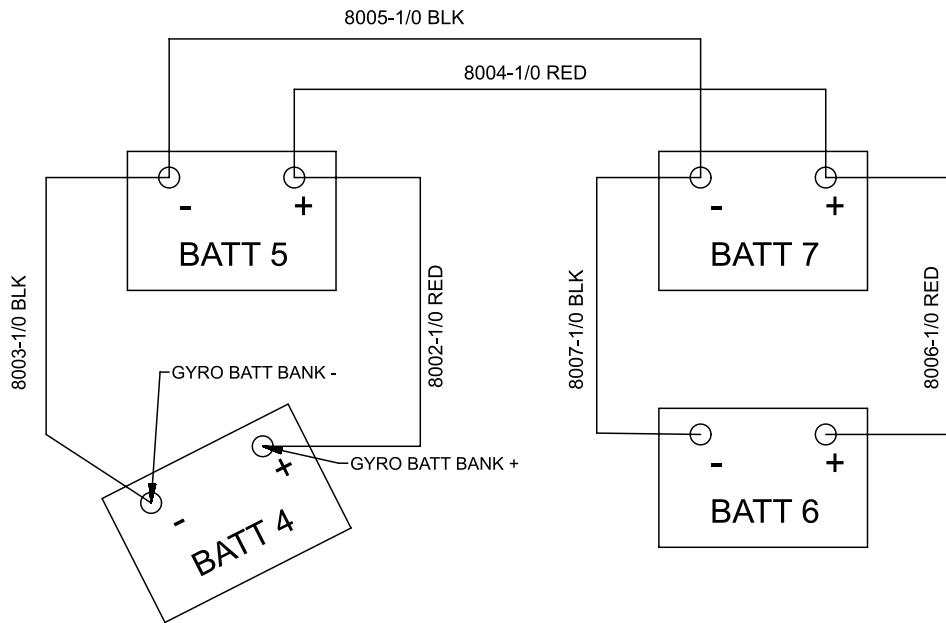

All battery jumper to be labeled on both ends according to this detail

Gyro Battery Bank - Joystick Steering Boat (Option)

Fig. 4.27.2

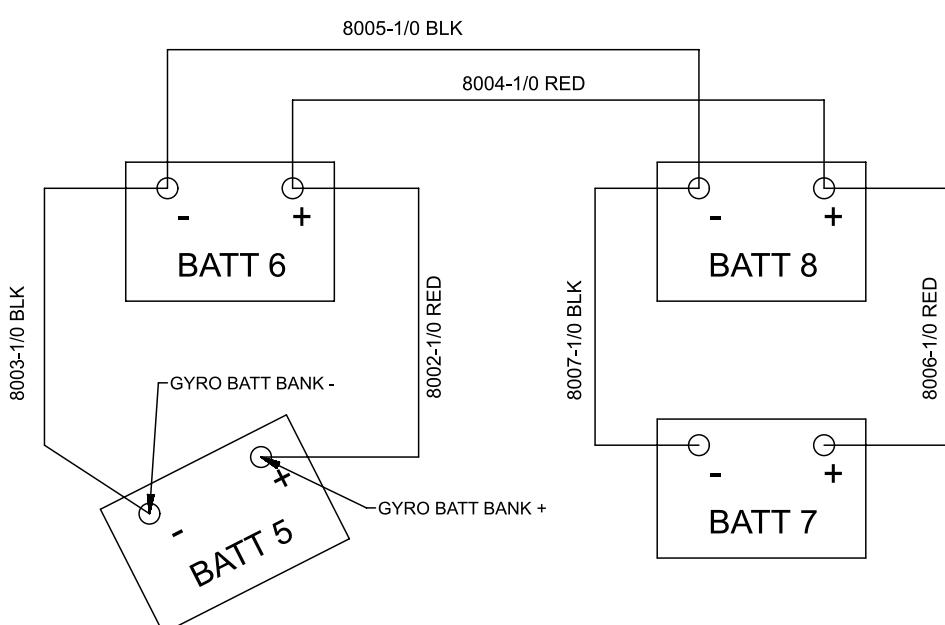


All battery jumper to be labeled on both ends according to this detail

## Section 4 • Electrical System

AC Power-Sheet 1


Fig. 4.28.1

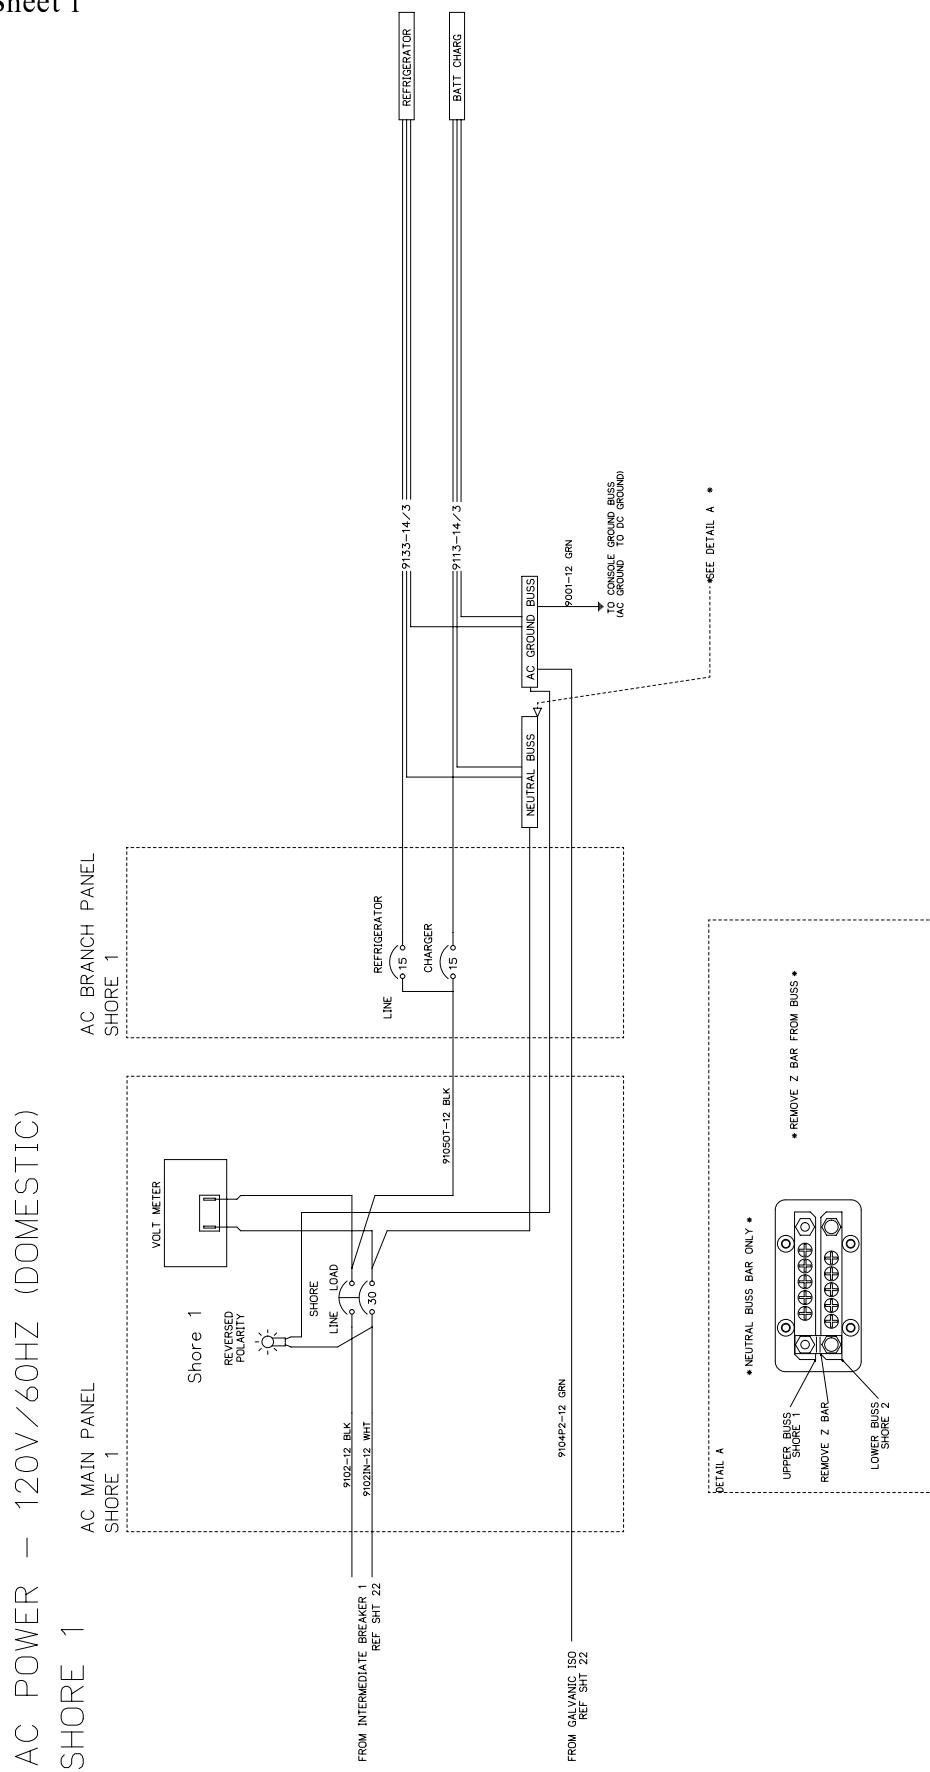

## Section 4 • Electrical System

AC Power-230V/50HZ


Fig. 4.29.1

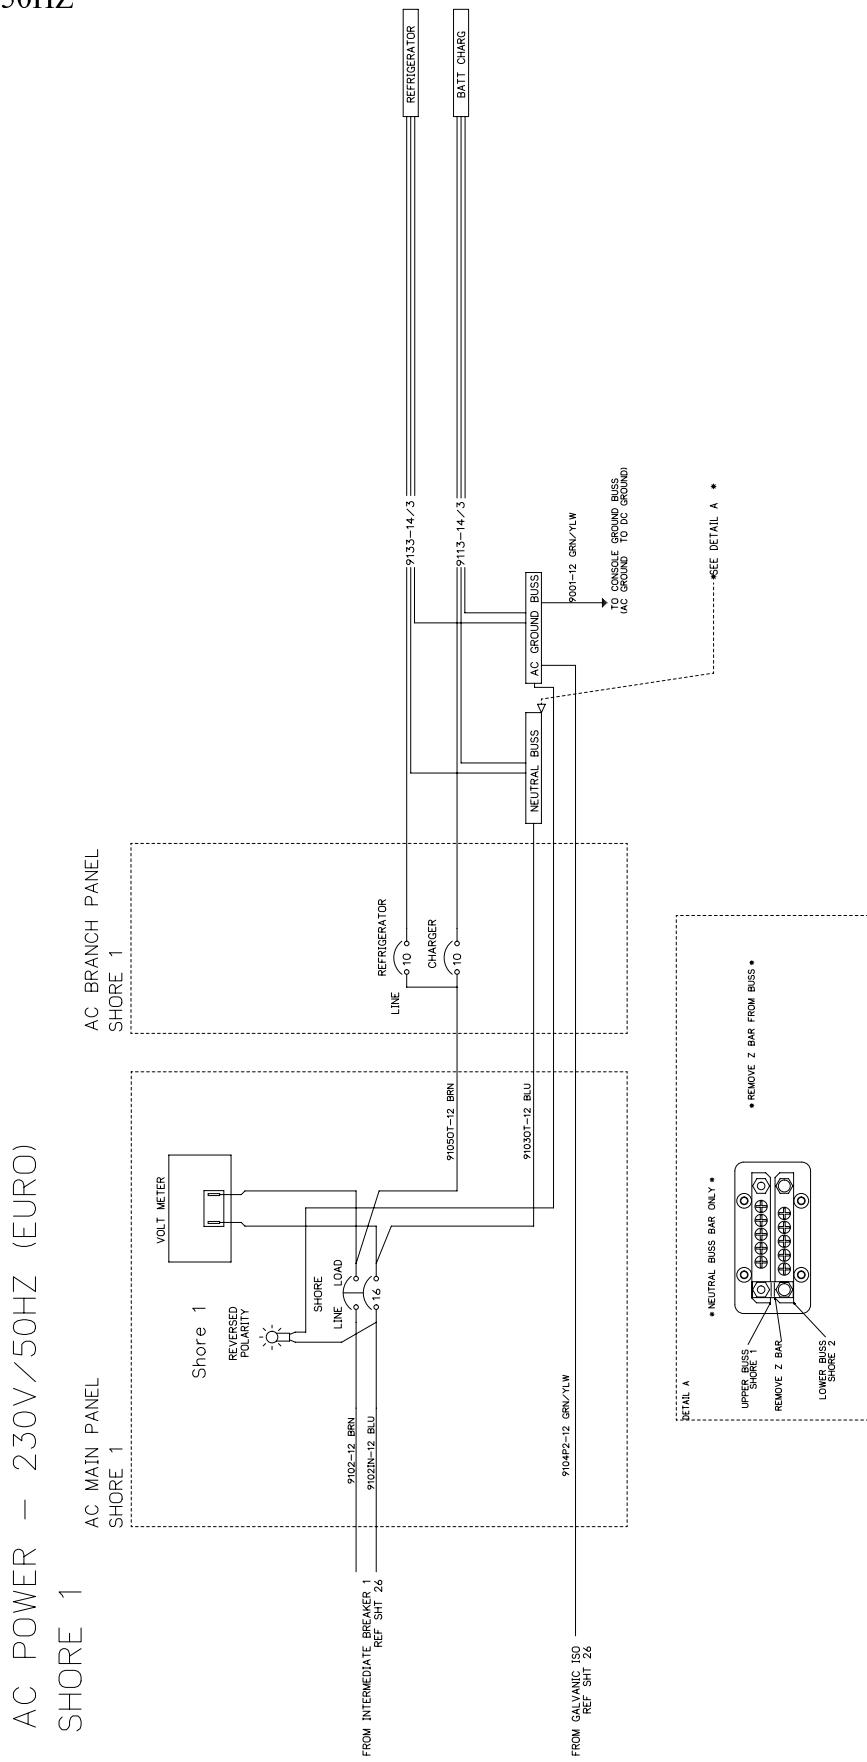

## **Section 4 • Electrical System**

## AC Power w/Inverter


Fig. 4.30.1

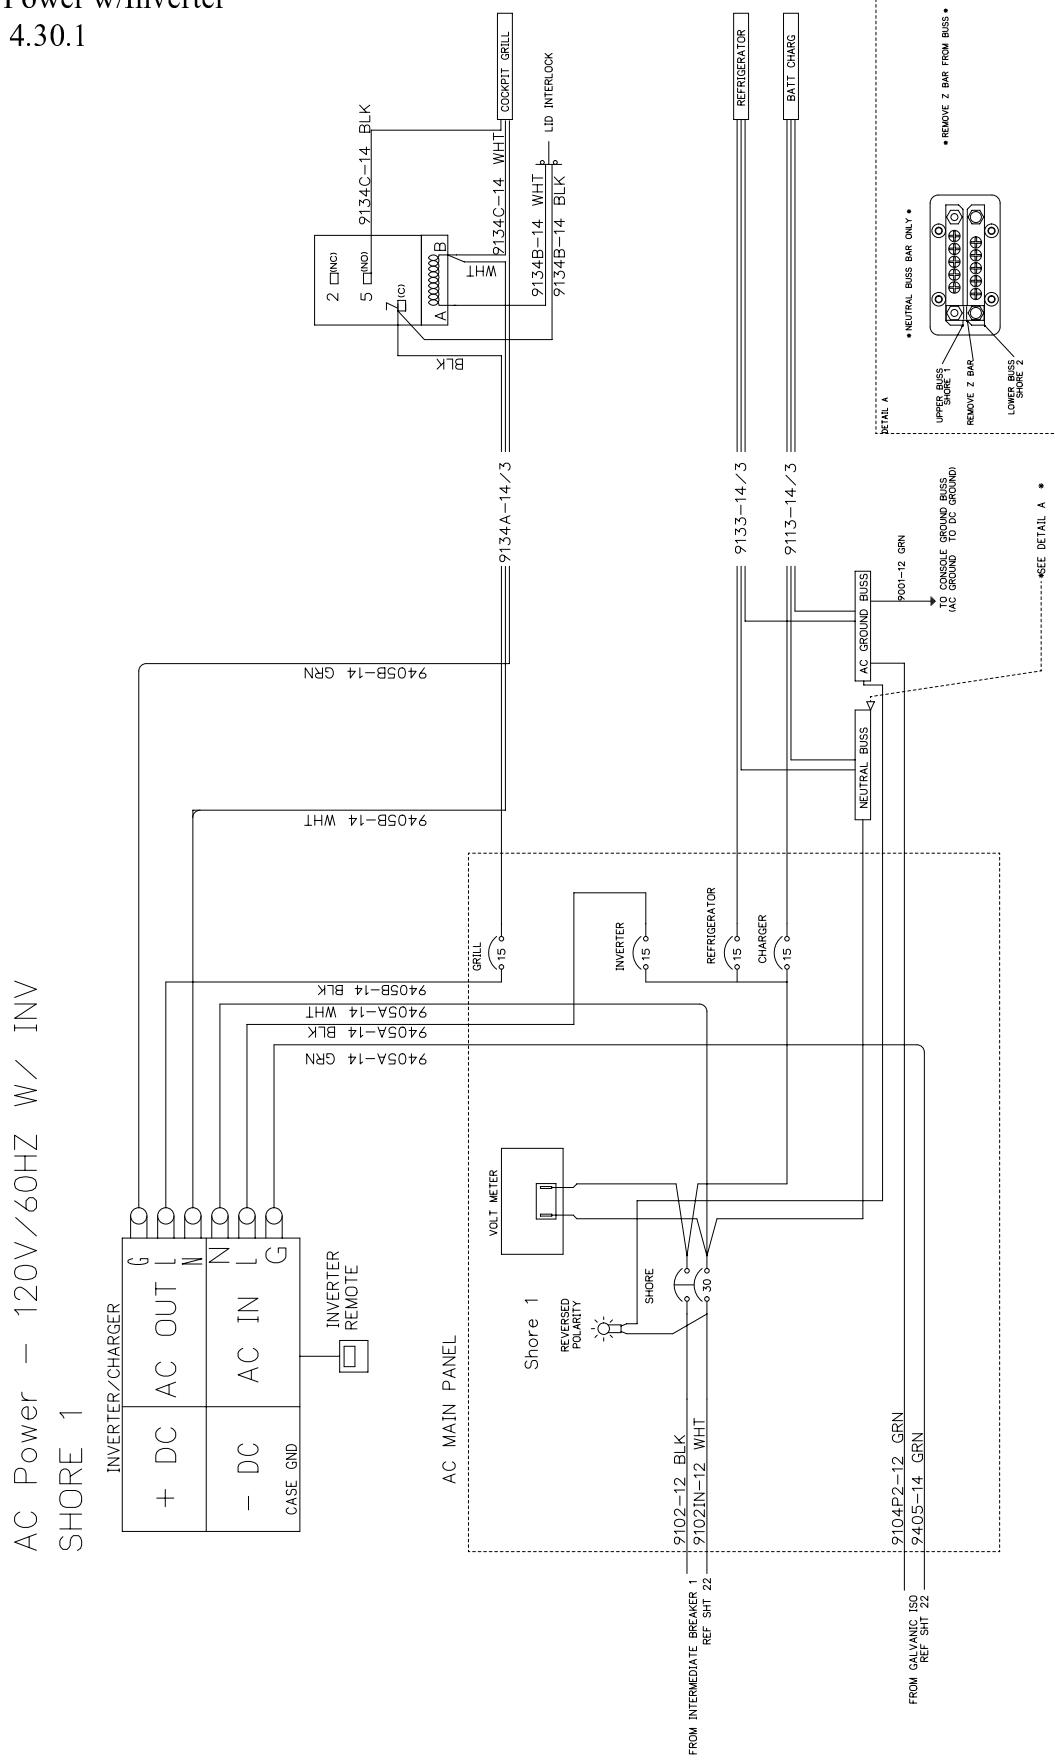

## **Section 4 • Electrical System**

AC Power 230V/50HZ w/Inverter


Fig. 4.31.1

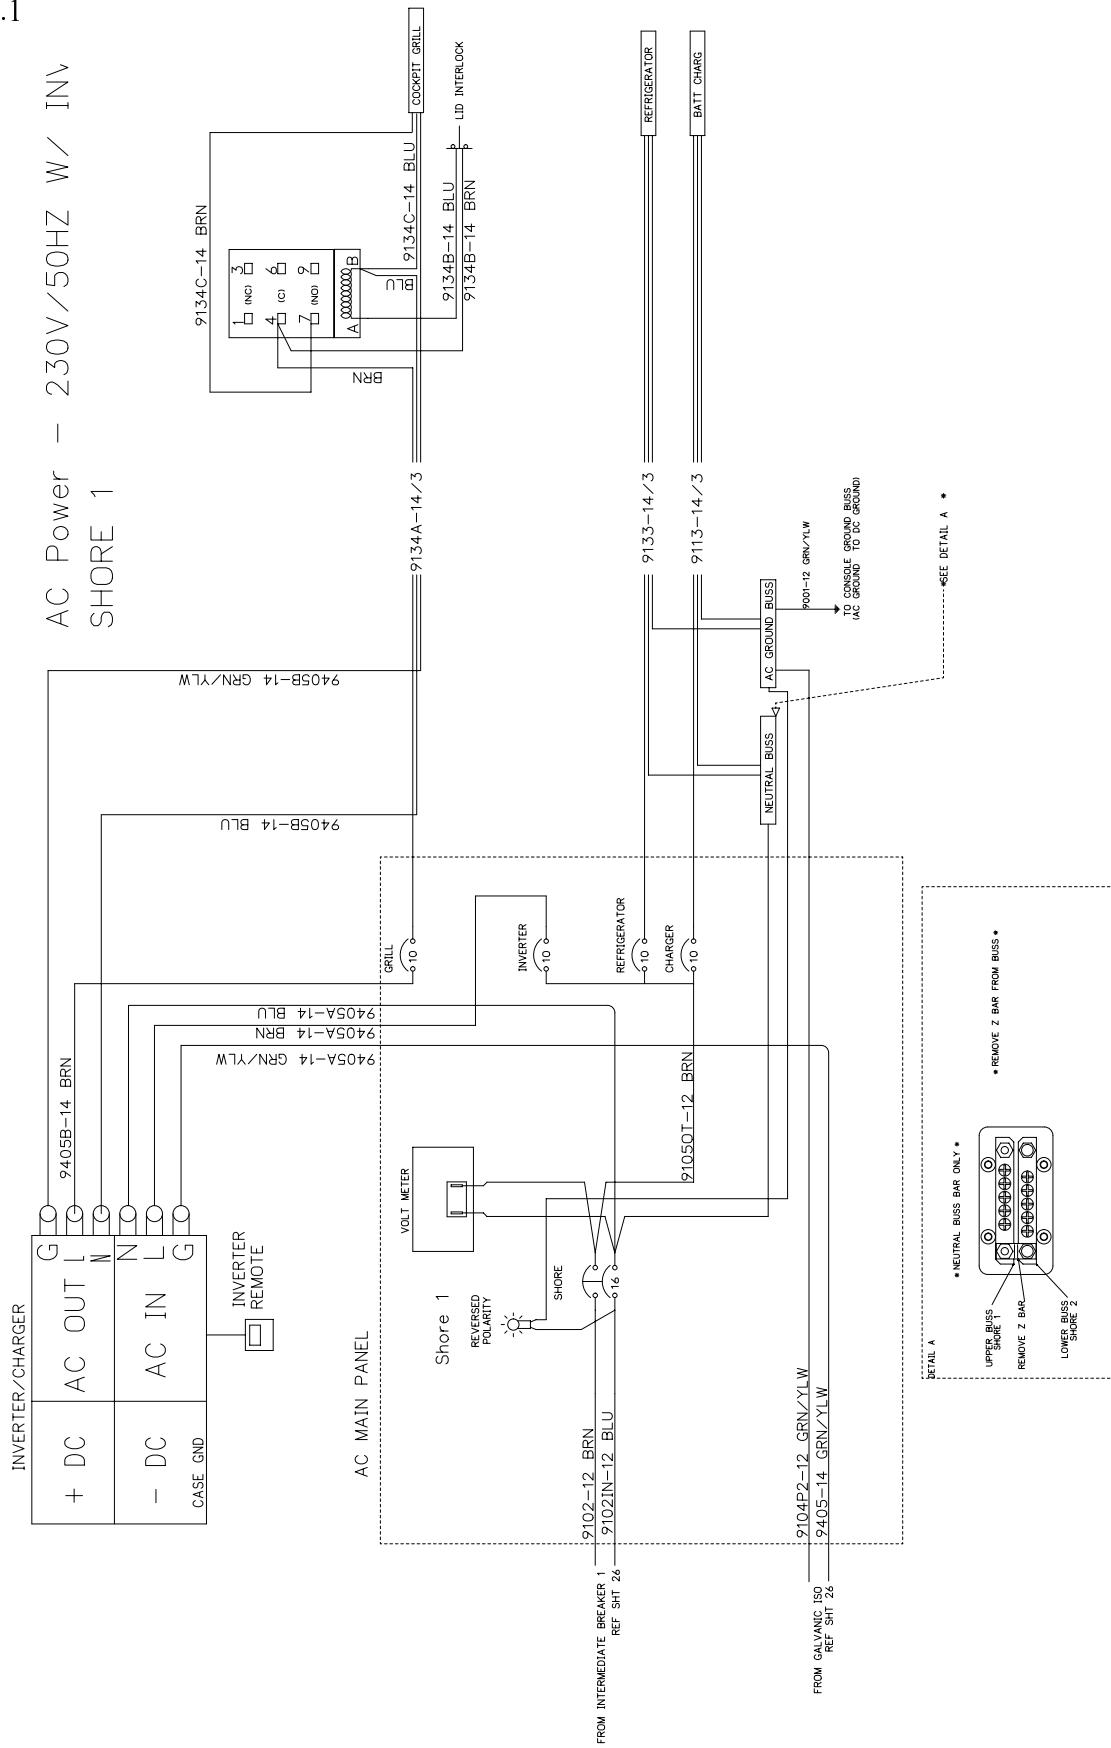

## Section 4 • Electrical System

## Batteries - Standard


Fig. 4.32.1

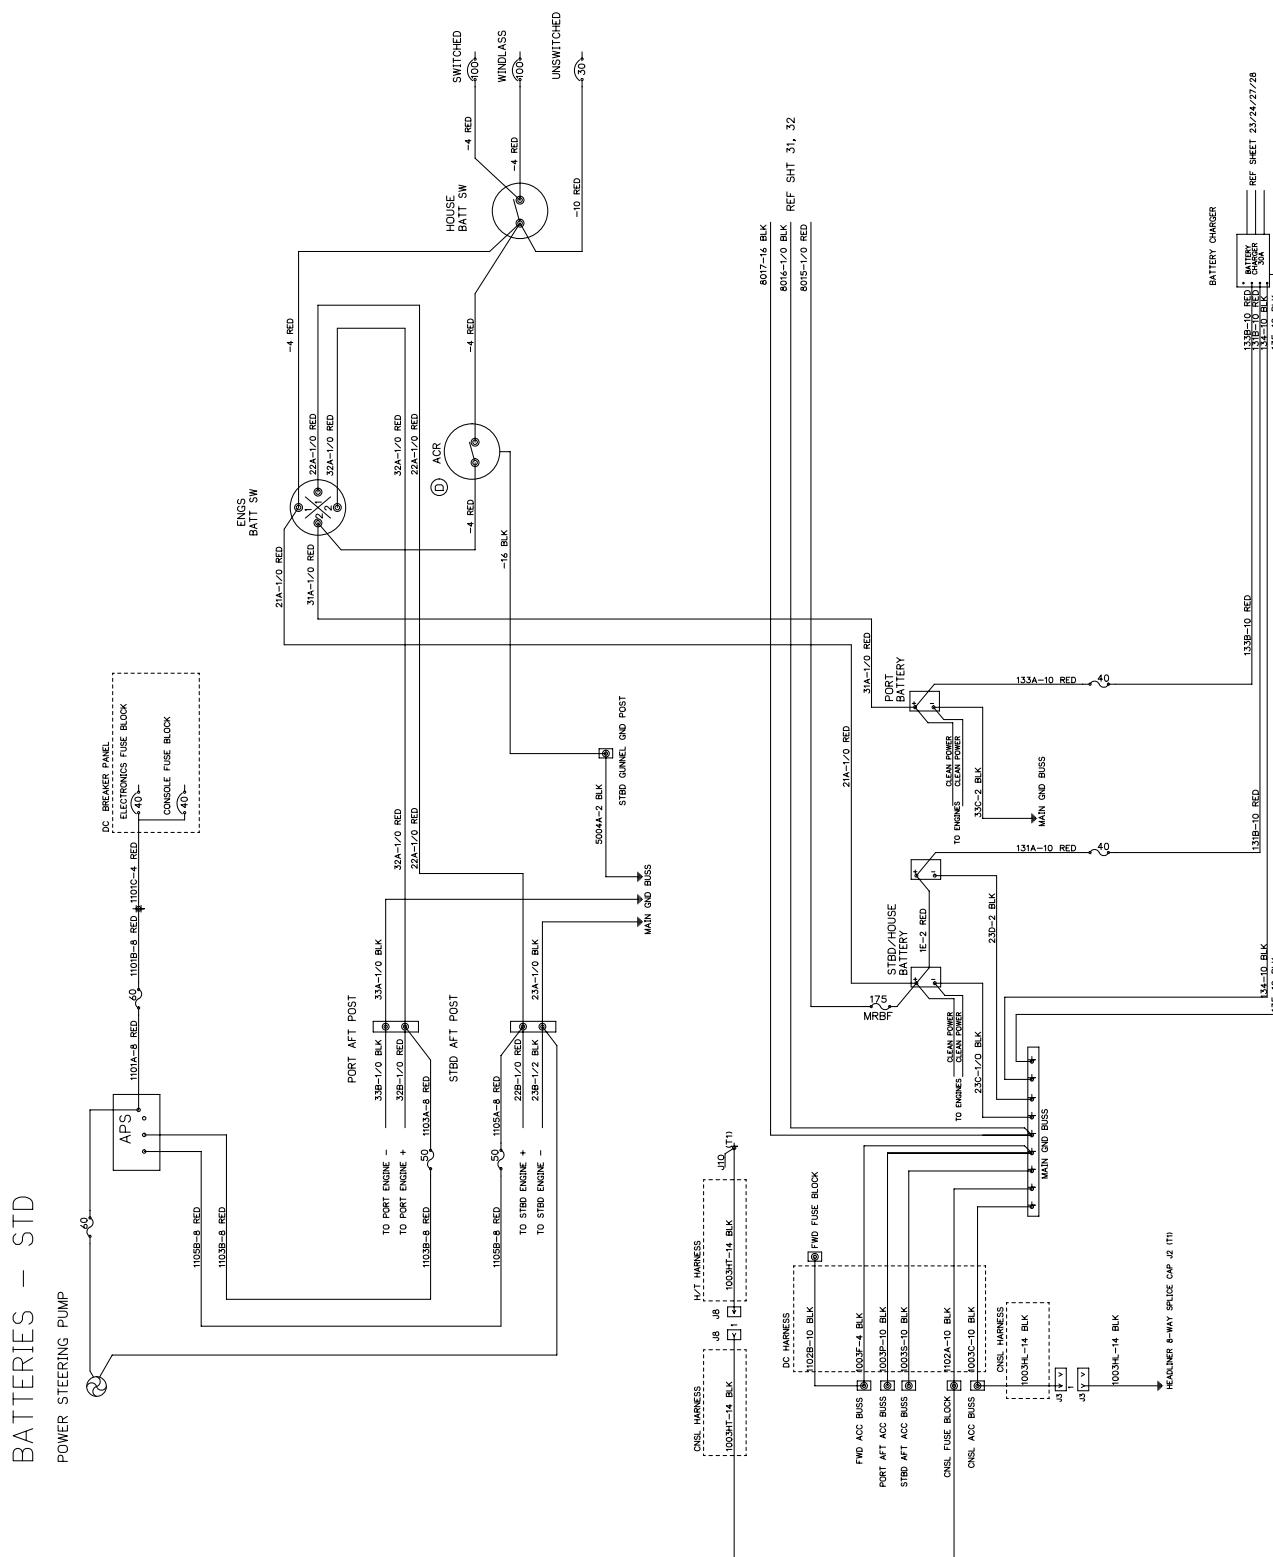

## Section 4 • Electrical System

Batteries - Joystick Steering (Option)  
Fig. 4.33.1

### BATTERIES - JOYSTICK STEERING

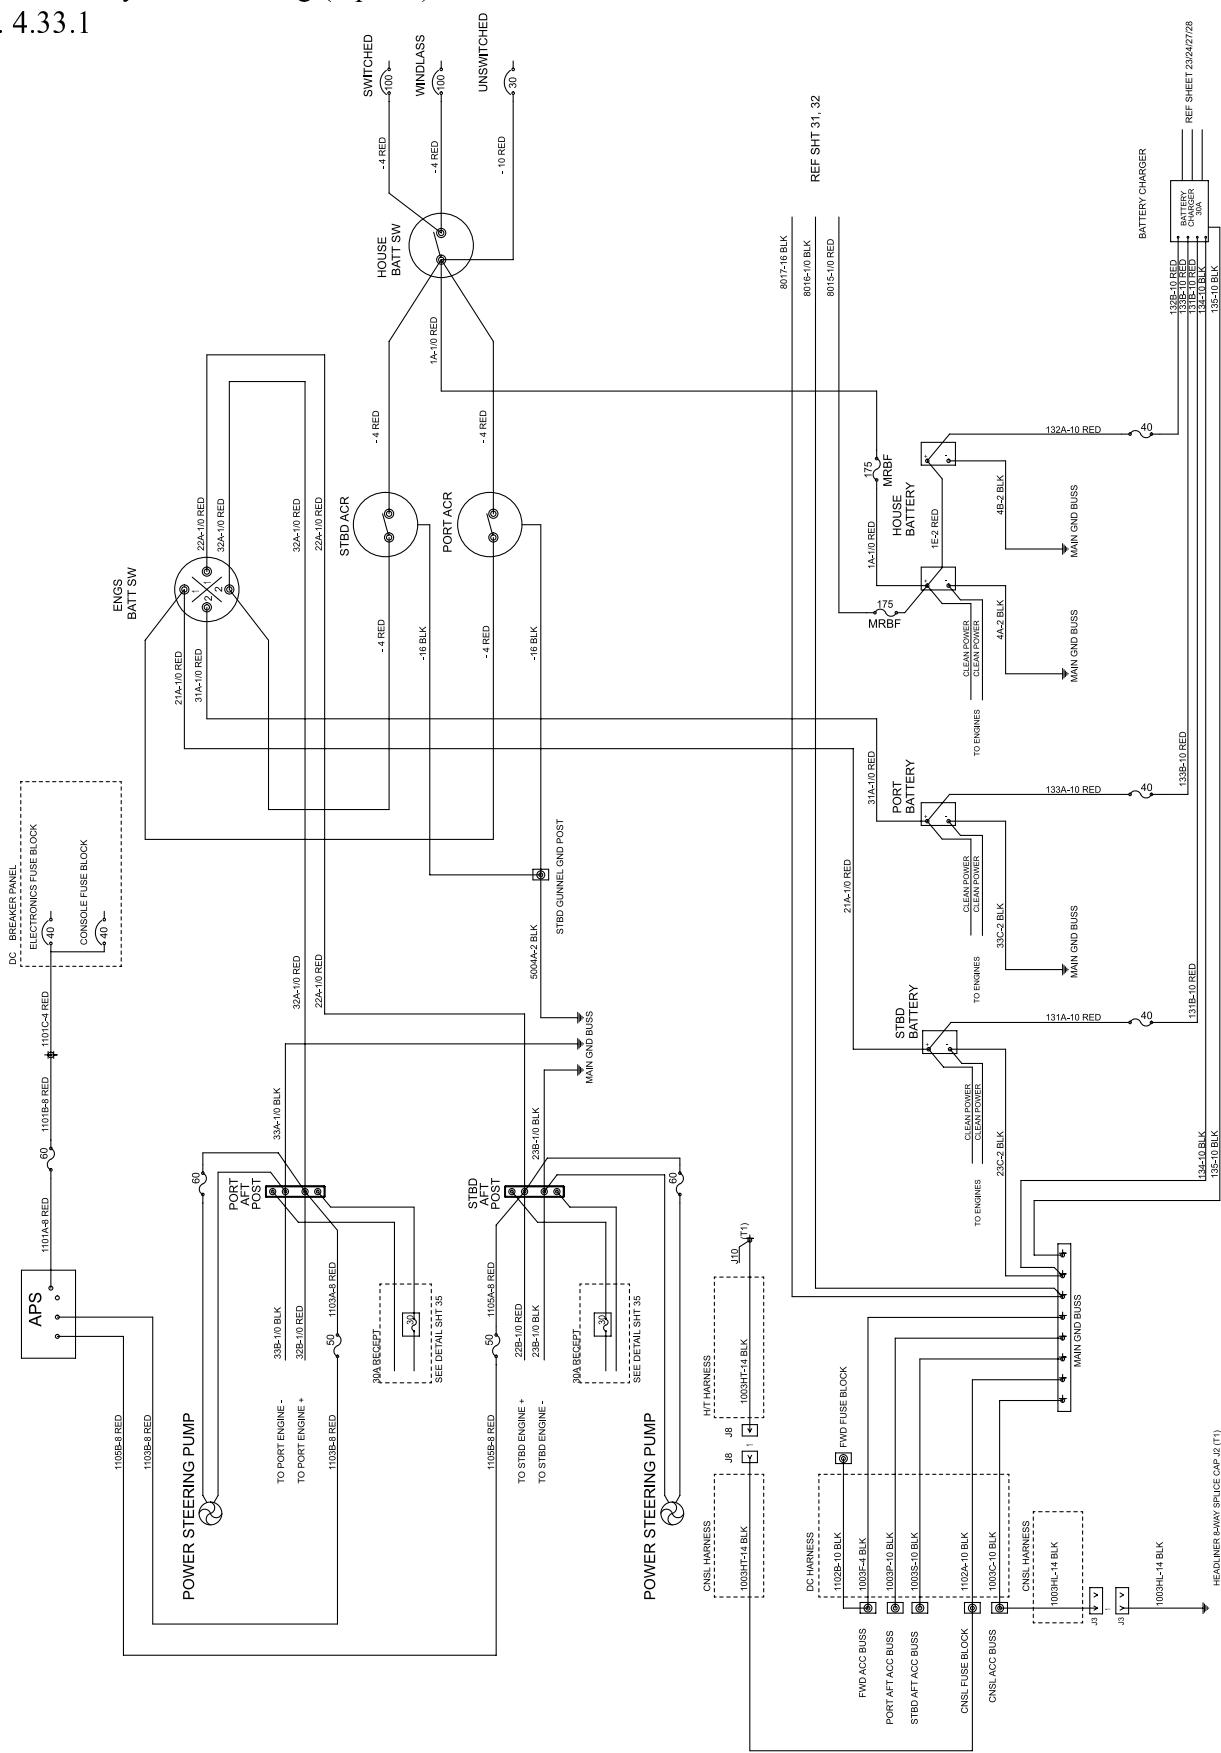


## Section 4 • Electrical System

DC Breaker Panel-Standard Steering

Fig. 4.34.1

### BREAKER PANEL STD STEERING

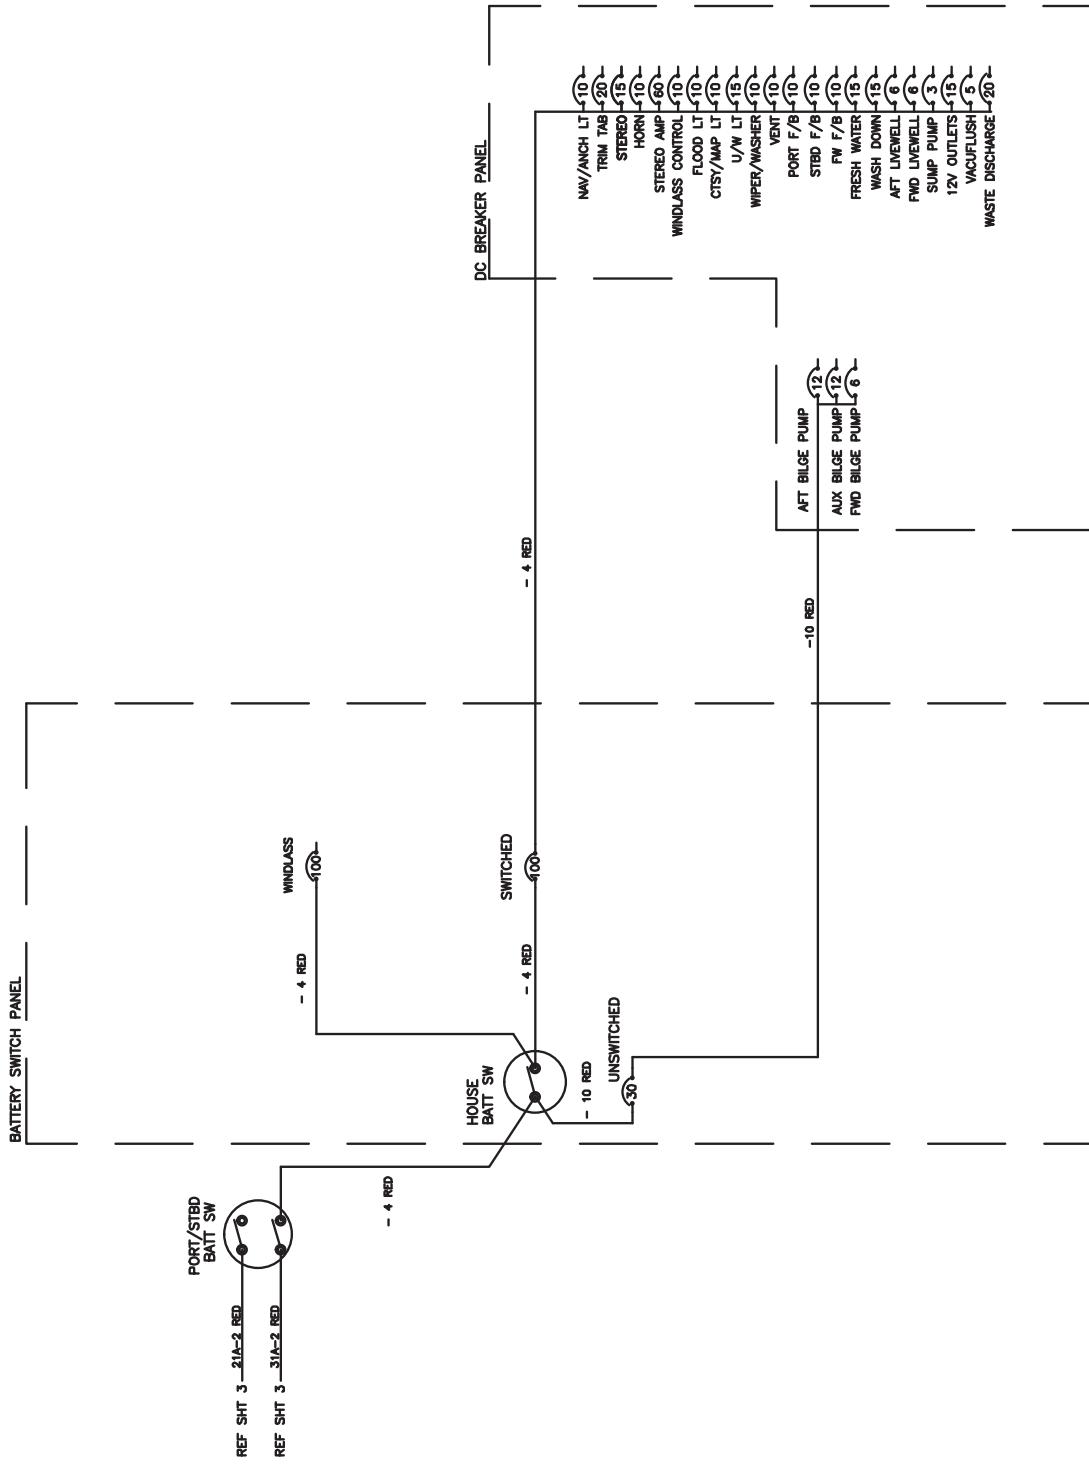


## **Section 4 • Electrical System**

## DC Breaker Panel\_ Joystick Steering (Option)

Fig. 4.35.1

BREAKER PANEL JOYSTICK STEERING

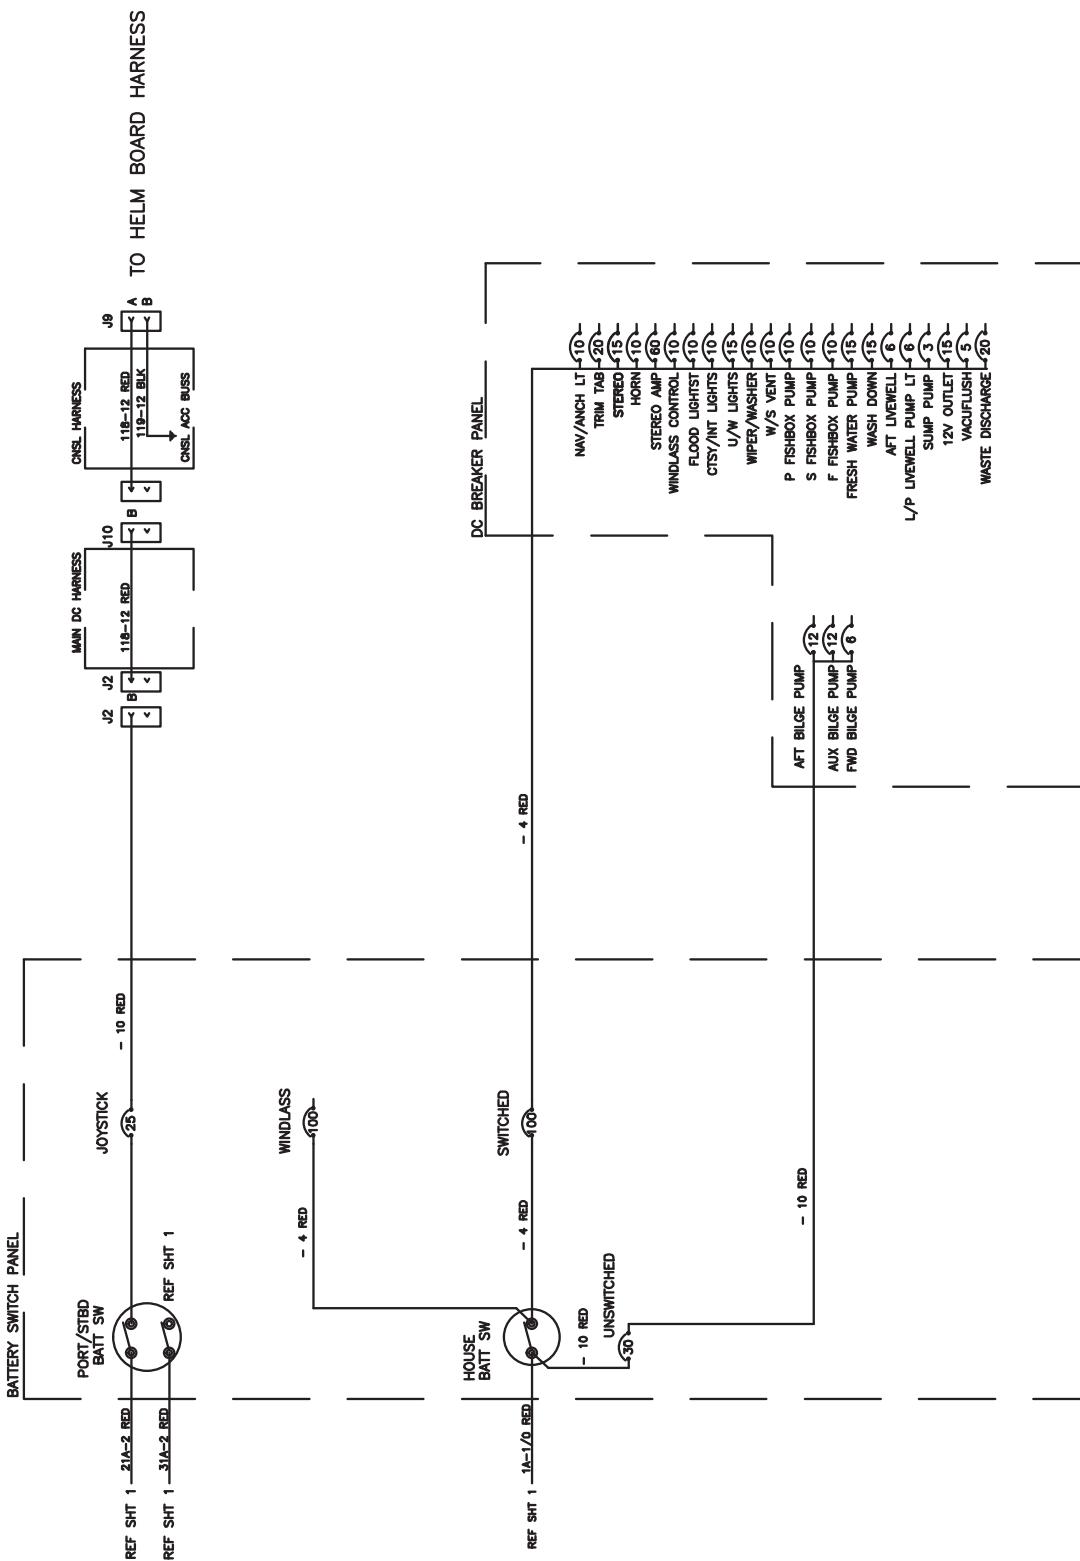


## Section 4 • Electrical System

Bow Thruster

Fig. 4.36.1

### BOW THRUSTER

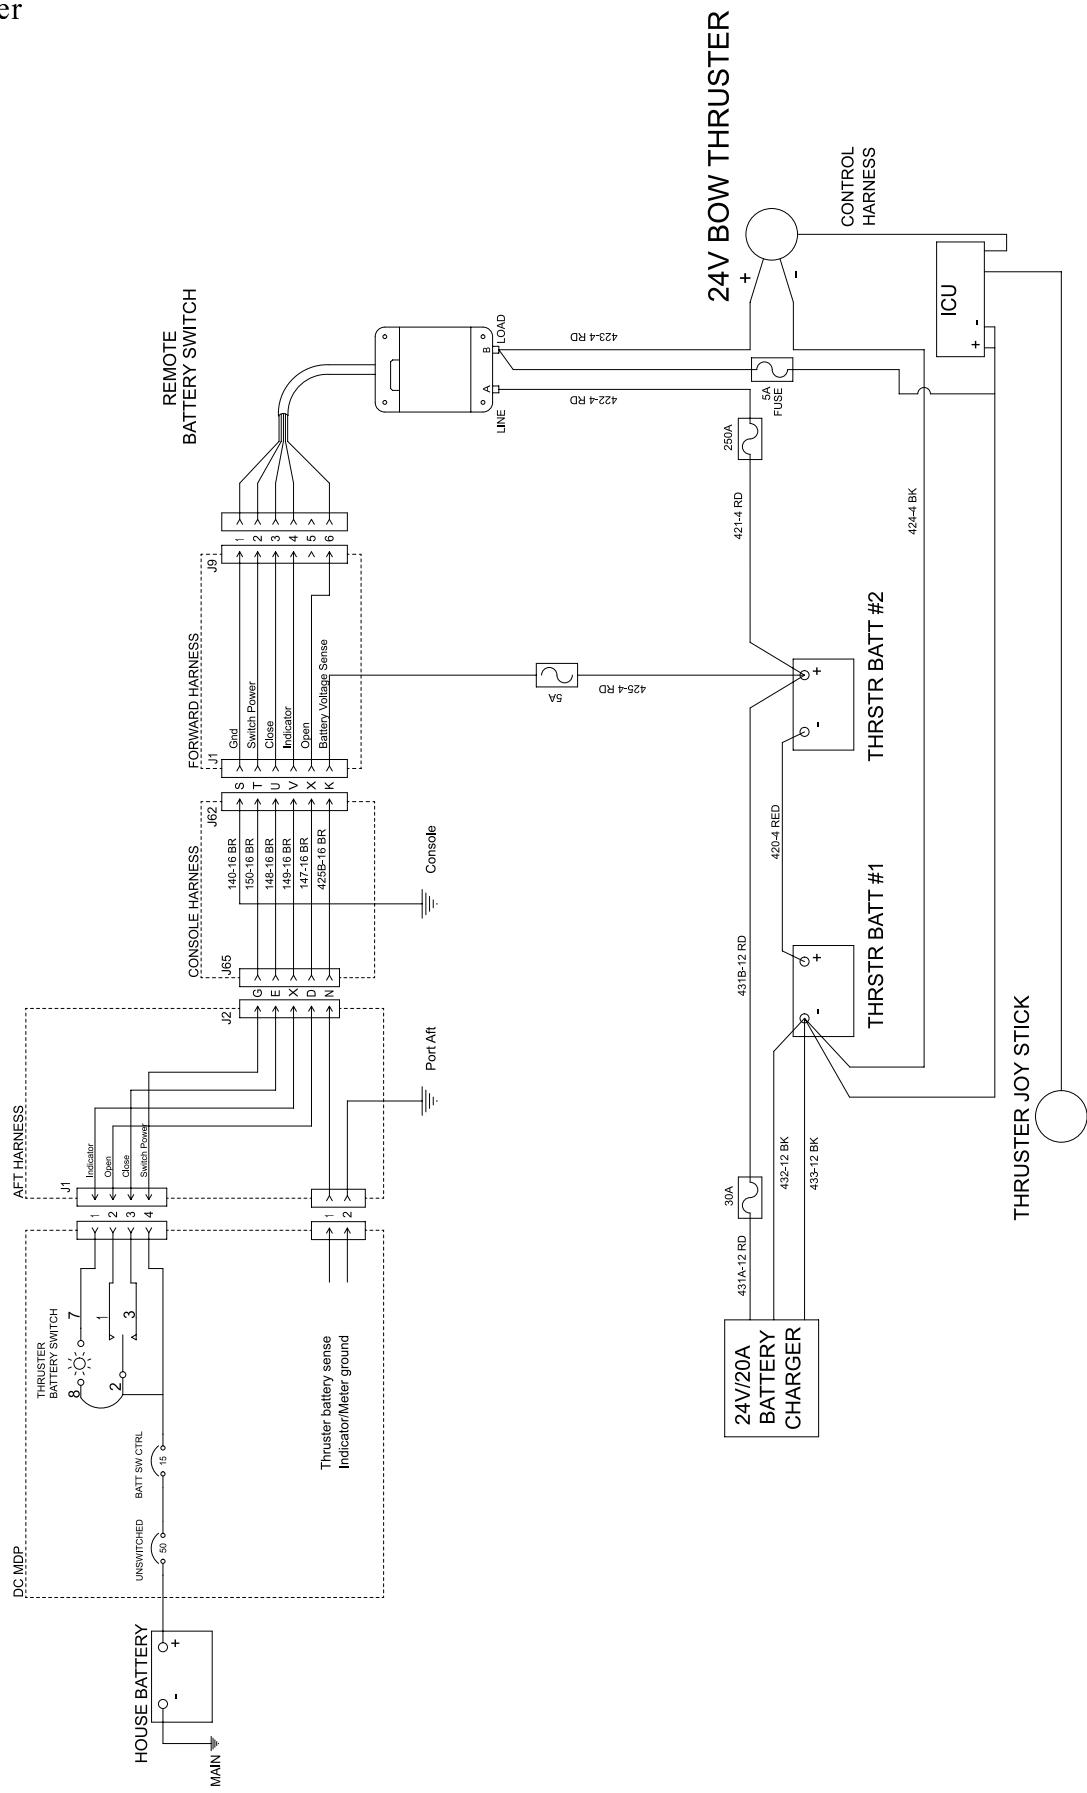


## Section 4 • Electrical System

Genset 120V

Fig. 4.37.1


### GENERATOR - 120V

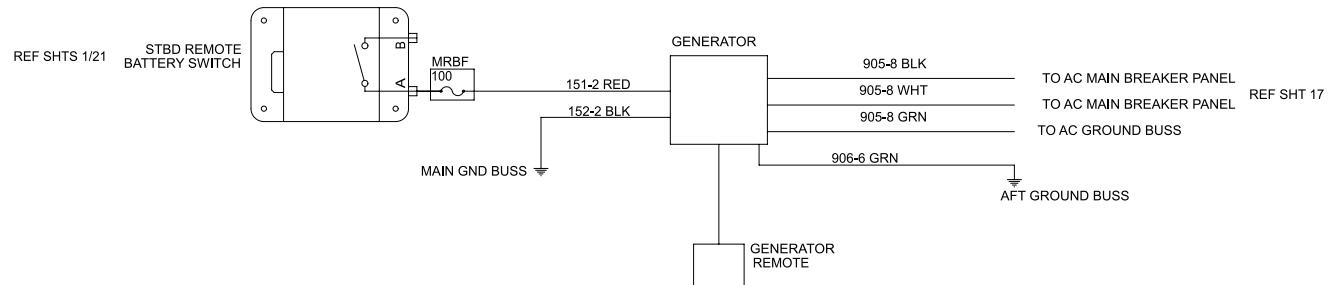

Genset 220V

Fig. 4.37.2


### GENERATOR - 220V

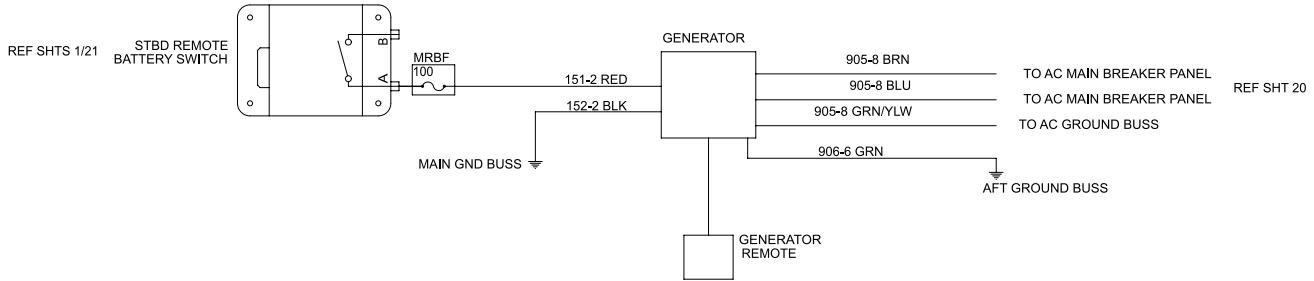

## **Section 4 • Electrical System**

## Batteries Standard boat


Fig. 4.38.1

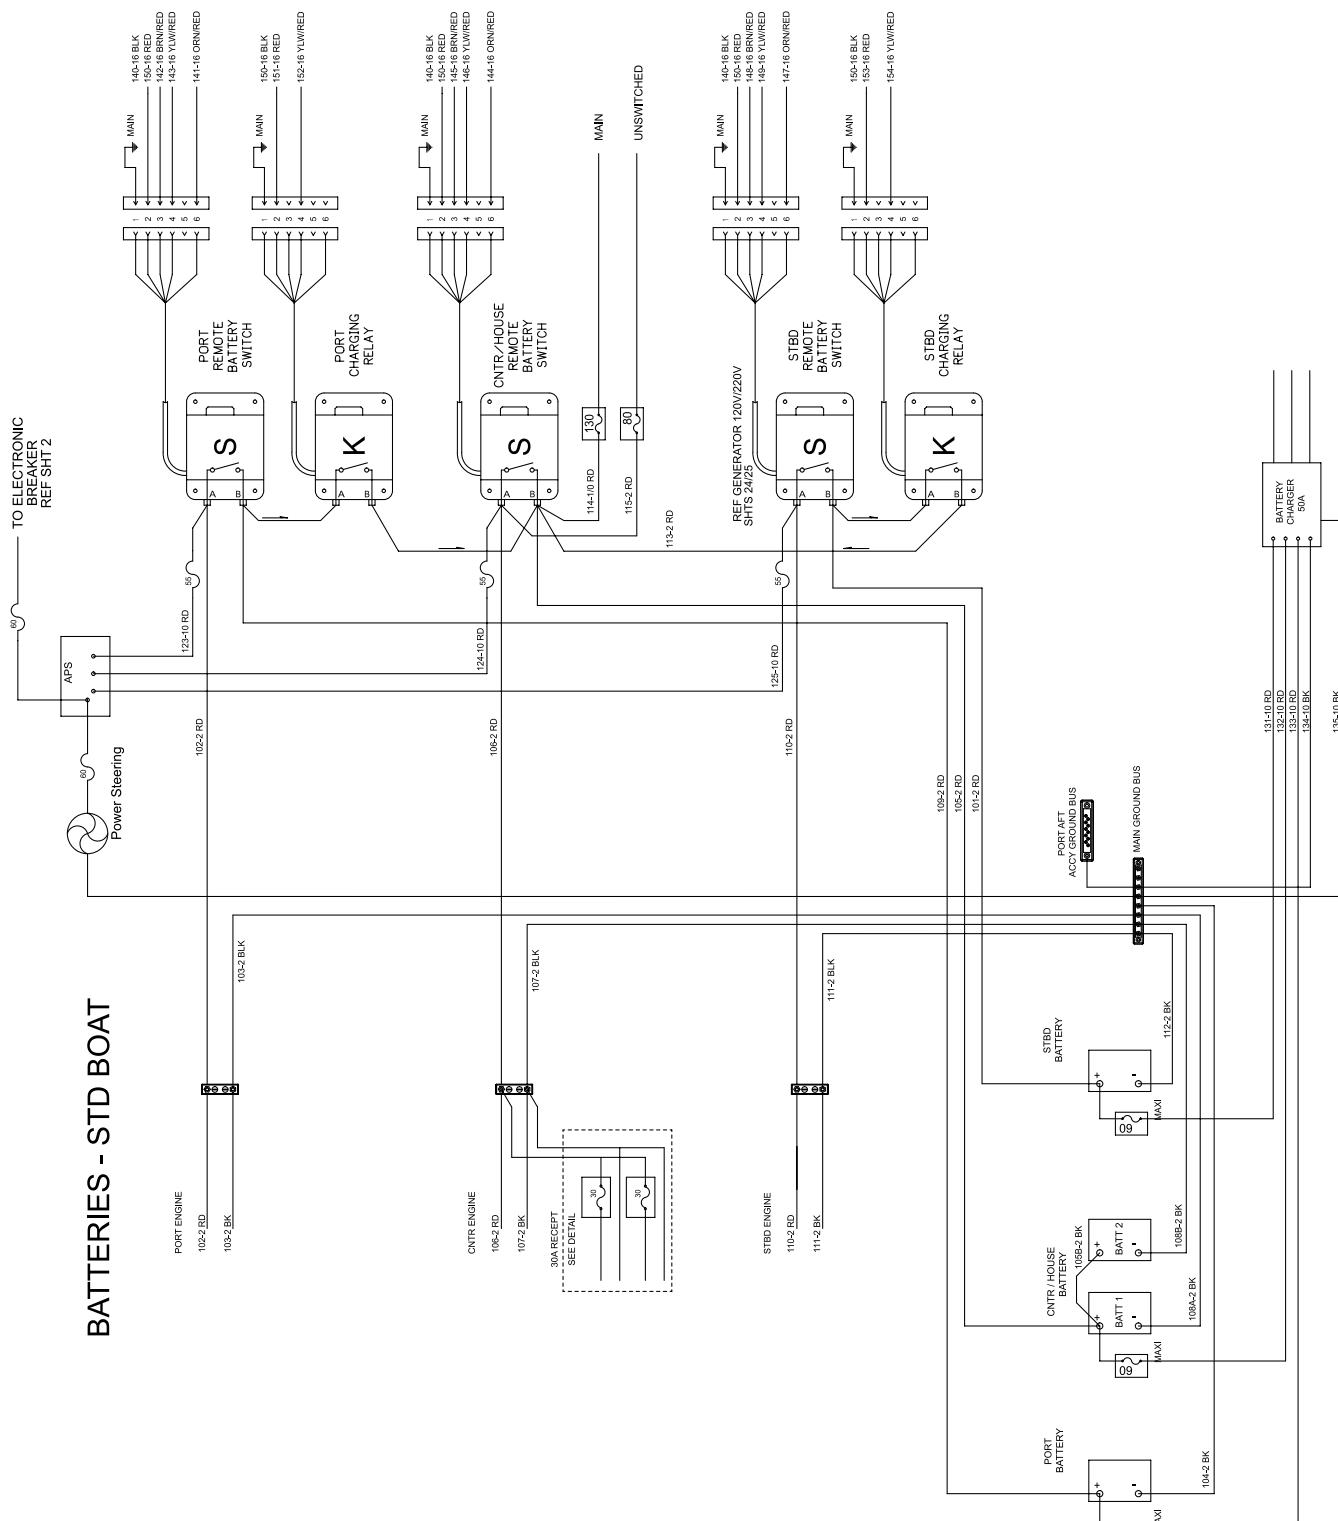

## Section 4 • Electrical System

Engine Flush System


Fig. 4.39.1

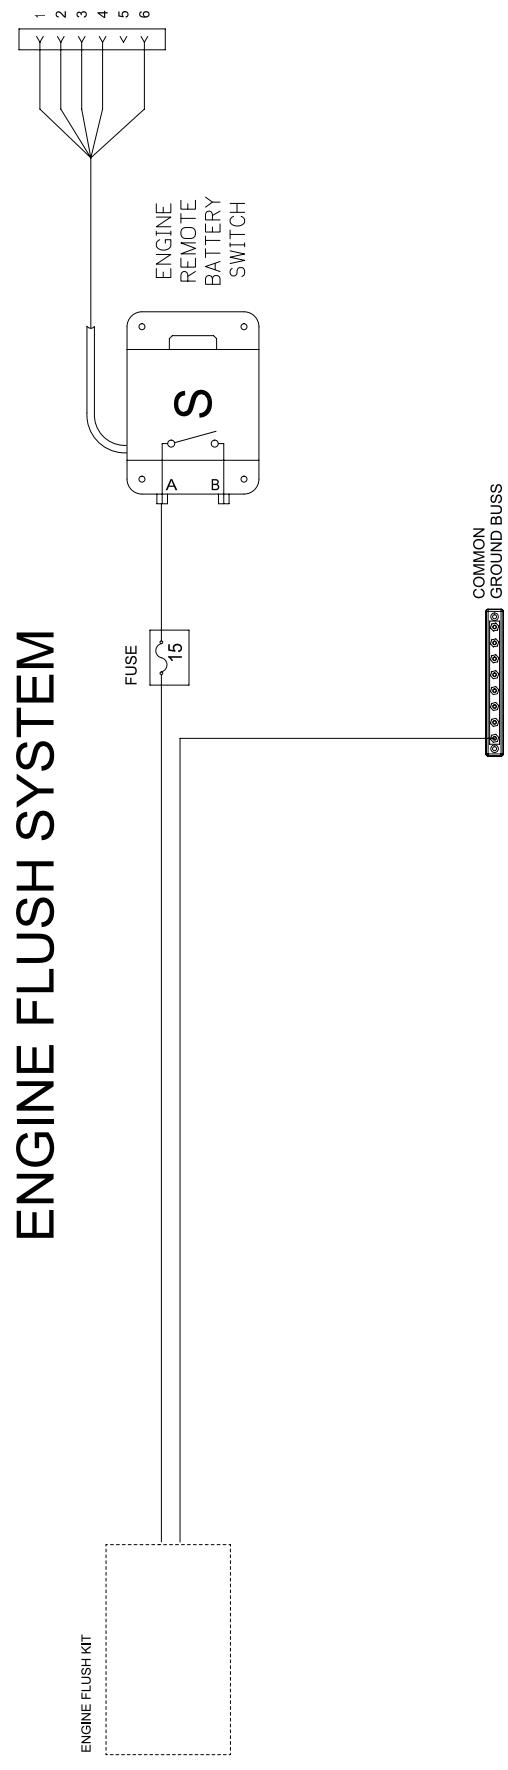

## Section 4 • Electrical System

Shore Power 1-120V/60HZ


Fig. 4.40.1

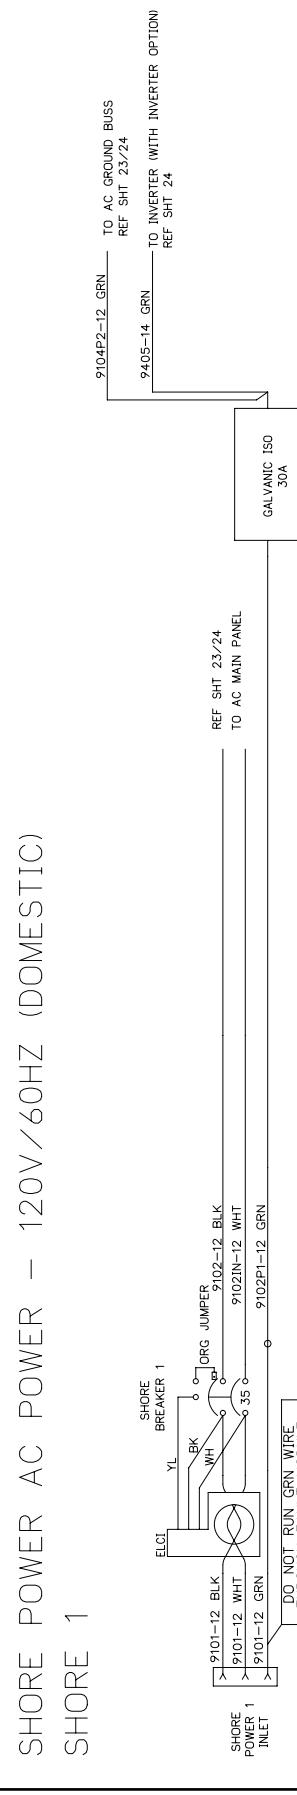

## Section 4 • Electrical System

Shore Power 1-230V/50HZ


Fig. 4.41.1

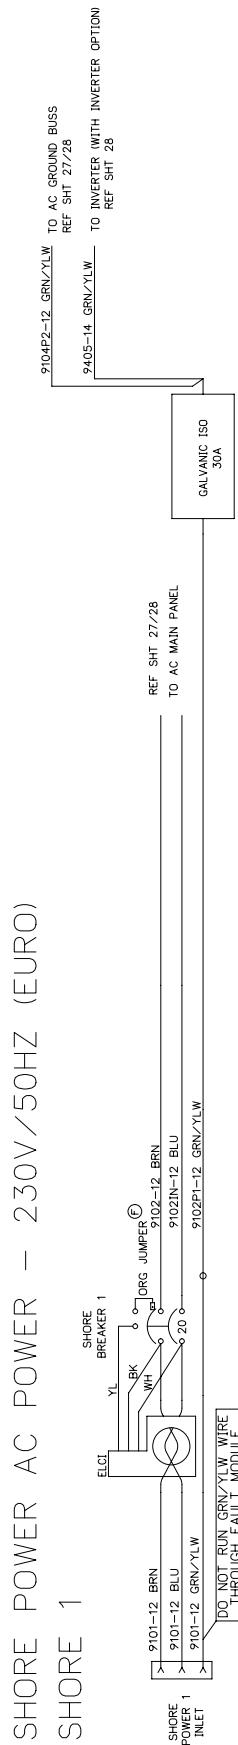

## Section 4 • Electrical System

Inverter/Shore power 2  
Fig. 4.42.1


### INVERTER/SHORE 2 120V/60HZ (DOMESTIC)

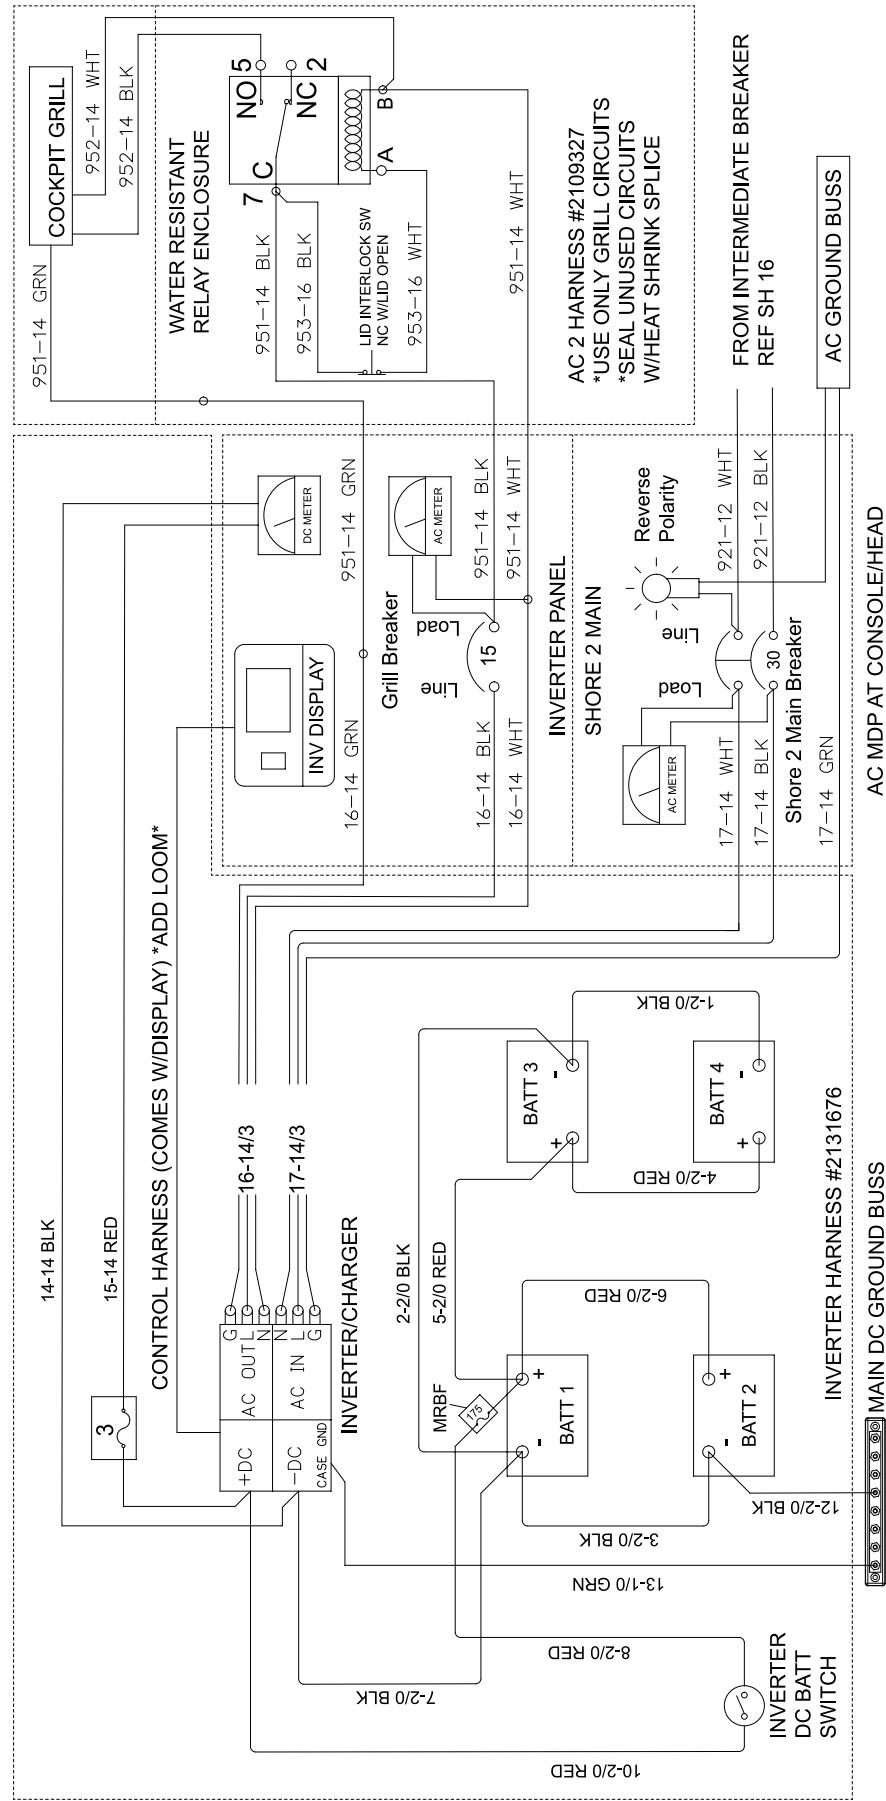

## Section 4 • Electrical System

Pumps 1  
Fig. 4.43.1


### PUMPS 1

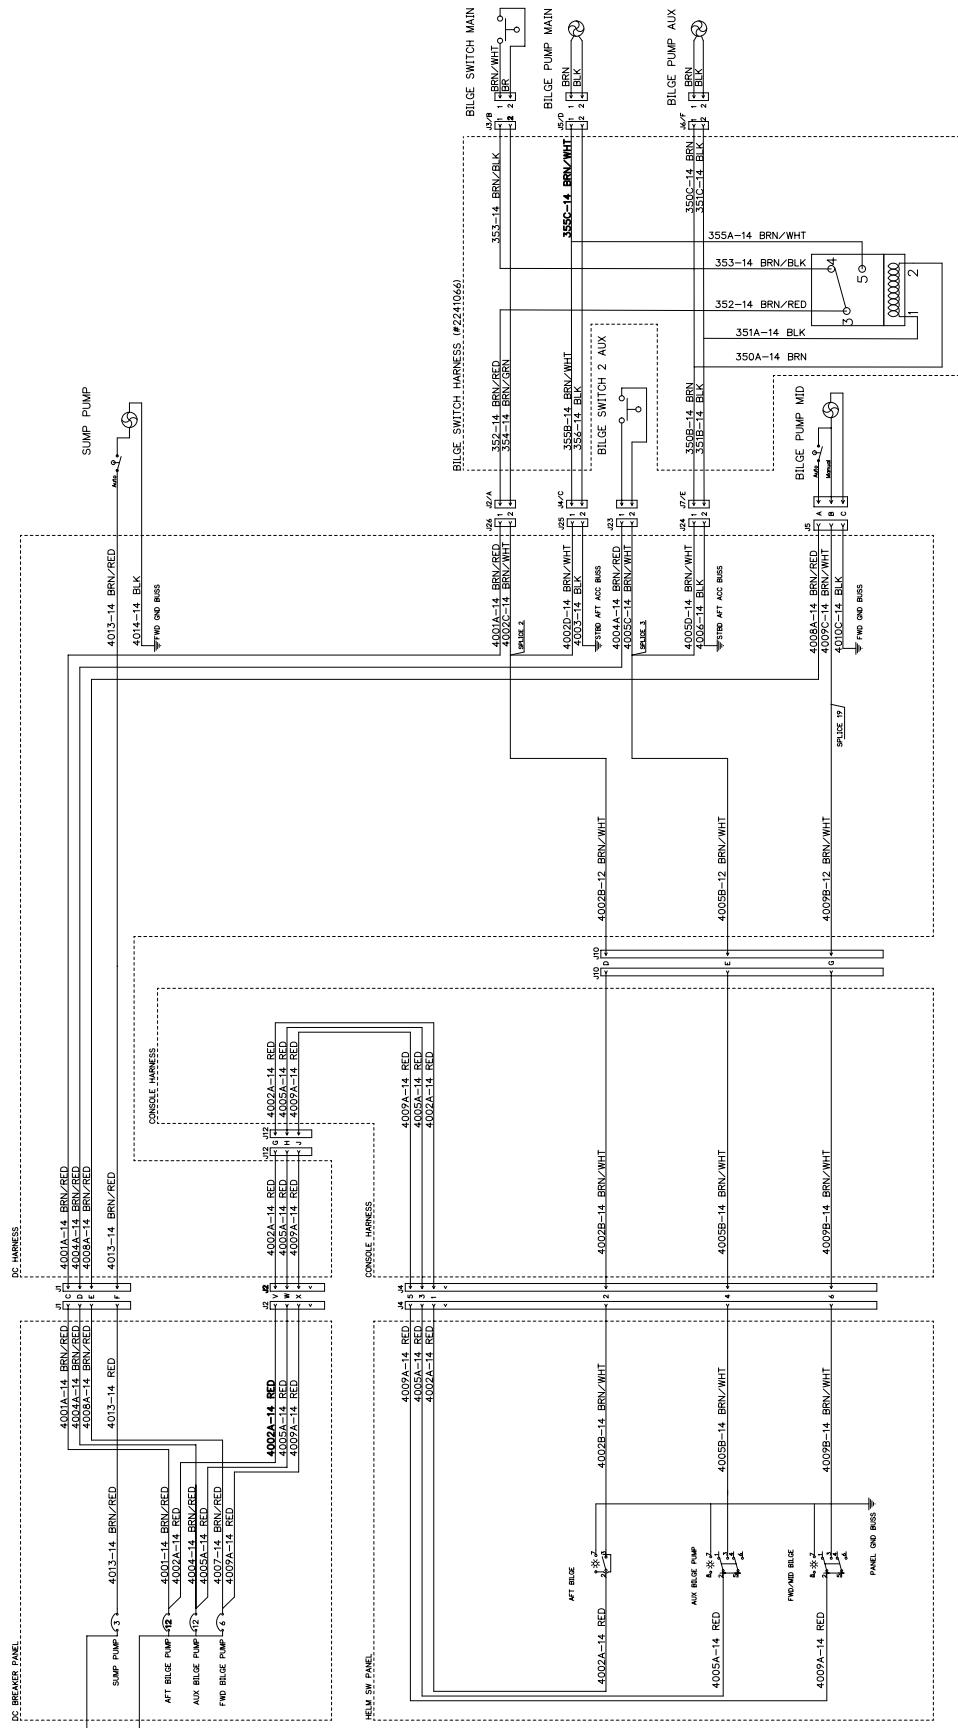

## Section 4 • Electrical System

## Pumps 2


Fig. 4.44.1

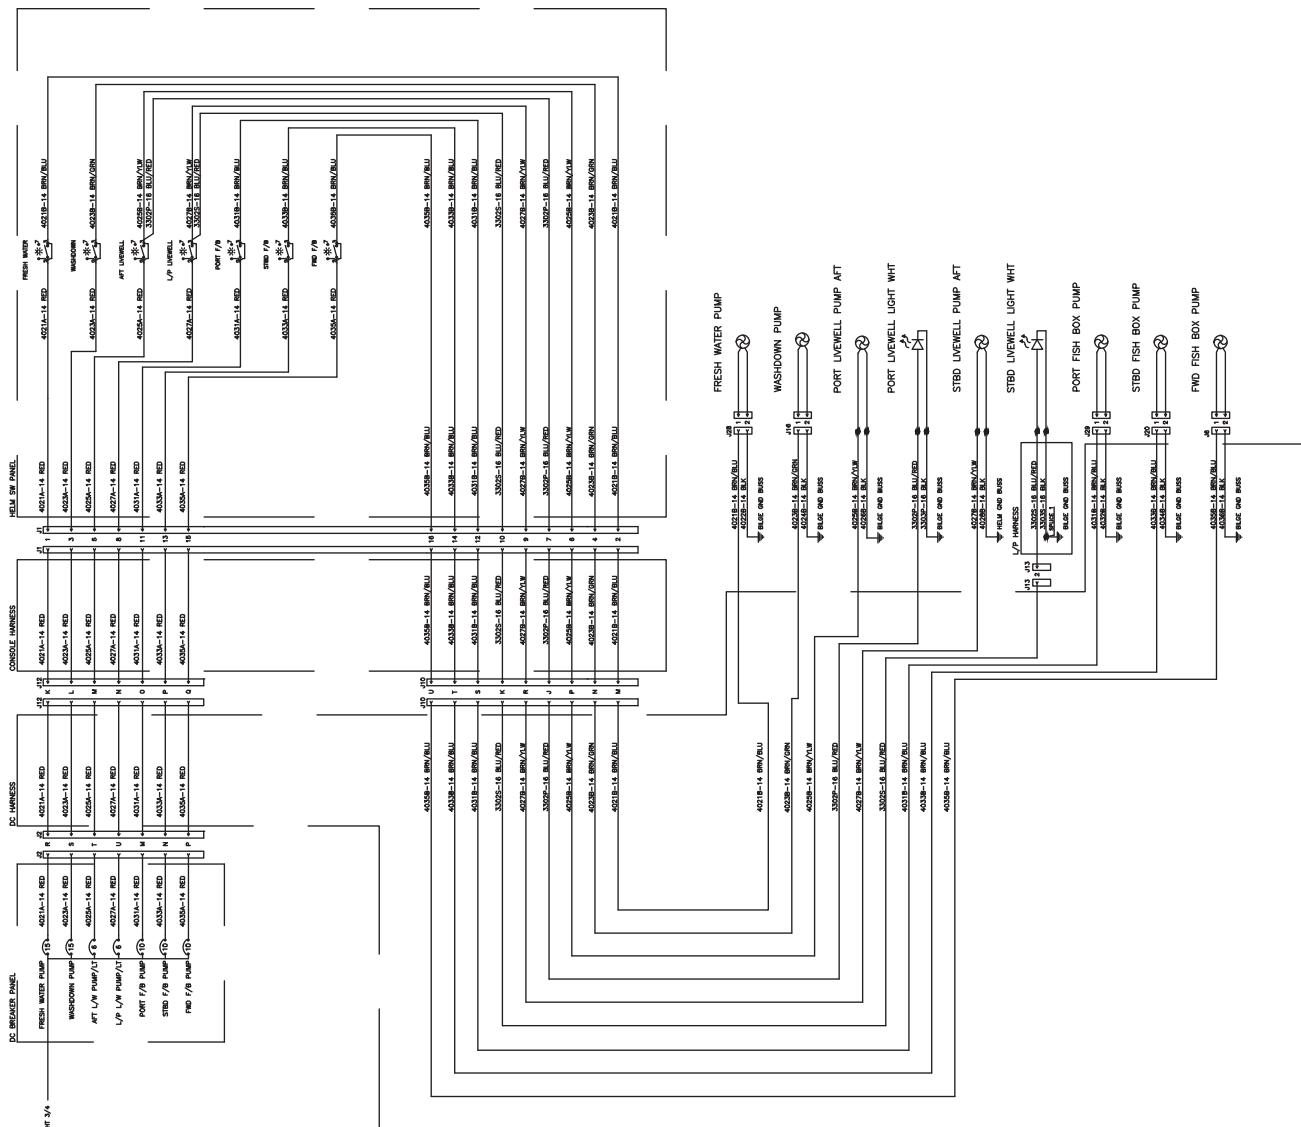

## **Section 4 • Electrical System**

## Helm Switch

Fig. 4.45.1

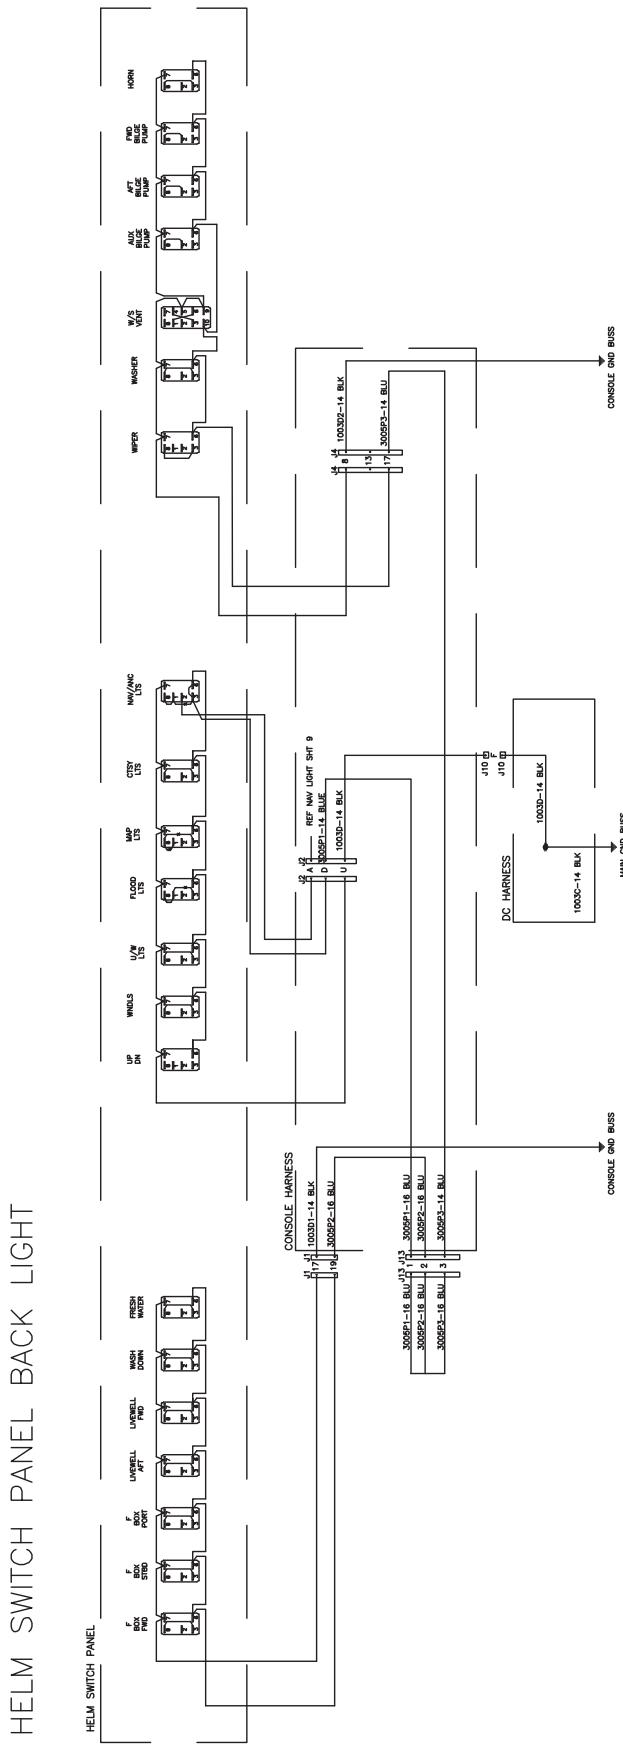


## Section 4 • Electrical System


Courtesy Lights

Fig. 4.46.1

### STBD DECK CTSY LIGHT

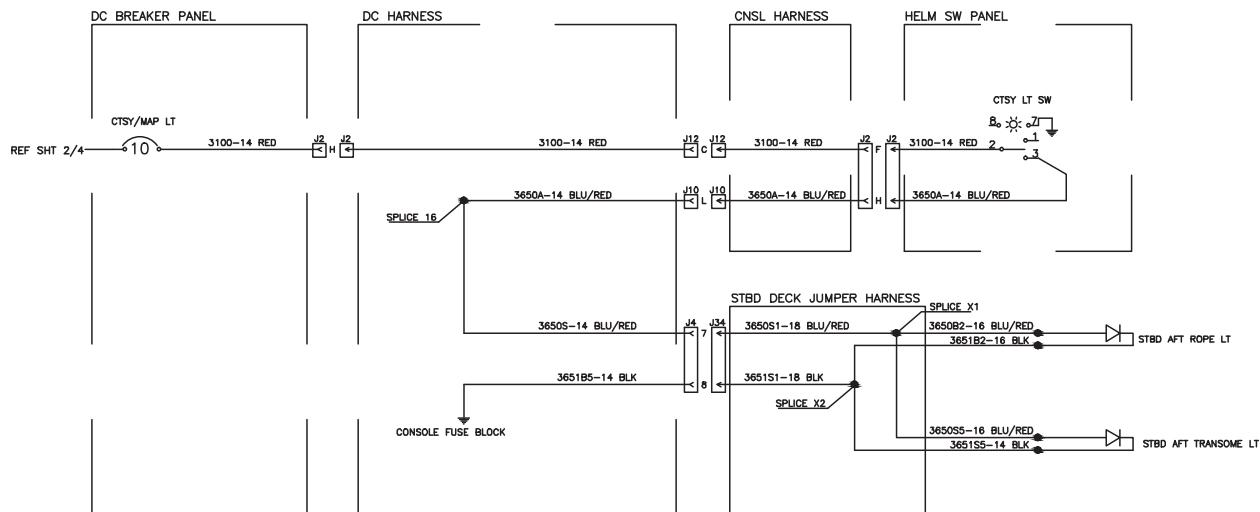

### BILGE CTSY LIGHT

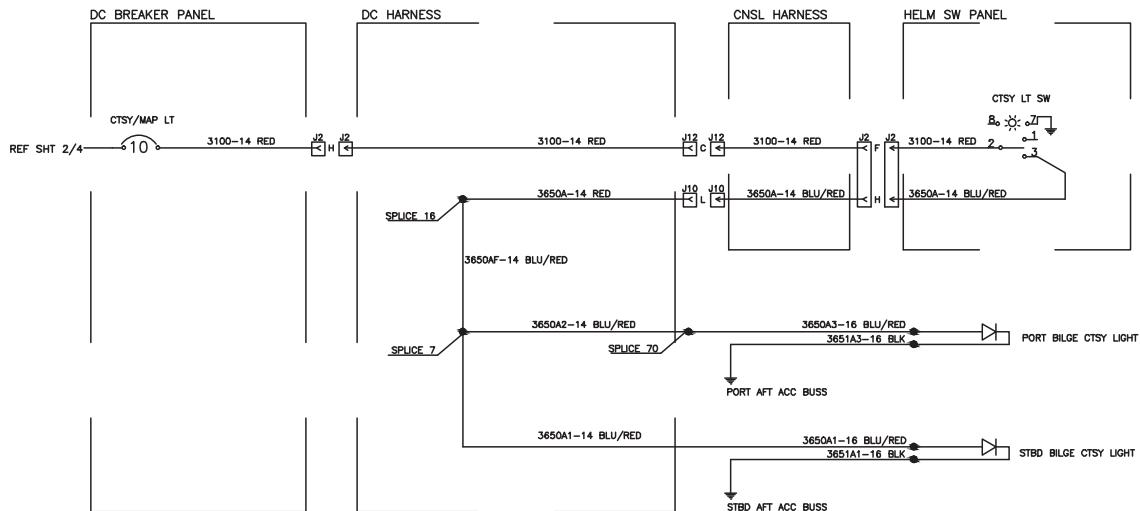


## **Section 4 • Electrical System**


#### Courtesy Lights (Cont'd)

Fig. 4.47.1

PORT DECK CTSY LIGHT

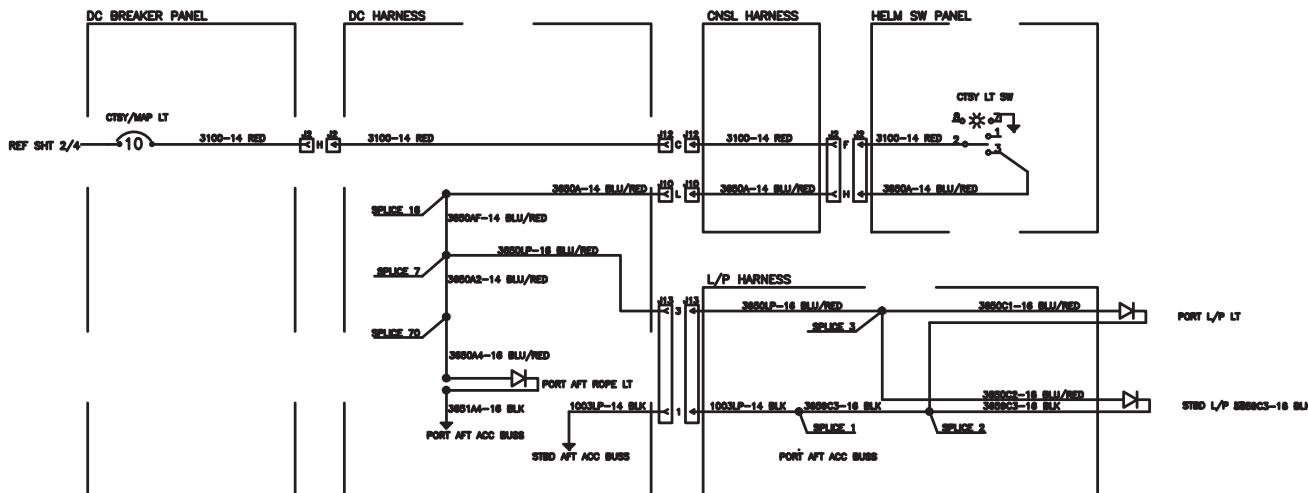


GARAGE CTSY LIGHT & GARAGE DECK CTSY LIGHT

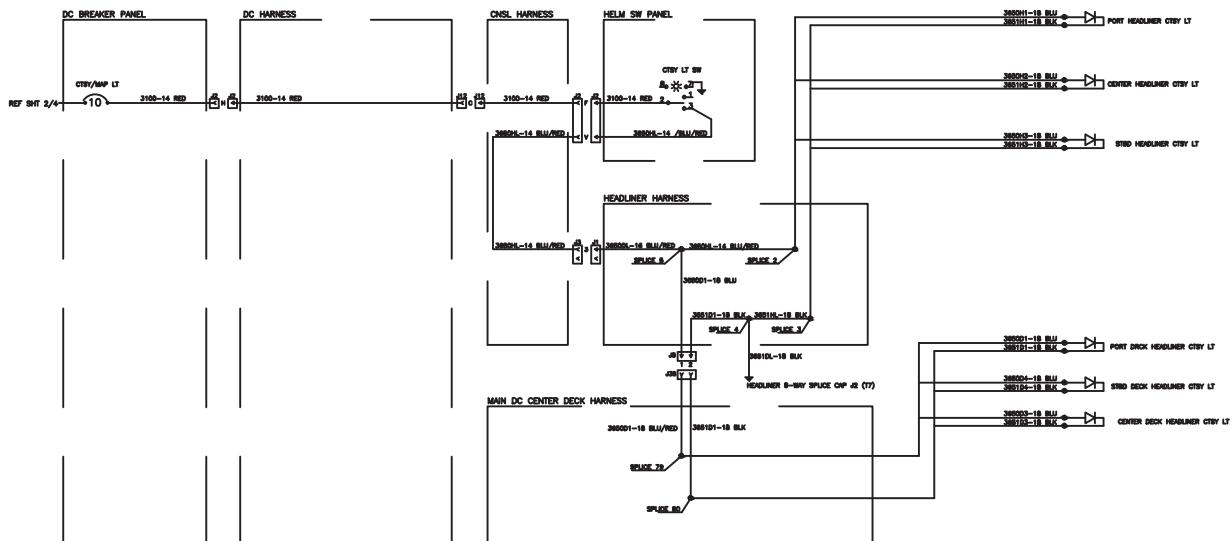

## Section 4 • Electrical System

## Hardtop Lighting

Fig. 4.48.1

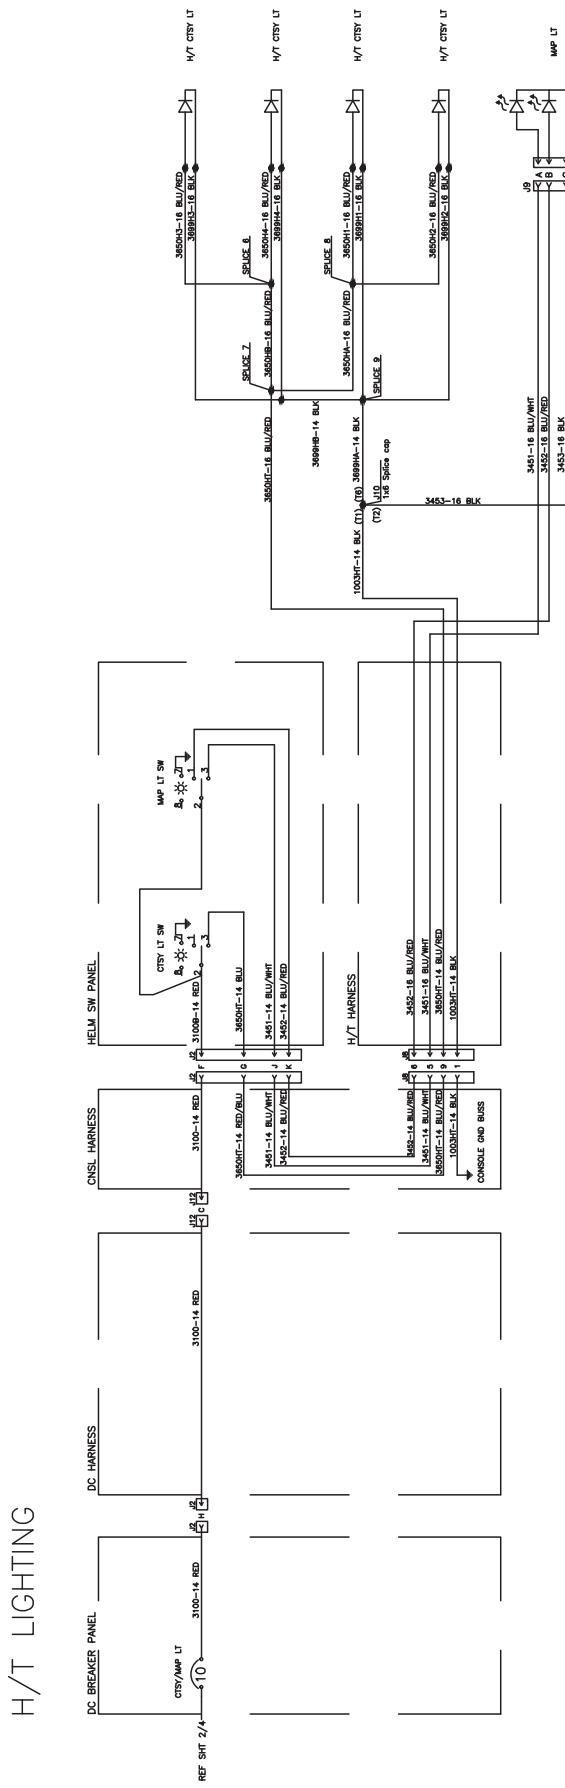


## Section 4 • Electrical System


### Lighting

Fig. 4.49.1

#### NAV LIGHTING

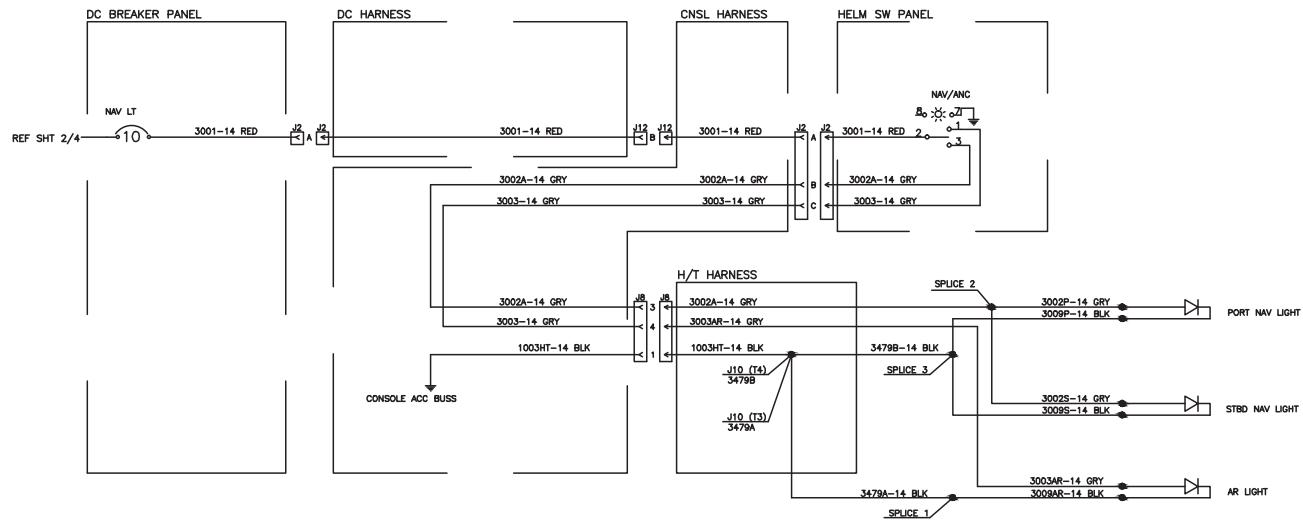


#### FLOOD LIGHTING

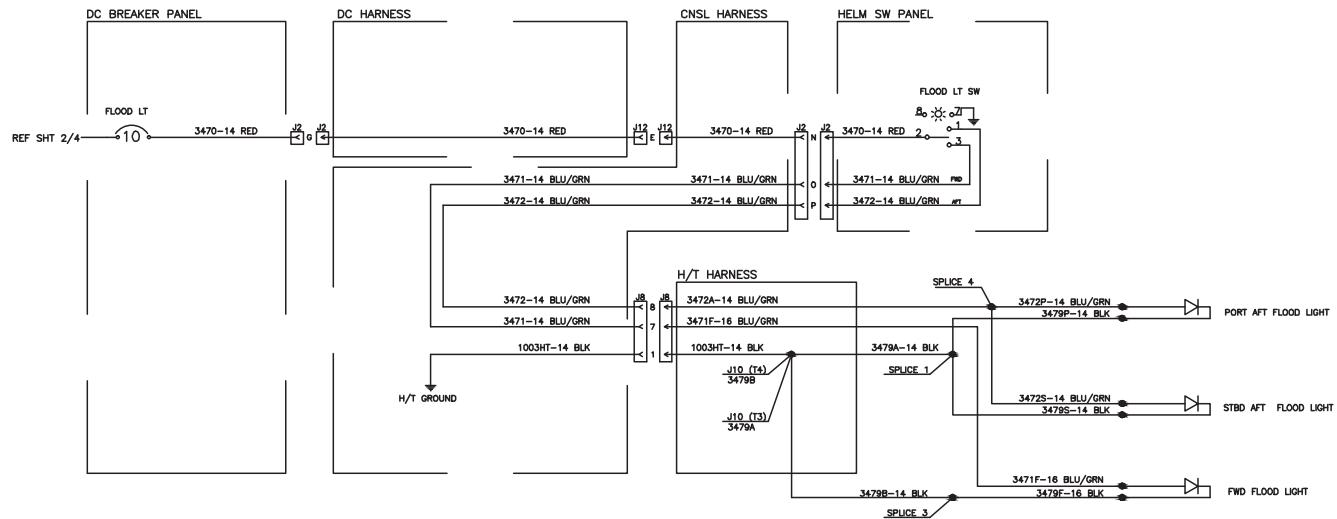

## Section 4 • Electrical System


Trim Tabs  
Fig. 4.50.1

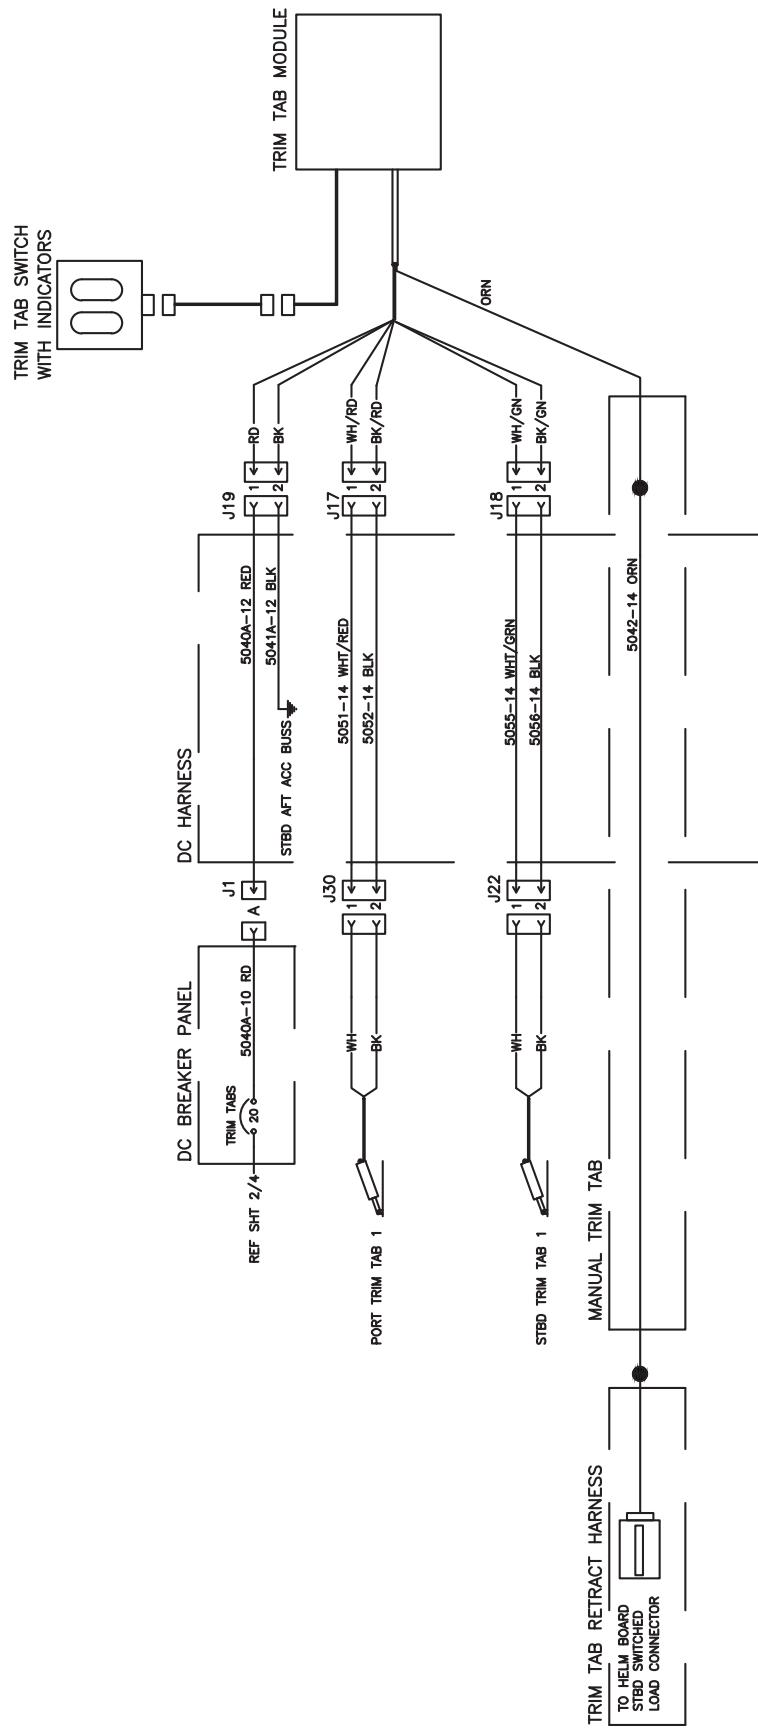

## Section 4 • Electrical System


Windlass

Fig. 4.51.1

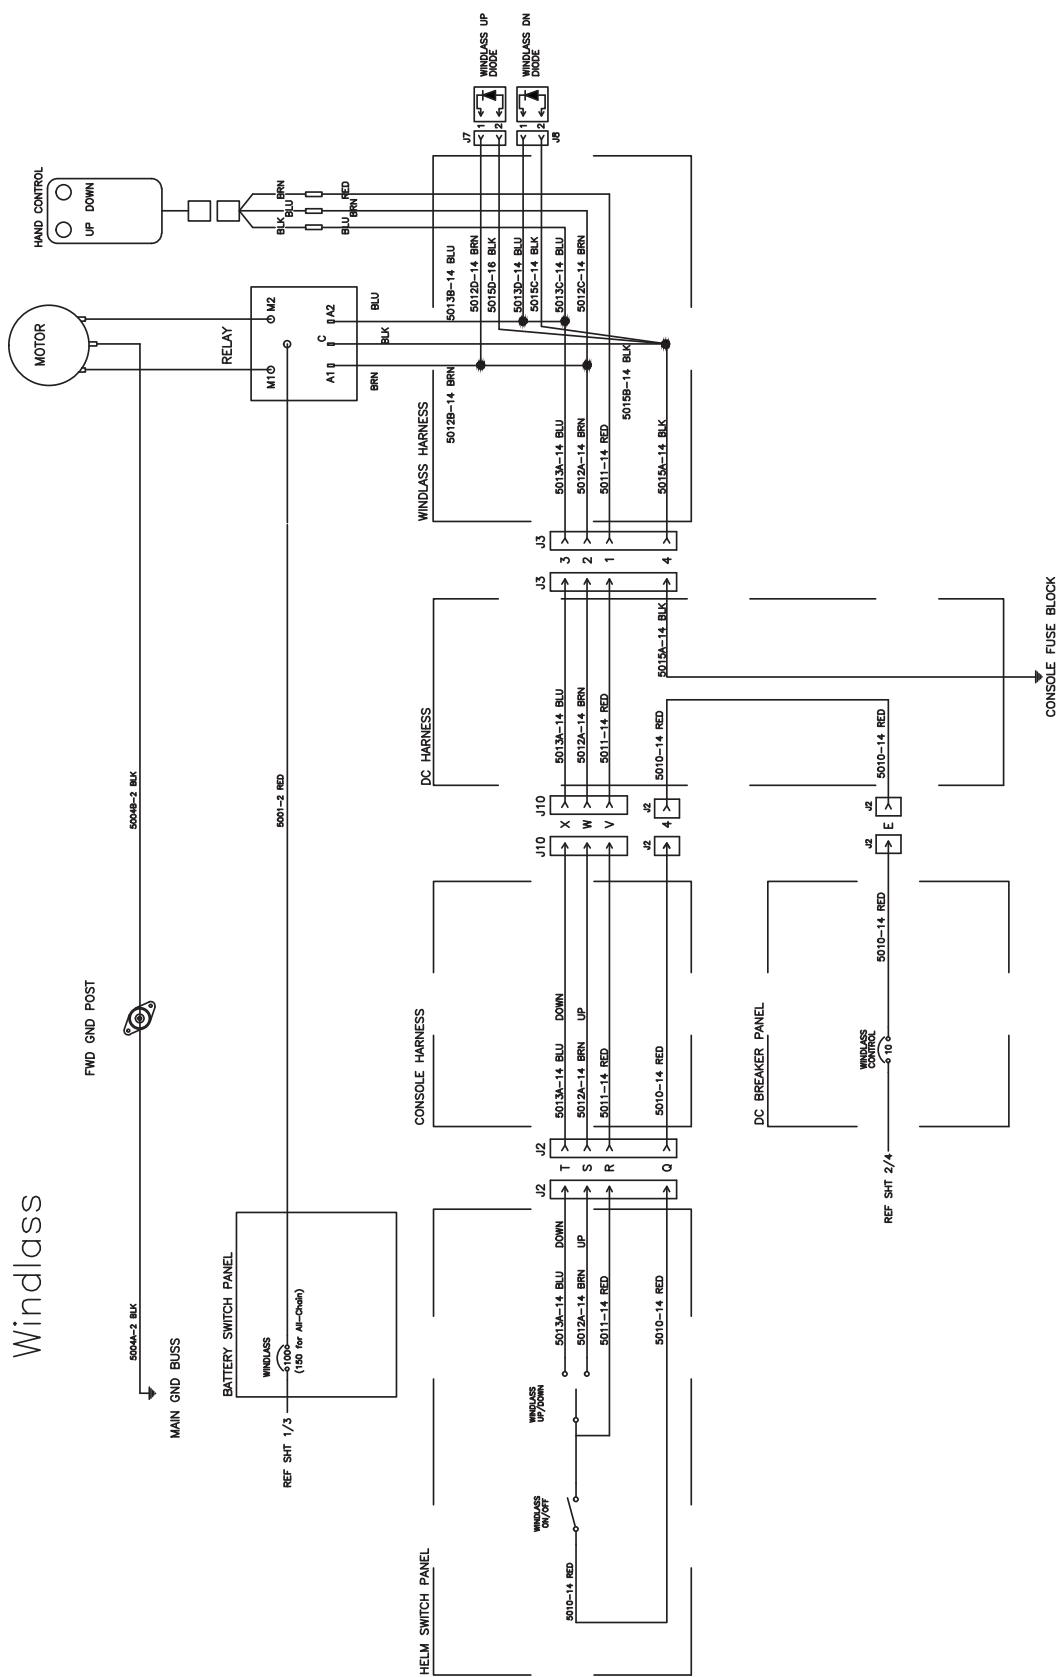

## Section 4 • Electrical System


Bow Thruster  
Fig. 4.52.1

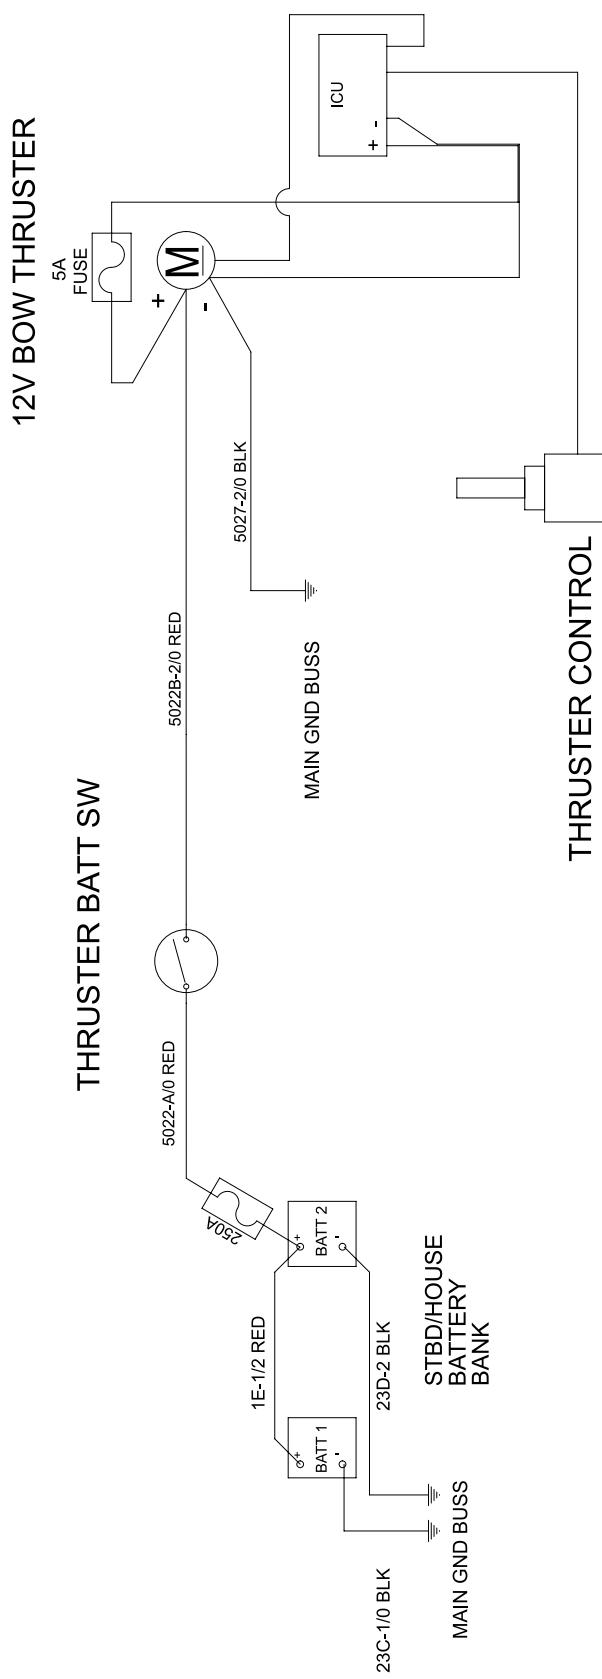

## **Section 4 • Electrical System**

## Audio


Fig. 4.53.1

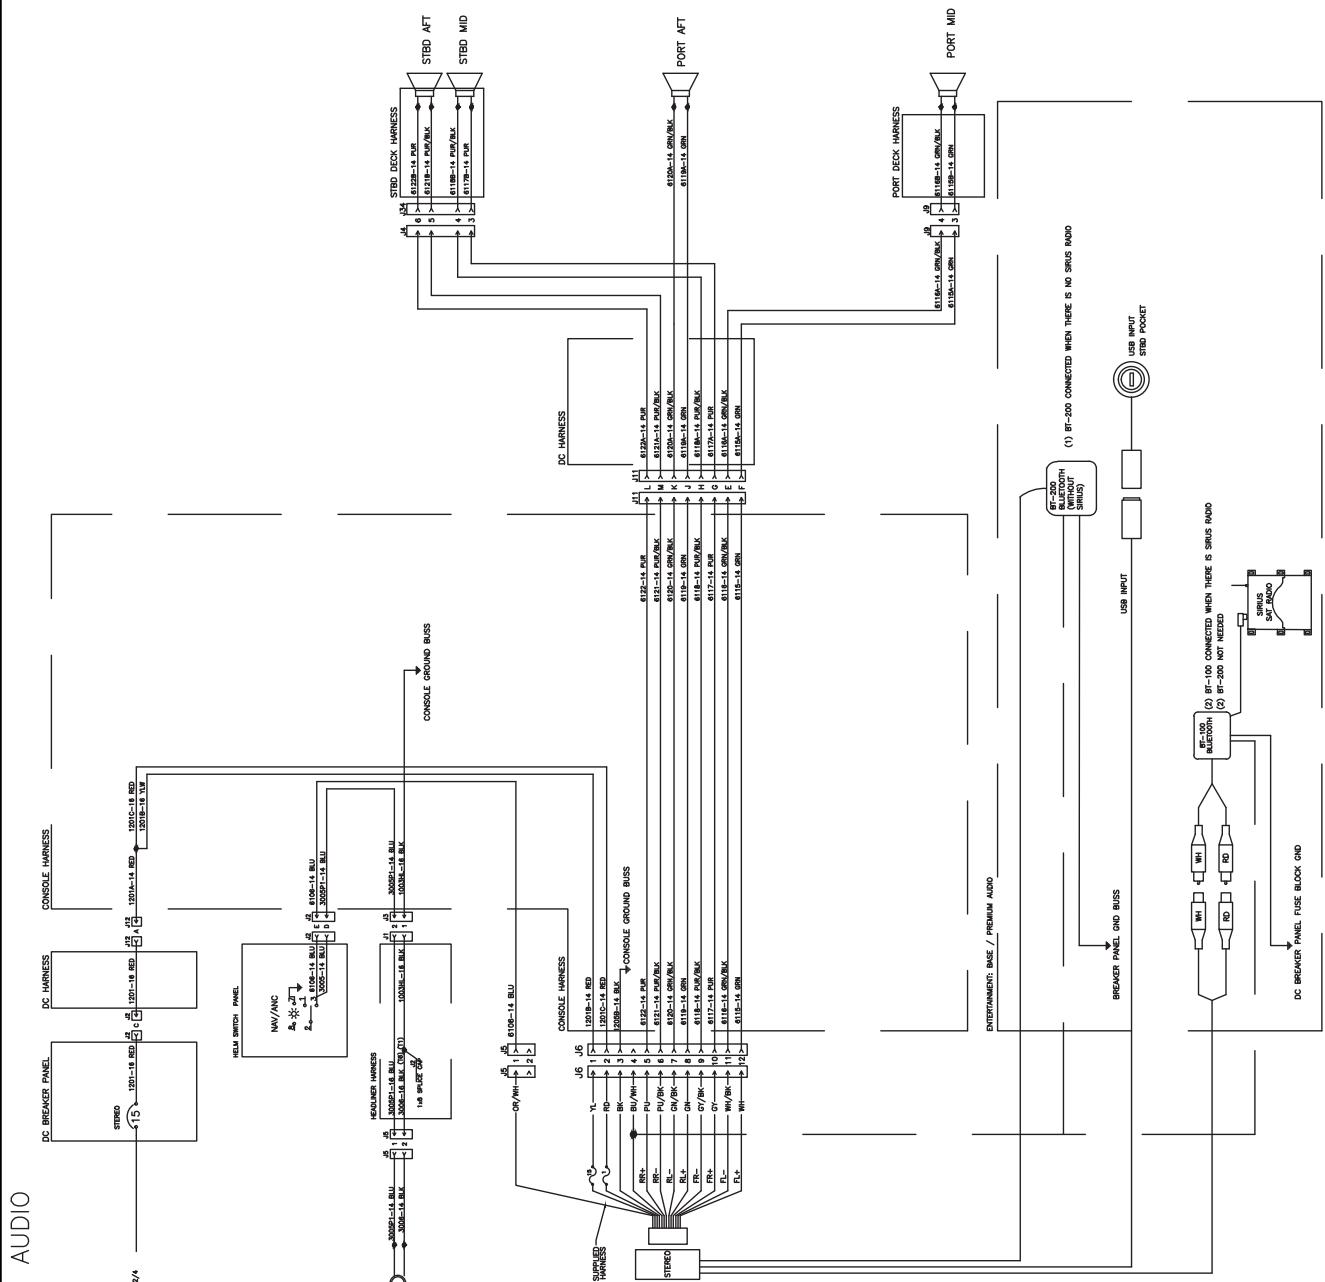

## Section 4 • Electrical System

Premium Audio (Option)


Fig. 4.54.1

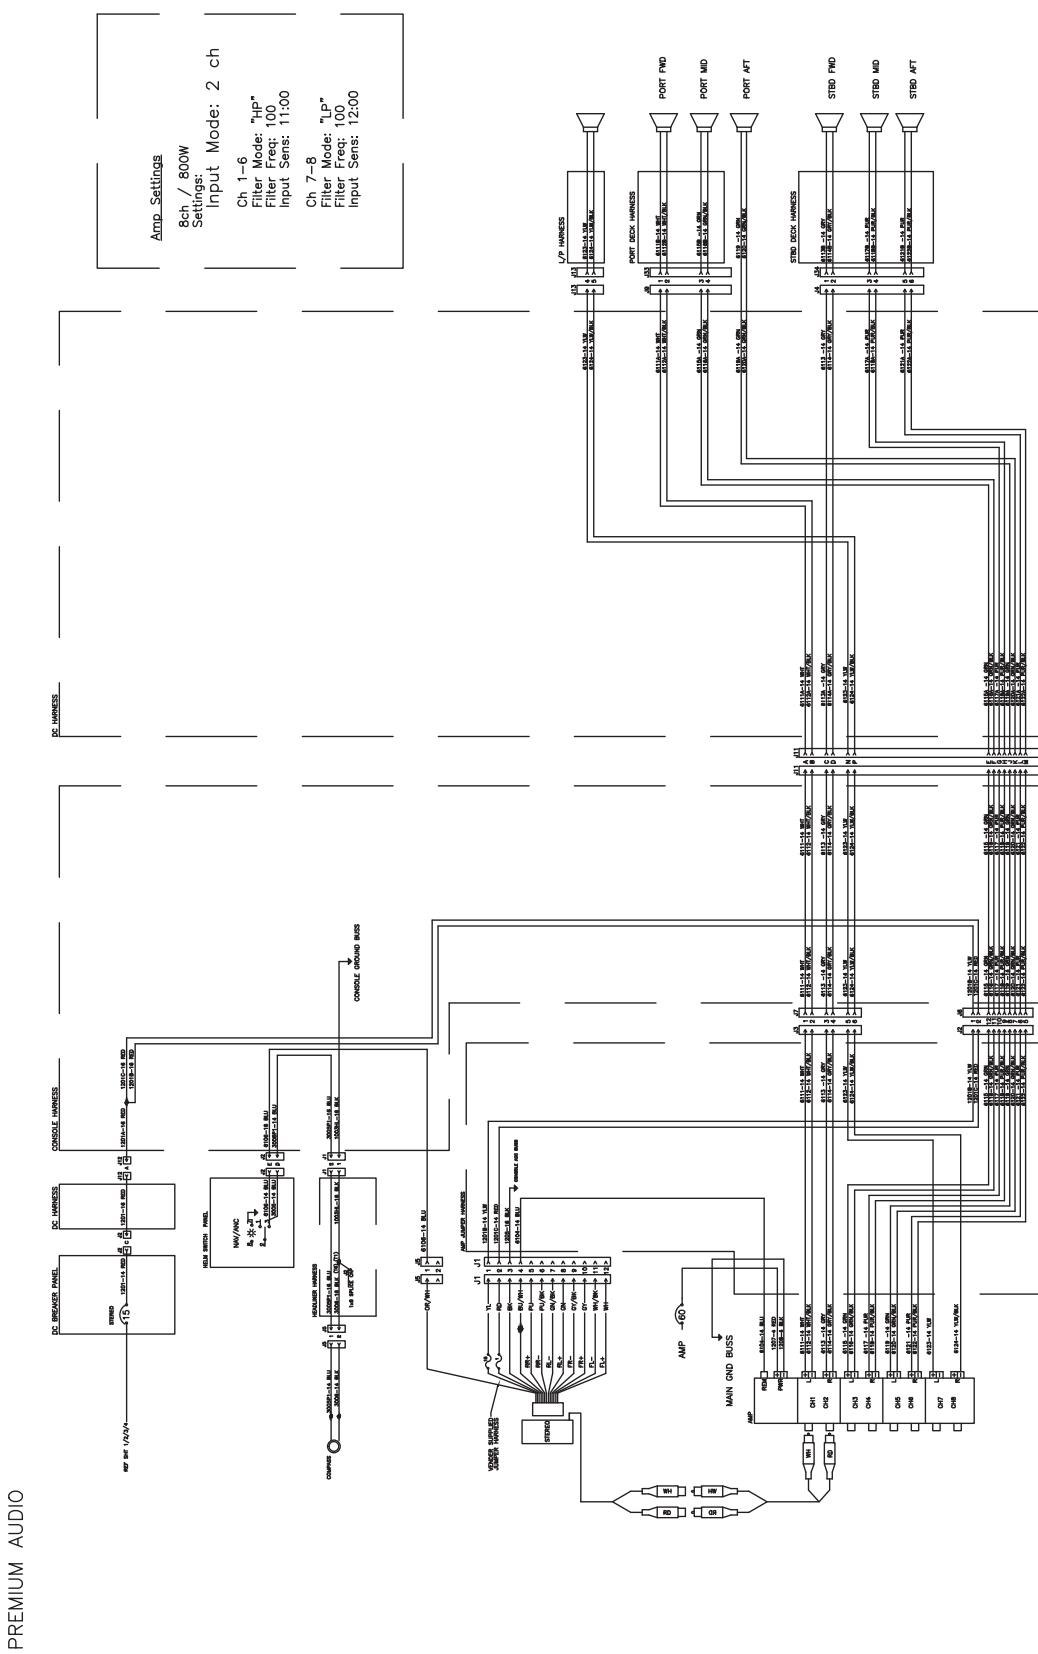

## Section 4 • Electrical System

Receptacle 12V/30 AMP (Option)


Fig. 4.55.1

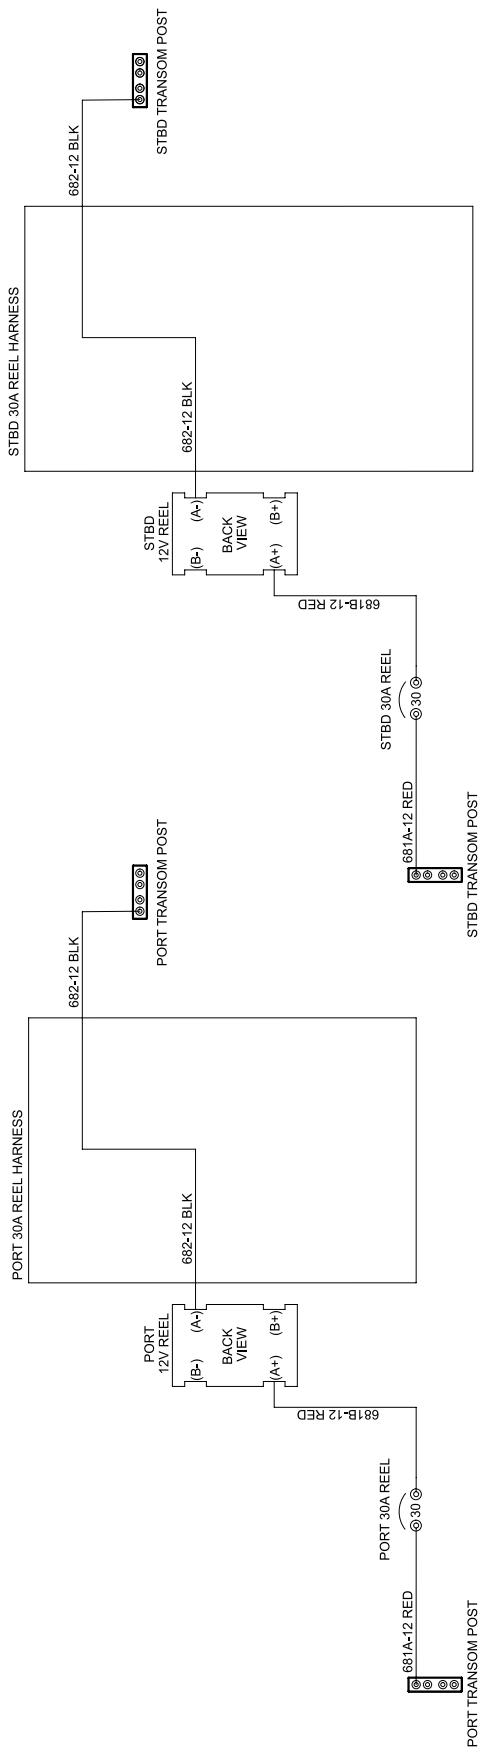

## Section 4 • Electrical System

Battery Harness


Fig. 4.56.1

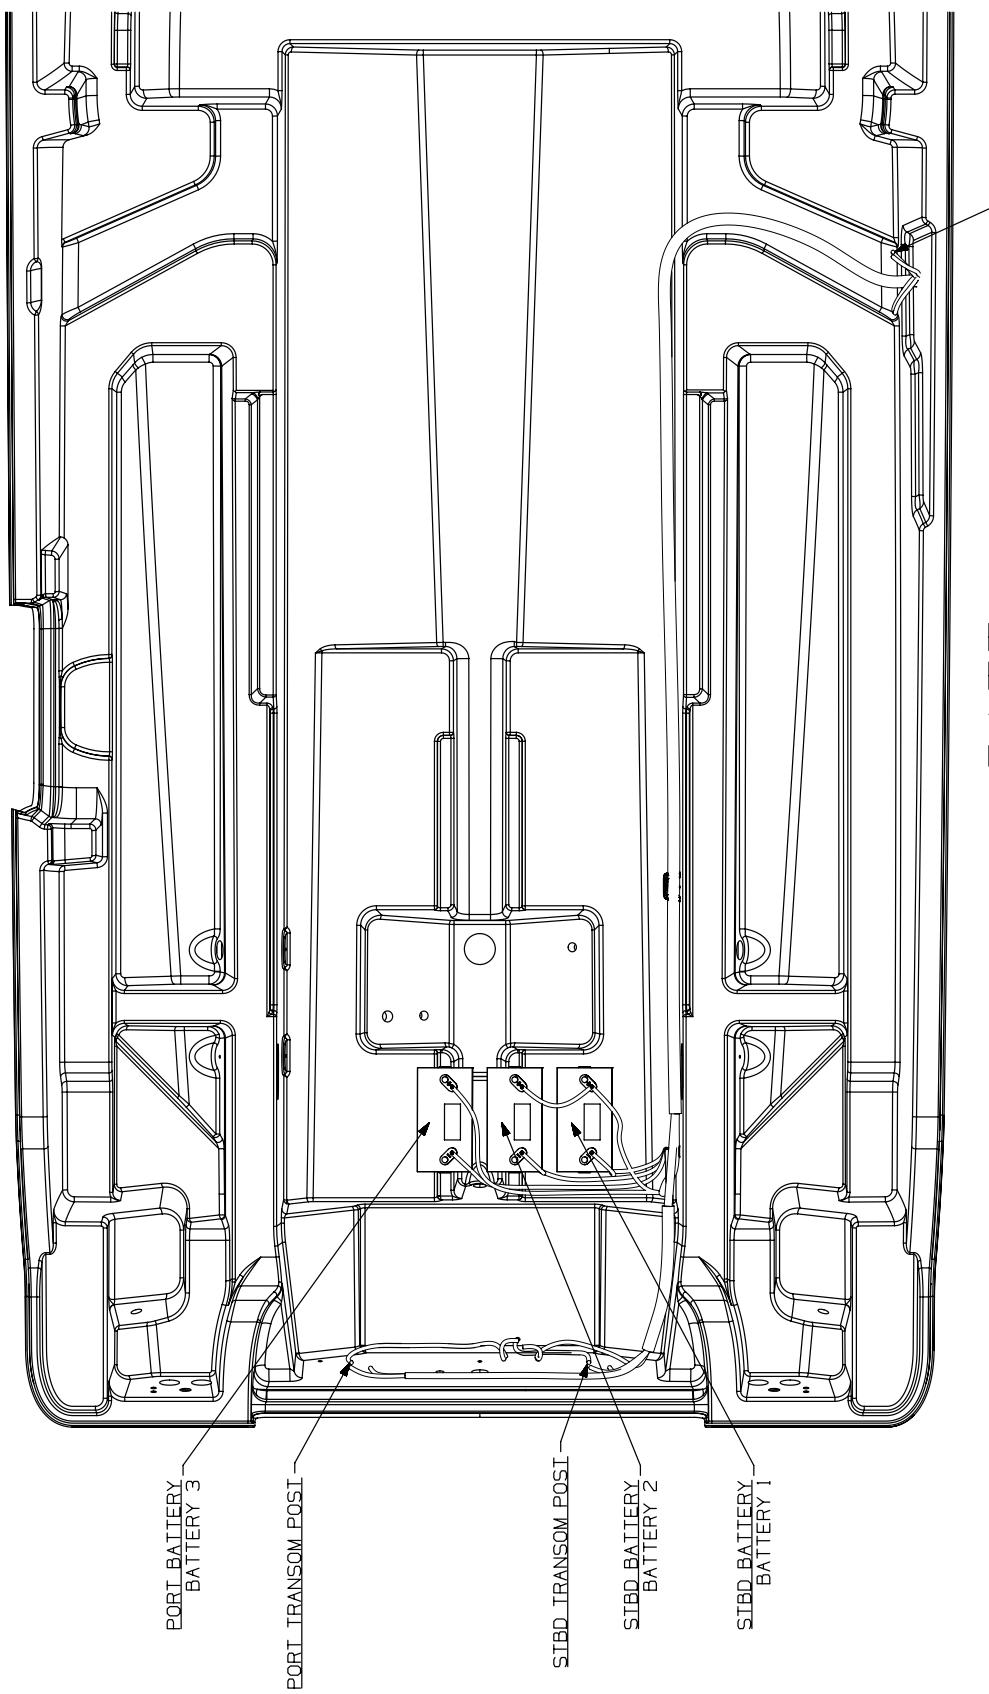

## Section 4 • Electrical System

Gyro Battery Harness (Option)


Fig. 4.57.1

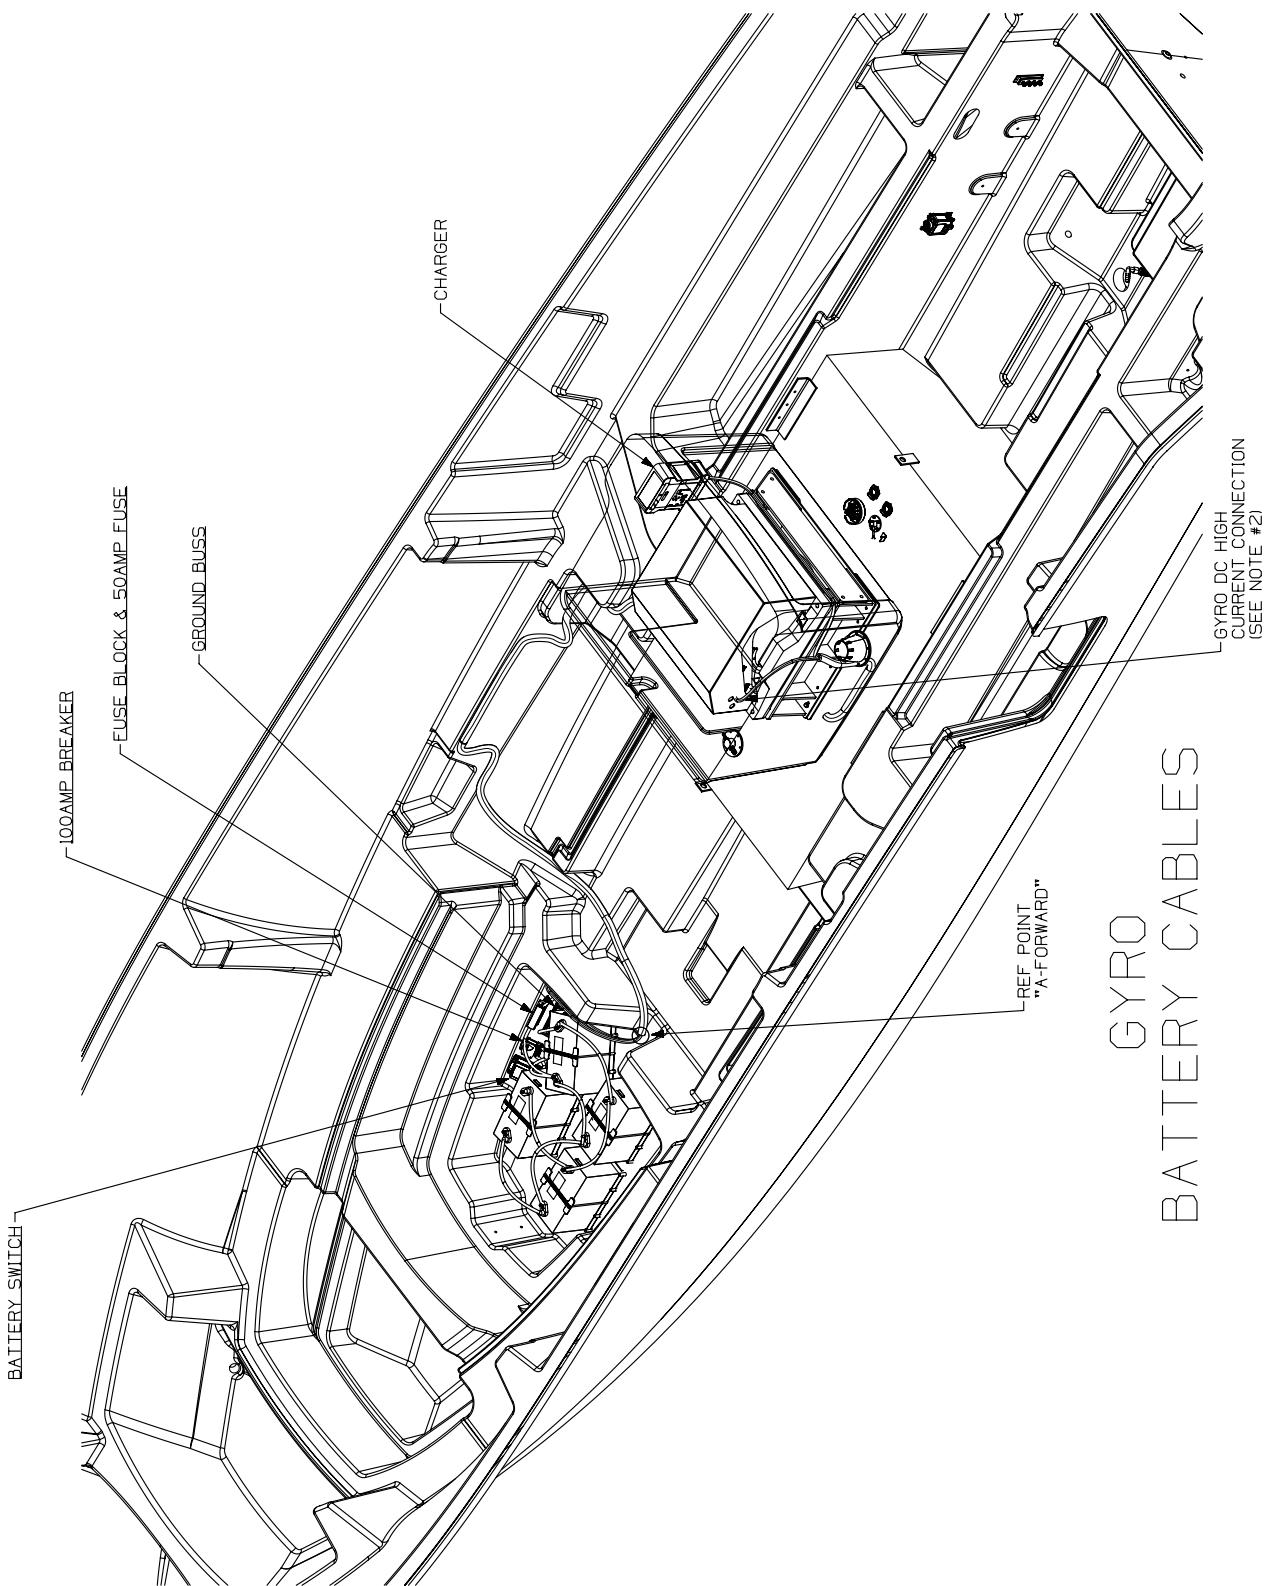

## Section 4 • Electrical System

Gyro DC Harness & Bonding (Option)


Fig. 4.58.1

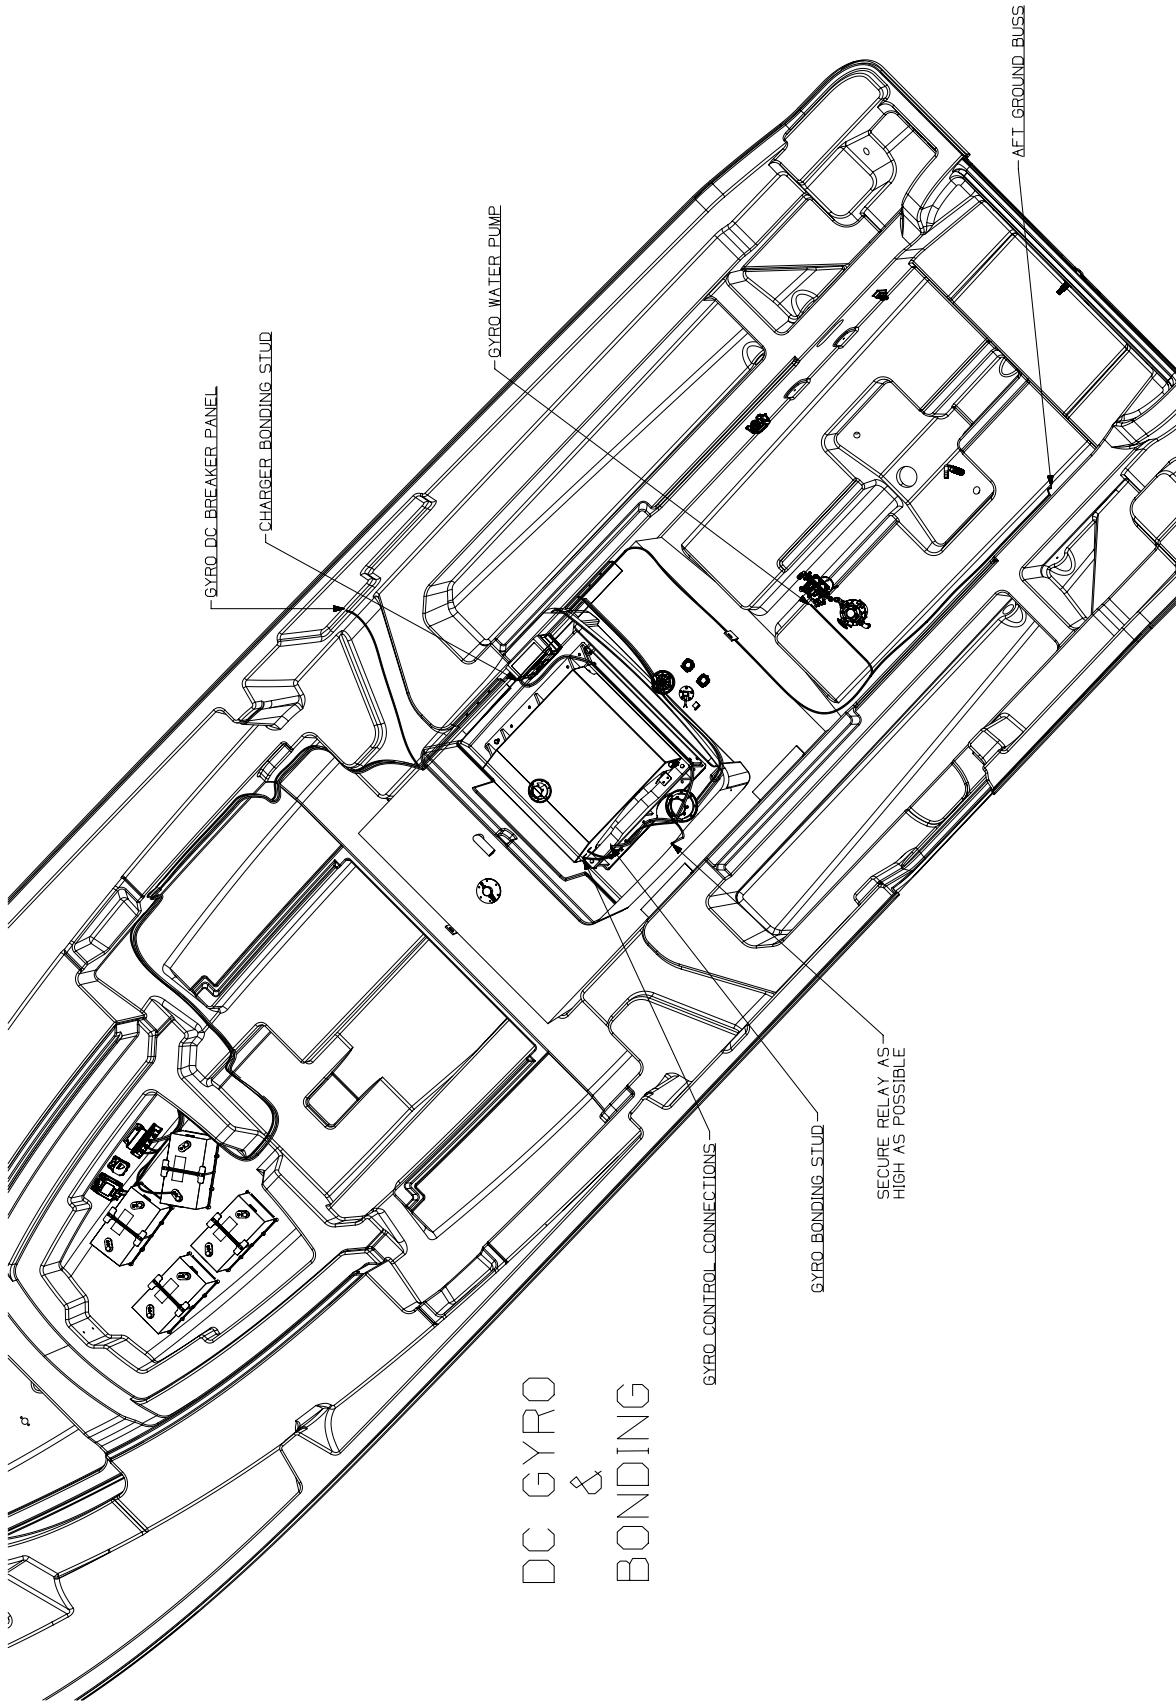

## Section 4 • Electrical System

Gyro AC Harness (Option)


Fig. 4.59.1

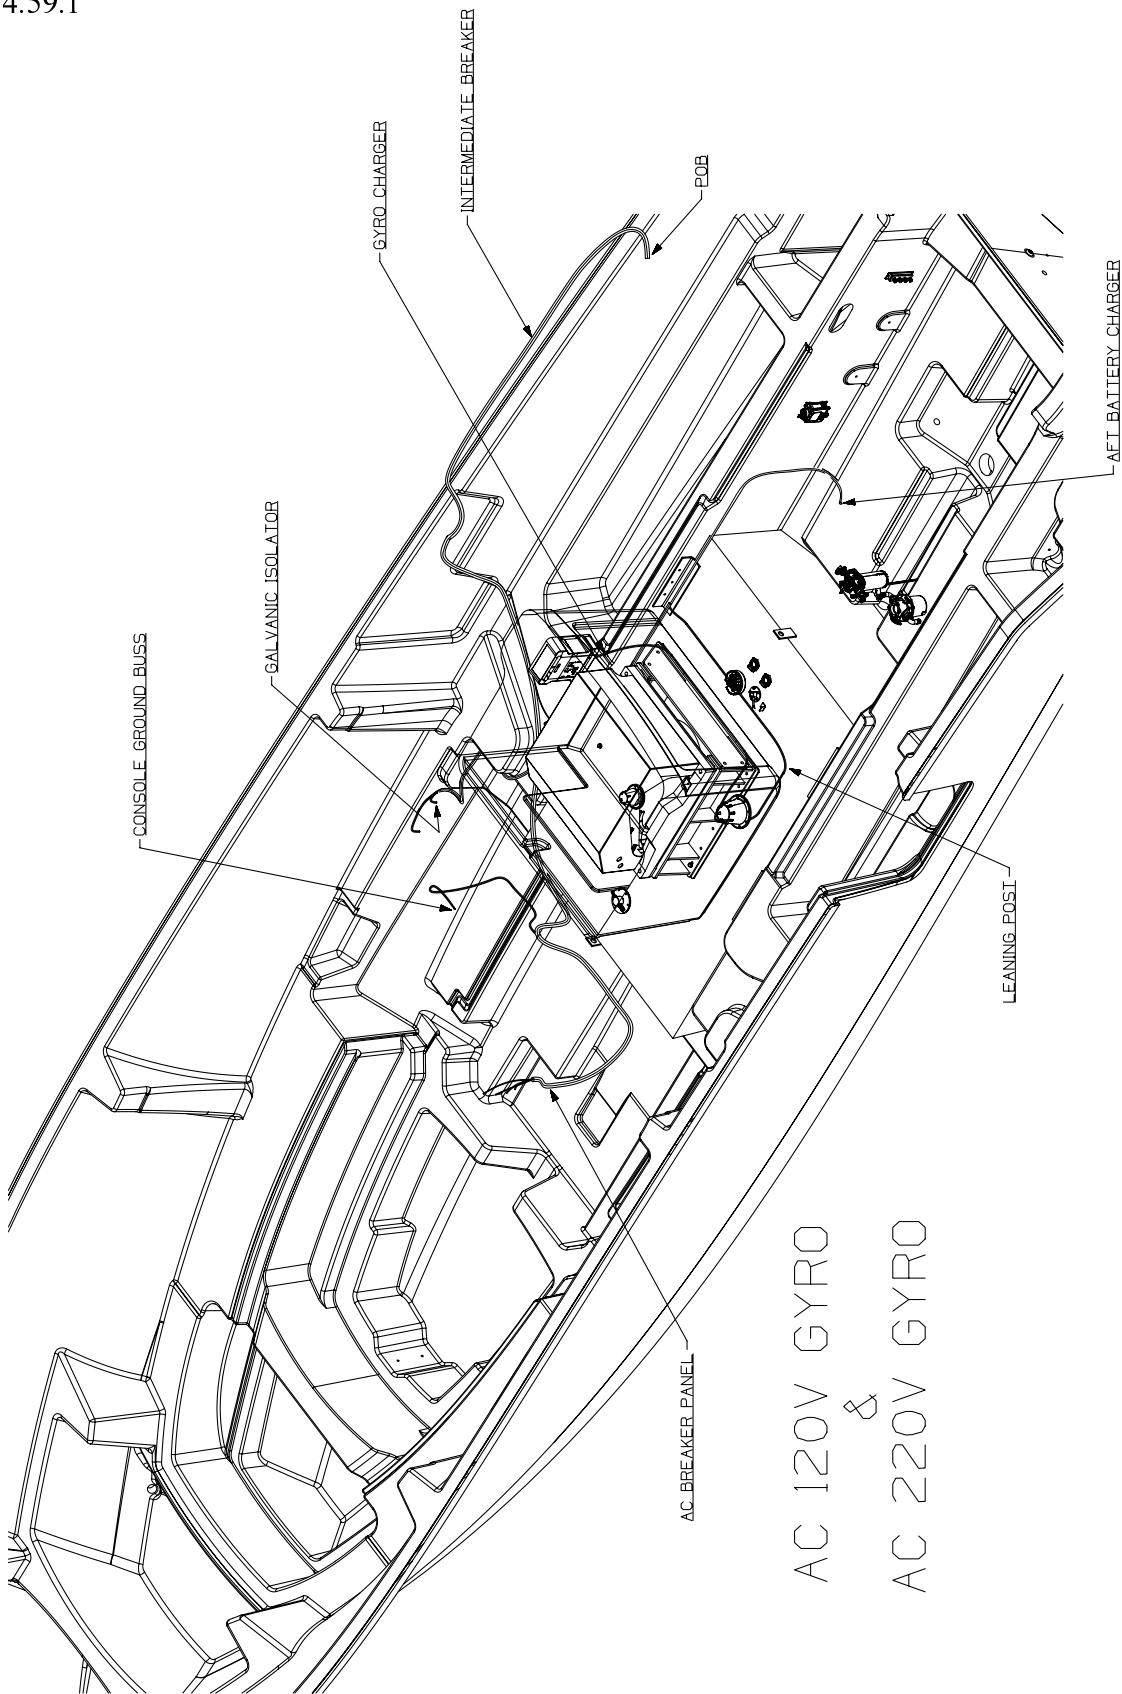

## Section 4 • Electrical System

Gyro Battery to House Battery Harness (Option)

Fig. 4.60.1

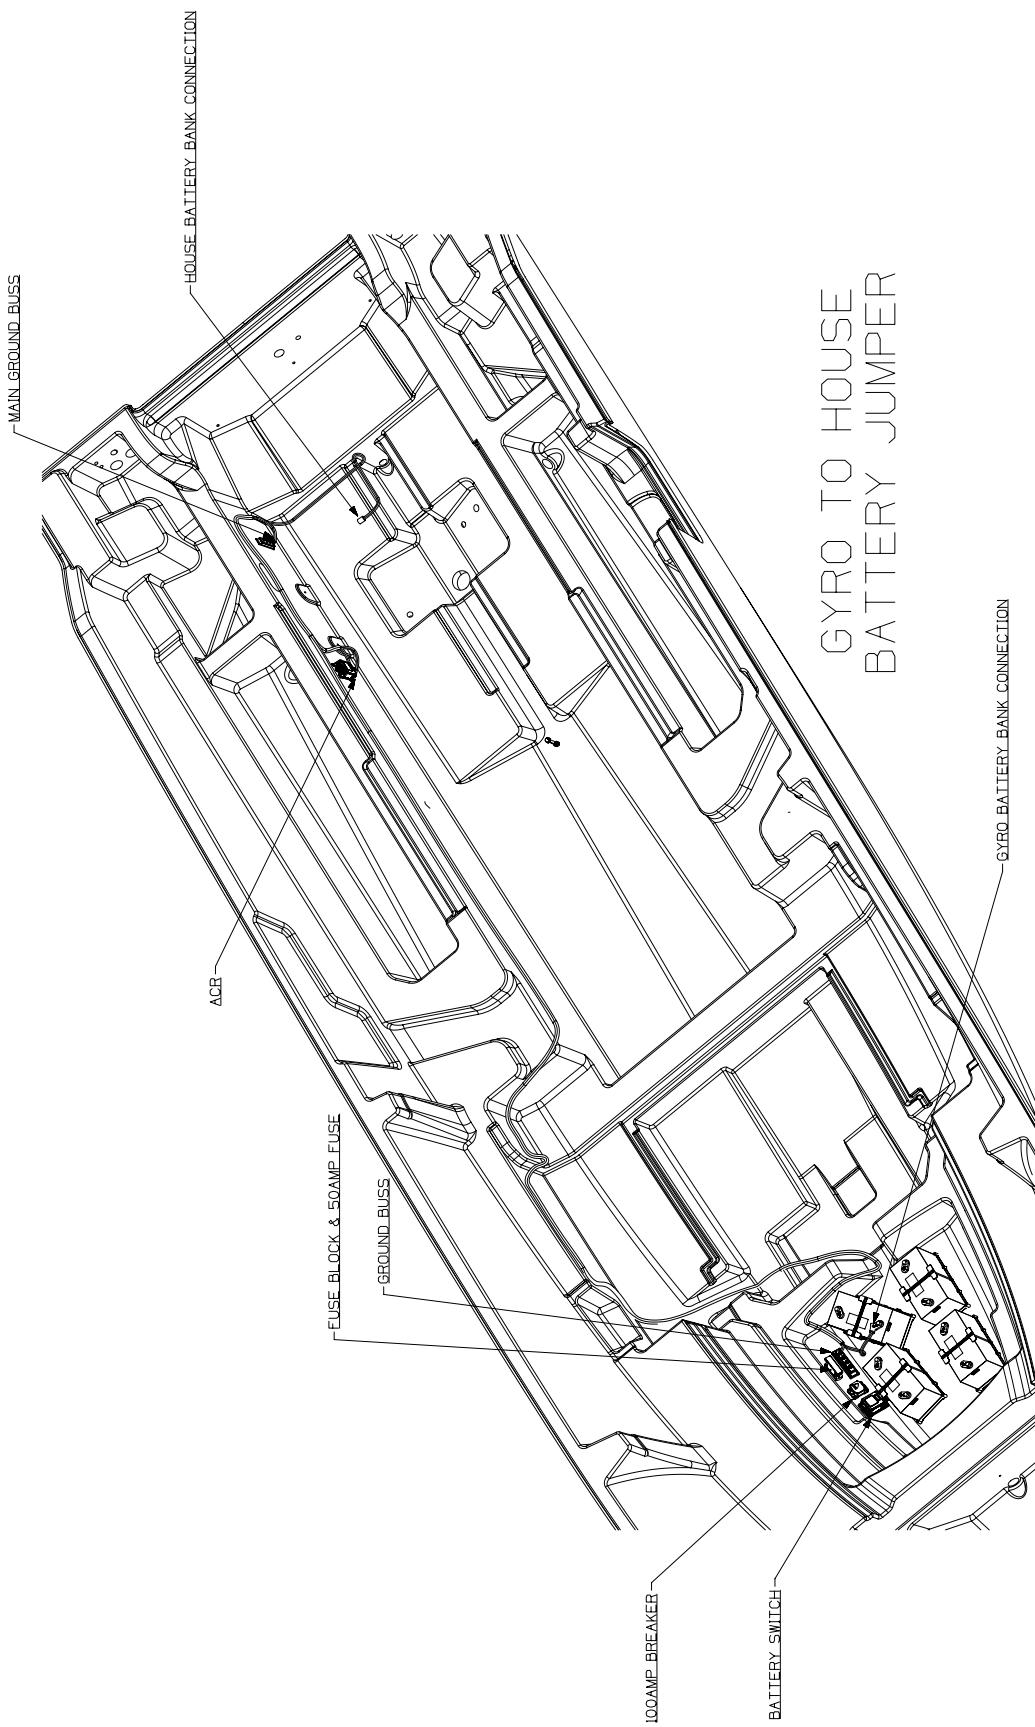

### Routine Care & Maintenance

#### NOTICE

**Refer to the individual manufacturers' manuals for important information regarding service, care and maintenance of your boat, equipment and components. Failure to do so may in some cases void the warranty.**

**Owner's Manuals for your boat and each of the various components and equipment can be found in your Owner's Manual Packet.**

#### ⚠ DANGER

**When using solvents read all information from the solvent manufacturer regarding safety and handling of the material.**

**Wear proper protective equipment to ensure your personal safety.**

**Only use solvents in a well ventilated area and keep all solvents away from open flame and any other forms of ignition.**

Routine inspection, service and maintenance of your boat, boat systems and components are vital to assure your safety, as well as prolonging the life of your boat. You should develop regular routines for inspecting and servicing your boat.

#### ⚠ WARNING

##### IMPORTANT

**Regularly inspect & test hardware, fittings, windshields, hatches, seams, etc. for proper seal. Reseal and/or readjust/tighten fittings, latches, etc. as needed.**

The interval between necessary service or maintenance is highly variable, depending on the environment in which your boat will be used. For example, corrosion of boat parts and components will occur far more rapidly in a salt water environment than on a boat which is used in fresh water.

This section provides **only general guidelines** for the care and cleaning of your boat. It is **your responsibility** to determine whether maintenance and care intervals need to be accelerated due to your boat usage and/or operating environment.

### Hull

Fresh water, saltwater and water temperature can all affect the types of growth that you will find on your boat's hull.

Any growth will affect the boat's performance and overall look. If it has been a while between inspections you might notice algae or slime growth on the hull. This can be cleaned with a coarse towel or soft bristle brush. The growth should be cleaned immediately after the boat has been removed from the water. If the growth is allowed to dry it will be much harder to remove.

Compounding may be necessary to remove more stubborn stains and chalking from the surface of your boat. If compounding is necessary it must be done after a thorough washing and prior to waxing.

If the growth is more severe, you may need to enlist the services of a professional hull cleaning company.

Check with your Boston Whaler® dealer for recommendations on a compatible rubbing compound for your boat or a professional hull cleaning company in your area.

### Waxing the Gel Coat Surfaces

Waxing is necessary to provide added protection to the gel coat. A periodic good cleaning and waxing will also ensure that your boat will be protected and look good longer.

#### NOTICE

**Waxing of the exterior surfaces is recommended to be done at least twice a year to protect the gel coat of your boat.**

**Do not wax over dirt.** Make sure the surface of your boat has received a thorough washing and rinsing and is clean before waxing. If a rubbing compound has been necessary, make sure that any minor scratches or surface pitting is cleaned of compound residue. Use a good quality carnauba wax or a high quality wax designed for marine gel coat. Apply several coats.

## Section 5 • Care & Maintenance

### Hull Maintenance

If using a pressure washer to clean the hull and deck surfaces of your boat it is important that you use the wide fan nozzle only and move the spray head in a continuous motion. Do not concentrate the high pressure on a small area of the boat surface and NEVER use the fine pinpoint nozzle as the concentrated stream can cause damage to the surface of your boat.

It is also recommended that you refrain from pressure washing the console as high pressure may compromise the integrity of the electronics and gauges as well as other equipment installed on your boat. Also avoid pressure washing all caulk seams.

When staining from build-up does occur, use only cleaning agents that are recommended for marine gel coat for use on those stubborn stains.

**NEVER** use an abrasive cleaner to wash your boat's hull.

**NEVER** use an abrasive pad to attempt to remove stubborn stains.

**NEVER** use strong solvents to clean.

**NEVER** apply tape or any other type of adhesives directly to the painted surfaces on your boat.

Use care when covering your boat's painted surfaces as tarps and other such covers can trap dirt and cause chafing. It is best to use a frame of either aluminum or wood to keep the cover up and allow air to circulate.

### Hull Blistering

Due to the quality of the materials used in the hulls of Boston Whalers, blistering is rarely ever seen. Blistering is caused by water soluble materials in the hull laminate. The fiberglass and resin structure of your boat is porous. However, intrusion of water into the gel coat will take some time. The effect of osmotic pressure allows water to impregnate below the gel coat and substrate thus forming a blister.

There have been extensive university studies funded

by the United States Coast Guard regarding the cause and effect of blistering in the gel coat of fiberglass boats. Fiberglass blisters can form anywhere from near-surface layers of the gel coat to very deep into the fiberglass structure. The damage can range from cosmetic to catastrophic, (although the latter is a very rare occurrence). The studies seemed to point toward long term immersion of the hull in warm water as a primary cause of hull blisters. Stress cracks on the hull below the waterline also contribute to the formation of hull blisters.

### Prevention

There are a variety of ways to prevent the formation of hull blistering. Epoxy coatings can be applied to the hull, followed by hull painting. An alkyd-urethane-silicone marine paint can also be used to aid in the prevention of hull blisters.

Reducing the amount of time that your boat stays in the water also helps prevent hull blisters from forming. Use of a trailer or boat lift will reduce the likelihood of hull blisters forming. Be sure to use a bunk type lift or trailer for storage of the boat out of water.

Contact your Boston Whaler® dealer for more information on the prevention and treatment of hull blisters.

### Bottom Painting

#### ! DANGER

**There are risks and dangers inherent with the use of paints and solvents. Dispose properly of all rags, rollers and trays used for painting. Follow all the precautions and regulations listed by the manufacturer before and after painting your boats hull.**

#### NOTICE

**If blisters are present in the hull, they need to be properly cleaned and dried out before any barrier protection can be applied.**



### CAUTION

**Some bottom paints contain metals that can cause corrosion of the outboard engine. Leave a minimum of 3/4" unpainted around all engine parts. Use only a paint specifically designed for aluminum engines as anti fouling protection.**

If your boat will spend most of its time in the water, painting the bottom of your boat's hull is a good way to slow the formation of hull blisters and to keep bottom growth (fouling) under control.

If you will be trailering the boat to and from the water, you might want to forgo the painting.

Following is an abbreviated section on painting your hull bottom. Your Boston Whaler® dealer should have information on properly painting your boat's hull or recommendations on businesses that will paint your hull for you.

#### Zinc Anodes

Sacrificial anodes (zinc) are installed on the trim tabs, and engines of your boat to protect underwater hardware. Zinc, being less noble than copper based alloys and aluminum used in underwater fittings, will deteriorate first and protect the underwater fittings from deterioration.

**Zinc anodes cannot perform their function unless they are exposed. Putting paint on an anode smothers it, rendering it useless.**



### CAUTION

**DO NOT paint over zinc plates. This action will render them useless and lead to deterioration of the underwater metal parts of your boat.**

#### Bottom Painting a Bare Hull

Since the boat has never been painted preparation is the key to successful hull painting. Take extra care and time in preparation before proceeding to paint.

Begin by scrubbing the surface thoroughly with a stiff brush using an all-purpose marine soap and water to remove loose dirt and contamination. Flush with fresh water to remove all soap residue.



### WARNING

**Proper ventilation and capture of the dust created by sanding is essential. The dust created by sanding is toxic and should not be breathed. A proper fitting respirator must be used.**

**DO NOT use a paper filter mask.**

The gelcoat will have to be dewaxed of mold release wax before sanding can begin, otherwise the wax will be dragged into the scratches and will reduce the adhesion properties of the paint.

Remove any mold release wax that may be present using fiberglass surface prep solvent and a scrub pad. Scrub only a few square feet at a time. Flush with fresh water. If the water beads up or separates, continue scrubbing the surface. When the water sheets off, the wax contaminant has been removed.

After the dewaxing is complete, application of a primer coat is recommended. Pay close attention to scratches, nicks and dings in the surface. If necessary, fill any repair areas with a watertite epoxy filler. After filler is cured, sand with 80 grit paper until smooth. Remove the sanding residue using a fiberglass solvent wash.

The paint can be applied after sanding and cleaning is complete. Follow the paint manufacturer's recommendations for application.

#### Bottom Painting a Pre-Painted Hull



### WARNING

**Bottom paint is designed to resist algae growth which means it has chemicals embedded in the paint that are harmful if ingested. Take all necessary precautions required before painting or repainting your boat's hull.**

If the hull bottom is already painted, you must be sure to test the paint's adhesion to the already painted surface. If the paints are incompatible, the new paint will not adhere to the hull bottom or the paint will "lift" the old paint. **NEVER** apply paint without first

### NOTICE

**Painting your boat's hull will adversely affect the boat's speed and performance and may require re-proping if the maximum engine RPMs drop below the engine model/mfg recommended operating range.**

preparing the old painted surface following the paint manufacturer's recommendations.

Follow the paint manufacturer's recommendation for applying the paint. Humidity and weather will play a role in how and when the paint is applied. Several thin layers are better than one thick layer.

To determine the waterline, you will need to place the boat in water with a full load of fuel and gear. Mark the waterline and measure above the marked line 1 to 3 inches for placement of the tape line.

Make sure that there is enough paint left to cover areas that were not accessible, (slings, jack stands etc.) and paint accordingly. Follow the paint manufacturer's recommendation for do's and don'ts after the painting is complete.

### NOTICE

**Masking tape is NOT recommended for the types of paint you will be using.**

### Rubrail Care

The rubrail on your boat is constructed of an injected high density PVC vinyl material which laboratory tests have proven to be highly resistant to staining, fading and cracking.

As resilient as this material is, you still need to follow some basic maintenance precautions.

General maintenance requires a thorough cleaning with mild soap & water. **DO NOT** use any cleaning agents which contain chemicals.

Although the outer shell is tough and durable, there is a chance that it can be breached. Use care when docking or exposing the rubrail to conditions which may cause damage such as docking against heavily barnacle-encrusted pilings.

Some tears (cleanly sliced) can be repaired with a "Super Glue" type product.

Thoroughly clean and dry the affected area. Apply glue and hold the surfaces together.

Areas which have been torn or are affected by heavy abrasion will have to have the damaged section replaced. Please see your Boston Whaler® dealer for this type of repair.

### Cleaning Fiberglass & Non-Skid

To protect your deck and non-skid areas from the deteriorating affects of the sun, oxidation, water spots and pollution, use a good quality "fiberglass and non-skid deck" wax every two to three months.

When applied to your deck and non-skid areas, as recommended by the manufacturer, the wax forms a protective non-slick surface which will keep debris from sticking. Dirt, soot, bird droppings, and even fish blood will rinse right off.

### NOTICE

NEVER use abrasive cleaners, detergents or soft scrub type cleaners to wash your boats surfaces.

NEVER use abrasive pads, brushes or sponges to attempt to remove stubborn stains.

NEVER use strong solvents or detergents which contain chlorine.

### Stainless Steel Care

**The cleaner your stainless trim and fittings can be kept, the greater the assurance of optimum corrosion resistance. Without proper care even the best stainless steel will corrode.**

Stainless steel is strong and corrosion resistant, but still requires maintenance to keep its appearance. Frequent routine cleaning of your stainless steel with a mild soap and water solution and coating with a good grade cleaning wax will help maintain the finish.

- Wash with mild soap and cold or lukewarm water.

- Dry THOROUGHLY.
- Apply cleaning wax with a soft, dry cloth.
- Allow wax to dry, then polish and buff.

Even the finest cleaning powders can scratch or burnish a mill-rolled surface. On polished finishes, rubbing or wiping should be done in the direction of the polish lines, NOT across them.

Crevice corrosion, a brownish coloring which occurs where two pieces of stainless hardware meet is caused by impurities in water and air. It can be easily cleaned with a good grade marine polish using a sponge, cloth or small bristled brush (for nooks and crannies).

### NOTICE

NEVER use abrasive cleaners, detergents or soft scrub type cleaners to wash your boats surfaces.

NEVER use abrasive pads, brushes or sponges to attempt to remove stubborn stains.

NEVER use strong solvents or detergents which contain chlorine.

NEVER use silver cleaners.

### Teak Maintenance

The teak features on your boat are constructed of natural wood, are durable in all climates, and require little maintenance. Clean teak surfaces by regularly washing with soap and water using a soft brush or sponge. Do not use a steel brush or steel wool. Do not use a pressure washer. Do not use strong solvents or harsh cleaners on the caulking as they can damage or dissolve the caulk. Bleach can be used to treat darker spots on the wood surface. Use fine grain sandpaper to keep the surface smooth and blemish free. There are several maintenance options for teak:

#### Let-it-be (Recommended)

Left alone with the elements, teak changes to a silver-grey patina. To maintain, occasionally wash with soap and water. A light sanding every few years keeps the surface smooth; always sand with the wood grain.

#### Oiling

Apply oil to retain or increase the darkness of the original wood. There are numerous products on the market that provide a variety of different characteristics. Refer to the manufacturer's instructions for proper application.

#### Lacquer

A correctly applied lacquer ensures years of low-level maintenance and minimizes the risk of mold. Some lacquers can be applied with various grades of thinner to reduce shine. The wood will likely darken when lacquer is applied. Carefully research product information to ensure it's suitable for both teak and caulking.

#### Seats (Mechanical Parts)

Always wash metallic parts with soap and water and rinse thoroughly with fresh water. Once dry, apply a light coating of lubricant to protect moving parts.

Check for loose or damaged hardware and tighten or replace as necessary.

#### Aluminum Care

Preventative maintenance is essential to life of the metals on your boat. The presence of salt particles and moisture is the major cause of white spots, pitting and corrosion.

The use of harsh chemicals can also cause deterioration. Manufacturers and applicators of protective coatings will not warrant protective coatings on metals in the marine environment. Proper owner maintenance is required to reduce deterioration which will result in most cases by failure to wash down and wipe dry after each use and/or the use of abrasive, acidic or other improper cleaners.

Wash completely using a soft cloth and mild detergent to remove salt particles. Hosing alone will not dislodge all particles. **DO NOT** allow soap to dry as it may cause stains on coated surfaces. Make sure to wash and dry the full circumference of aluminum parts.

Apply an aluminum protectorant at least twice each year, more frequently as conditions warrant. Neglect

## Section 5 • Care & Maintenance

will cause pitting of the surface which cannot be reversed.

Inspect and repair or replace all damaged nylon bushings, washers or other hardware designed to prevent contact with dissimilar metals.

Whenever electrical or electronic changes are made to the boat, a qualified marine technician should check aluminum parts for stray currents. Make sure all electronic equipment is properly grounded with adequate sized wire.

### Cushions

Saltwater, salt residue, dirt, ultra-violet rays etc. will take their toll on vinyl products causing them to lose their luster and texture.

The cushions on your boat are made of a durable vinyl material called OMNOVA which is protected by a finish called PreFixx®. PreFixx® will keep your cushions looking new far longer than most other vinyl upholstery.

### To Clean Your Cushions



#### CAUTION

**Solvents are flammable. Exercise proper care. Wear rubber gloves during all cleaning activity.**

**Use caution when cleaning around buttons, stitching and wooden or decorative trim as these solvents could seriously damage such areas.**

- Remove ordinary dirt and smudges with a mild soap and water solution. Dry with a soft, lint-free cloth or towel.
- More difficult stains can be cleaned using rubbing alcohol (isopropyl alcohol). Rinse cleaned area with fresh water and dry with a clean, soft, lint-free cloth or towel.

- Seemingly permanent stains like ballpoint ink can be cleaned with active solvents such as nail polish remover when applied with a soft cloth or damp sponge and rubbed. Rinse cleaned area with fresh water and dry with a clean, soft, lint-free cloth or towel.

The vinyl material and superior finish has been tested to resist heavy abrasion. Complete cleaning instructions are included in the owner's packet. Read all information provided by the cushion manufacturer regarding the proper cleaning and maintenance.

**Your cushions are not waterproof.** They are constructed of open-cell foam and will absorb and hold water. The foam is wrapped with a plastic barrier which helps to keep water from being absorbed into the foam but also will not allow water to dissipate once the foam is soaked. **Do not leave the cushions in standing water or exposed to heavy, prolonged rain.**

If, in the event your cushions become waterlogged, remove the foam from the cushion, press as much water as you can from the foam and allow to air dry. Make sure the plastic wrap is dry before wrapping the foam and inserting it back into the cushion.

To prevent mildew, keep the vinyl dry and make sure that moisture does not accumulate between the cushions.

### Cleaning Your Instrument Gauges

When gauges are exposed to a saltwater environment, salt crystals may form on the bezel and plastic covers. Remove the salt crystals with a soft damp cloth. Clean with a mild household detergent or plastic cleaner.

Never use abrasives or rough, dirty cloths to clean plastic parts. A mild household detergent or plastic cleaner should be used. Wipe clean with a damp chamois.

FOR MORE INFORMATION, CONTACT MERCURY MARINE CUSTOMER SERVICE AT 1-920-929-5040

## Section 5 • Care & Maintenance

### Canvas Care and Maintenance

#### NOTICE

**DO NOT use detergents, bleach or solvents to clean your canvas.**

To keep your canvas and metal parts in good working condition and in good appearance, you will need to keep them clean.

The fabric should be cleaned regularly before substances such as dirt, pollen, etc. are allowed to accumulate on and become embedded in the fabric. The canvas can be cleaned without being removed from the installation.

Chafing, fiber wear from dirt and grit and deterioration from ultraviolet light can cause your canvas to degrade over time.

#### Maintaining a good appearance

- After each use, especially if used in salt water areas, rinse the canvas completely with fresh cold water.

#### On a regular basis

- Brush off any loose dirt, pollen, etc.
- Hose down with fresh cold water and clean with a mild solution of a natural soap in lukewarm water (maximum 100°F / 38°C).
- Allow the canvas to soak. **DO NOT ALLOW THE SOAP TO DRY.**
- Rinse thoroughly with fresh water.
- Let the canvas dry completely. **DO NOT store any of the canvas pieces while wet.**

The effects of ultraviolet light can sometimes be reduced by chemical treatment of canvas items.

Consult your Boston Whaler® dealer or check your canvas manufacturer's manual **BEFORE** using any chemical treatments on your canvas.

#### Cleaning Stubborn Stains

Soak fabric for approximately twenty minutes in a mild solution consisting of no more than 1/2 cup (4 oz.) of bleach and 1/4 cup (2 oz.) of natural soap per gallon of lukewarm water (not to exceed 100° F / 38° C).

**Rinse thoroughly** in cold water several times. Allow the fabric to air dry completely.

#### NOTICE

**Failure to remove all of the soap solution can cause deterioration of seams and prevent fabric from proper retreating.**

Retreat the fabric using an air curing product such as 303 High Tech Fabric Guard to ensure water and stain repellency.

All canvas should be stored flat or rolled in a clean, dry space.

#### Maintaining Zippers and Hardware

Lubricate zippers and fasteners periodically with a clear silicone spray. In the absence of silicone spray, a wax candle can be used to lubricate the zipper track.

Replace any missing fasteners or any fasteners showing signs of corrosion.

#### NOTICE

**DO NOT use petroleum based products, such as petroleum jelly, on the zippers or fasteners.**

#### Corian® Solid Surface Countertops

Corian® was developed for a lifetime of easy care. Following the simple guidelines below will keep your Corian® surface looking as new as the day it was installed.

## Section 5 • Care & Maintenance

### Routine Care

Soapy water, ammonia-based cleaners or commercial solid surface cleaners, if used routinely, will remove most dirt and residue from the countertop.

### Minor Cuts and Scratches

Rub the scratch in a straight line with a fine grit sand paper periodically switch rubbing direction 90° until all of the scratch is removed. Rinse top with water. Select the next lighter grit paper and rub over a large area to blend in the sanding. Continue the process using successively finer grits until desired gloss level is achieved. Wipe surface with damp cloth and let dry.

### Heat Damage

Corian® has excellent heat resistant properties. However, as with all countertop materials, it is important to minimize direct exposure to intense heat. We recommend the use of trivets or hot pads when placing hot objects on the countertop.

### Other Damage

In most cases Corian® can be repaired if accidentally damaged. However, to prevent any permanent damage to your countertop avoid exposing the surface to strong chemicals, such as paint removers, oven cleaners, nail polish remover, etc. If contact occurs quickly flush the surface with water. Avoid cutting directly on the countertop.

### Refurbishing

Over time and use your countertop may acquire a patina, changing the appearance of the finish. Using a general countertop polish rub the entire surface in a circular motion, rinse with clear water and wipe dry.

### Cleaning Tempered Glass Windshield

#### NOTICE

**DO NOT USE abrasives, harsh chemicals or metal scrapers on glass.**

#### NOTICE

**For windshields with aluminum frames refer to "Aluminum Care" in this section.**

Use commercially available glass cleaners or a mixture of fresh water and vinegar to clean your glass windows, windshield or portlights. Dry with a soft terry cloth towel or chamois.

### Misting System

Mister Jets™ are designed to spray in a cone shape. If mist from the jet is shooting a straight line or nothing is coming out then the jet is clogged. To clean the jets, simply unscrew the clogged jet and soak in CLR or vinegar for 15-20 minutes, rinse thoroughly with clean water and screw back into fitting.

If jet is still not working, calcium deposits may have developed inside the jet which restrict the tiny anti-drip ball. To correct this situation, wrap the jet in a towel and "tap" it on a hard surface (i.e. counter top or floor). This should free the anti-drip ball and allow the jet to function properly.

### Replacing the Filter

Filter replacement is dependent on water condition and usage. The mineral content in water varies from region to region. At the very least, the filter should be replaced at the beginning of your boating season.

If the misters are not functioning properly after cleaning with CLR replacing the filter should correct the situation.

#### NOTICE

**Depending on usage, the filter should be changed every three months or once a season.**

### Flushing the System

It is recommended that the system be flushed each time the filter is changed. To flush the system, remove one of the jets at the end of the line and allow the system to run freely for one to three minutes.

## Section 5 • Care & Maintenance

### Winterizing the System

If the system will not be in use, completely drain all water out of the system. If the in-line filter will be usable when your vessel is put back into service, remove it from the system and store it in an area that will not freeze.

FOR MORE INFORMATION, CONTACT MISTERS UNLIMITED™ CUSTOMER SERVICE AT 1-888-764-6478

### Long Term Storage & Winterization

Long periods of storage, winter lay-up and/or non-use, common to boats, create unique problems. When preparing to store a boat for extended periods of two months or more it is best to make sure that the boat and its systems are properly conditioned for such extended periods of non-usage.

The guidelines presented on the following pages give basic instructions on "winterizing" your boat and boat systems. If inexperienced with the process of winterization it is best to hire the services of a professional.

In addition, always consult the owner's manuals of the various systems and equipment on your boat for the manufacturer's recommendations on winterizing and long term storage.

### Engine



#### CAUTION

**Never start or run your outboard (even momentarily) without having water circulating through the cooling water intake holes in the gear case. This will prevent damage to the water pump (running dry) or overheating of the engine.**

Protecting your engine's vital moving parts from corrosion and rust caused by freezing of trapped water or excessive condensation due to climatic changes is very important. Freezing water in the engine can cause extensive damage to the internal moving parts. Internal engine parts can also be affected by rust due to lack of proper lubrication.

- Replace the engine oil and filter, running the engine to drain out as much old oil as possible.
- Flush the engine with fresh water using flush muffs or a similar device attached to the raw water pickup.
- Let all water drain from the engine.
- Fog the engine while it is running. Spray until it stalls.
- Run fuel which has been treated with conditioner and stabilizer through the engine.
- Replace lower unit gear oil. Check for moisture in old oil, a sign of deteriorating seals.
- Remove the prop and grease the shaft and threads.
- Treat all grease fittings with the recommended lubricant.
- Lightly lubricate the exterior of the engine or polish with a good wax.
- Check engine mount bolts. Ensure that they are torqued to 55 ft/lbs.

In addition, be sure to follow all recommendations in your engine manufacturers operation manual.

### Fuel System

Tank(s), hoses, and fuel pumps should be treated to help prevent the formation of varnish and gum.

Temperature extremes will cause condensation to accumulate in an empty or partially filled fuel tank leading to fuel contamination and/or premature wear of your system.

Fill the tank completely (100%) full and add fuel stabilizer and conditioner, following the manufacturer's recommendations, to provide fuel stability and corrosion protection.

#### NOTICE

**Pay particular attention to the information provided in "Ethanol-Blended Fuel" in section 3 of this manual.**

## Section 5 • Care & Maintenance

### Electrical System

- Check all connections and tighten if necessary.
- Spray all connections with an anti-corrosion spray.

### Battery

#### NOTICE

**Follow the manufacturer's recommendations for long term storage of your battery(s).**

Engine and house electrical systems on our boats have become increasingly more complex and are reliant on a good source of power. The house source of power typically comes from a battery bank comprised of two or three batteries in parallel. The batteries charge with the engine alternator while away from the dock; if equipped, batteries can also be charged using a generator and battery charger. As the engines/generator are providing a charge output to the house bank through the automatic charging relays (ACRs), keep in mind the following battery recommendations.

#### Mixing fresh/new and used/dead batteries

The fresh battery will deliver current into a dead battery which has high resistance. This results in excessive heat in the used/dead battery, which can cause further damage, leakage, or rupture. A used battery will drain energy from the new one, reducing the total amount of battery power available.

#### Mixing battery types

Different battery types are designed for different purposes. Mixing an AGM battery with a lead acid battery will not improve performance. This results in reduced performance, may damage your devices, or cause battery leakage or rupture.

#### Mixing battery brands

different battery brands may not have the same specifications like marine cranking amps (MCA) or cold cranking amps (CCA). This results in excessive heat, which may then cause damage, leakage or rupture in one of the batteries. We recommend using the same type of batteries throughout a boat.

### Deck

Clean the deck with soap, hot water and a stiff brush to clean up any oil spills.

### Drainage

It is important to raise the bow of the boat enough to allow for proper drainage of water from the deck and bilge area. Make sure all the drainage fittings are clear and free of debris and plugs are removed. Store the engine in an upright position to promote adequate drainage of water.

### Avoid Loss

Remove any valuables or anything that can be easily removed from the boat such as electronics, lines, PFDs, fenders, cushions, etc. and store at home.

### Cover

When covering your boat it is best to use a frame of either aluminum or wood to keep the cover up. This allows air to circulate and discourages water from pooling on the cover.

#### NOTICE

**DO NOT USE a bimini top in lieu of a cover.  
Damage and aging will occur while providing no protection for your boat.**

Vents along the entire length of the cover will allow condensation to escape. Placing a series of foam pads between the hull and cover will also aid in air circulation and reduce condensation.

To help keep your boat dry and mildew free, consider placing commercial odor and moisture absorbing products in the boat under the cover.

### Trailer Storage

Repeatedly immersing the trailer in water during boat launching can cause a variety of problems. Water seeping into the wheel hubs will cause the grease to emulsify and can prematurely corrode the bearings.

Check with the trailer manufacturer for scheduled maintenance of your trailer.

## Section 5 • Care & Maintenance

---

### Environment

Antifreeze and other winterizing fluids can be toxic to aquatic life and cause harmful effects to plant life.

Improper disposal of, or spillage of antifreeze and/or any winterization fluids can cause environmental problems when allowed to empty into waterways or on the ground. Furthermore, it is illegal, punishable at minimum by fines.

Used antifreeze or any winterization fluids, should not be disposed of into sanitary sewers or publicly owned treatment plants.

Persons who have any questions regarding recycling antifreeze or other toxic fluids should write or call their state's EPA office.

### Reinforcement Locations

Your boat has been manufactured with reinforcement in various locations throughout the deck.

In the event you wish to add equipment to your boat which requires you to penetrate the deck with fasteners, the diagram on the next page illustrates the size, location and type of the reinforcement available.

The chart on the next page provides a description of the material and recommended fasteners to secure your equipment.



### CAUTION


**DO NOT attempt to secure equipment in any location other than those that are illustrated.**

## Section 5 • Care & Maintenance

### Reinforcement Location Diagram

Wood Location

Fig. 5.11.1

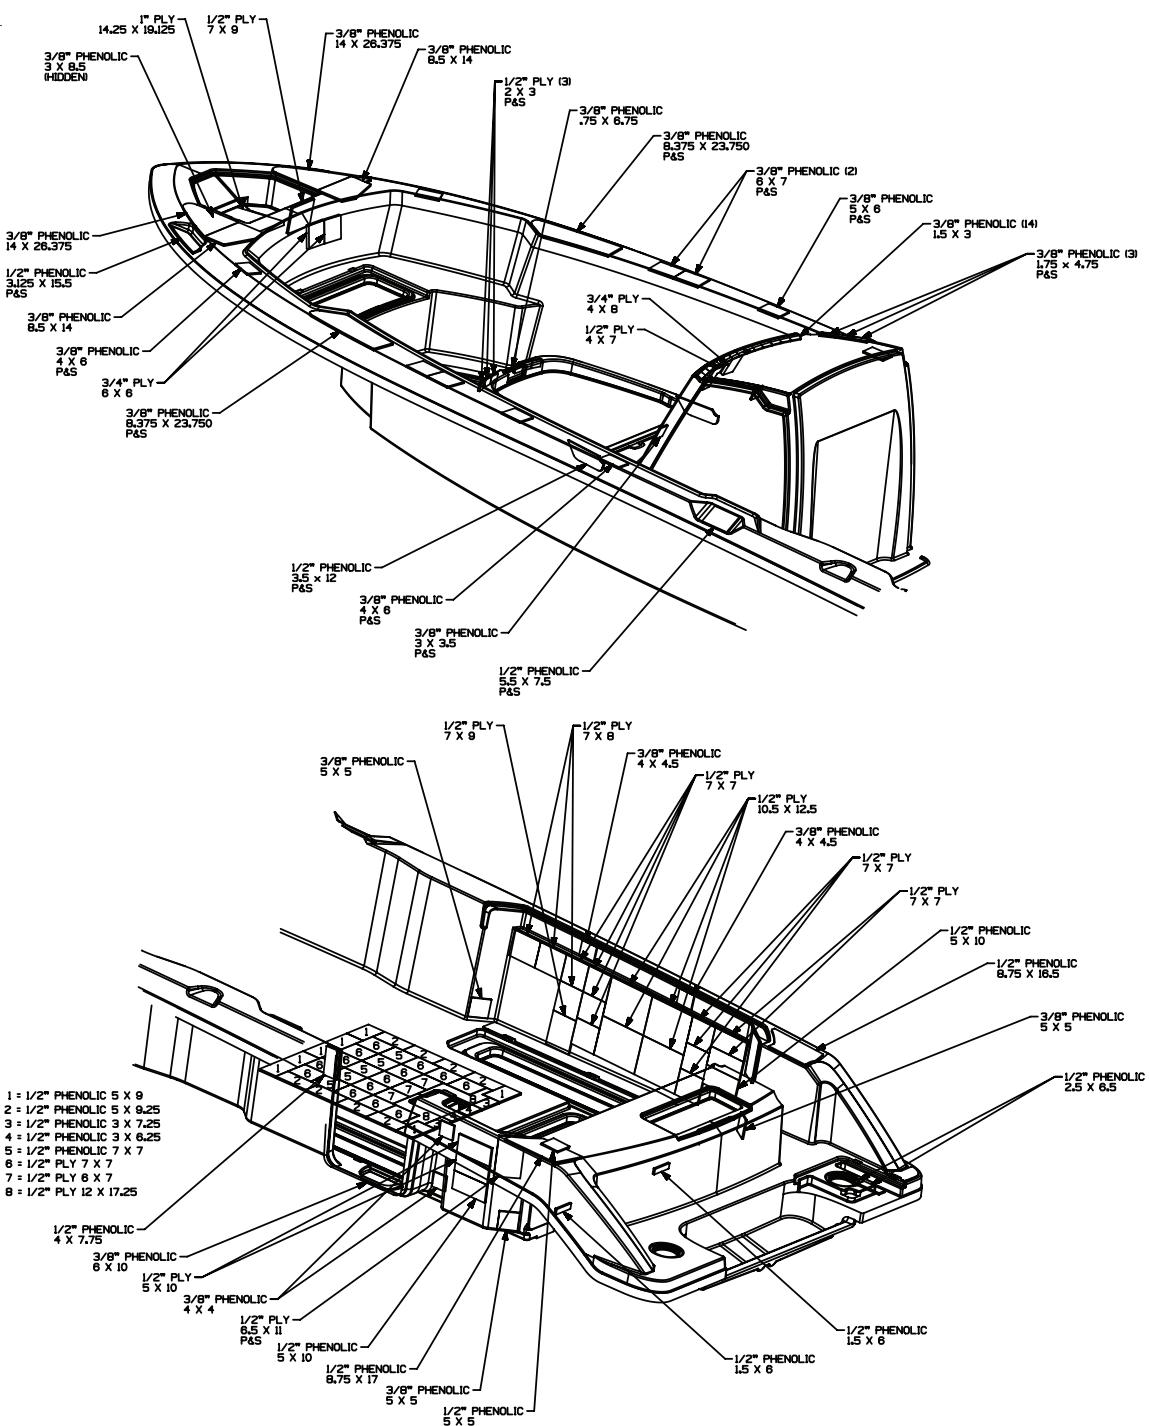

Reinforcement	Construction	Equipment weight	Fastener Type*
Plywood	Standard boatbuilding material	Light	Self-tapping screws
Trevira	Thick spunbound polyester fabric	Light	Sheet Metal screws
Sparalloy	High density plastic	Medium	Self-tapping screws
Phenolic**	Fiberglass reinforced composite board	Heavy	Drill & Tap

\* In all cases it is recommended to drill and countersink a pilot hole to prevent damage to the gelcoat surface.

\*\*Also known as Whaleboard

## Section 5 • Care & Maintenance

Fill out the log below after scheduled service or maintenance is performed.

MAINTENANCE LOG			
DATE	ENGINE HOURS	SERVICED BY	MAINTENANCE PERFORMED

**NOTES**

## **Section 5 • Care & Maintenance**

---

---

THIS PAGE INTENTIONALLY LEFT BLANK